


PCI600-KIT TELEMETRY RECEIVER CARD SET USER'S GUIDE

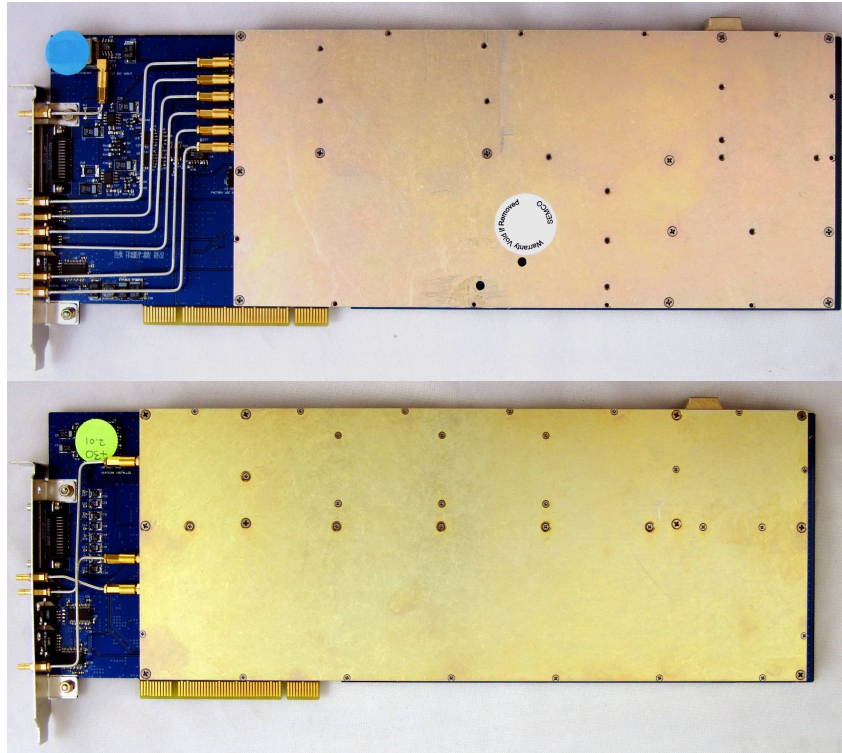

**Systems Engineering & Management Company
1430 Vantage Court
Vista, California 92081**

PROPRIETARY INFORMATION

THE INFORMATION CONTAINED IN THIS DOCUMENT CONSTITUTES PROPRIETARY INFORMATION AND INTELLECTUAL PROPERTY OF SYSTEMS ENGINEERING & MANAGEMENT COMPANY (SEMCO). ACCORDINGLY, THE USER(S) OF THIS INFORMATION AGREE(S) TO PROTECT THIS INFORMATION TO THE EXTENT THAT THEY WILL PREVENT OTHERS FROM COPYING AND/OR REPRODUCING THIS INFORMATION, EITHER IN WHOLE OR IN PART, OR MANUFACTURE, PRODUCE, SELL OR LEASE ANY PRODUCT COPIED FROM OR ESSENTIALLY REPRODUCED FROM THE INFORMATION CONTAINED IN THIS DOCUMENT WITHOUT THE EXPRESSED WRITTEN APPROVAL OF SYSTEMS ENGINEERING & MANAGEMENT COMPANY.

DISTRIBUTION STATEMENT

DISTRIBUTION OF THIS DOCUMENT IS AUTHORIZED TO U.S. GOVERNMENT AGENCIES, THEIR CONTRACTORS, AND INTERNATIONAL USERS WHO HAVE PURCHASED SEMCO'S TELEMETRY RECEIVER CARD SET UNDER U.S. EXPORT RULES AND REGULATIONS. THIS PUBLICATION IS PROVIDED AND REQUIRED SOLELY FOR THE USE AND OPERATION OF THESE TELEMETRY RECEIVER CARD SETS. OTHER REQUESTS FOR THIS DOCUMENT SHALL BE REFERRED DIRECTLY TO SYSTEMS ENGINEERING AND MANGEMENT COMPANY



SAFETY SUMMARY

System Weight and Handling Restrictions – There are no weight and handling restrictions associated with SEMCO's Telemetry Receiver Card Set.

Electrical – SEMCO's Telemetry Receiver Card Set is designed for installation and operation in both commercial and industrial PC chassis, and use the standard PC power supply voltages supplied on the PCI backplane. Use standard and accepted safety practices with respect to operating commercial electrical equipment at all times to avoid the risk of personal injury or death.

EMI/EMC – SEMCO's Telemetry Receiver Card Set complies with all FCC and CE regulations regarding electromagnetic interference and compatibility. There are no personnel hazards or safety issues with respect to EMI/EMC when operating this card set.

Exposures to Radio Frequency (RF) Signals – SEMCO's Telemetry Receiver Card Set is designed to receive RF signals from 1415 MHz to 2485 MHz at levels of +10 dBm to threshold. These signal levels are well below the minimum safe exposure levels prescribed by both U.S. and International standards.

LIST OF EFFECTIVE PAGES

Page	Change	Date	Page	Change	Date
All	A2073-001	09/01/2009	All	A2073-007	01/01/2012
All	A2073-002	02/01/2010	All	A2073-008	07/01/2013
All	A2073-003	03/01/2010	All	A20173-009	01/01/2014
All	A2073-004	10/01/2010	All	A20173-010	07/01/2014
All	A2073-005	04/01/2012	All	A20173-011	07/01/2015
All	A2073-006	07/01/2012			

Note:

The latest revision levels of all released software (RCMS Local and Remote) are available on SEMCO's website (www.semco.com) and can be downloaded, installed and used on all of SEMCO's installed Telemetry Receiver Card Sets, regardless of receiver S/N. Instructions for downloading and installing this software are on the website as well as in this User's Manual.

TABLE OF CONTENTS

<u>SECTION</u>	<u>TITLE</u>	<u>PAGE</u>
1	INTRODUCTION	1
1.1	Scope	1
1.2	Purpose and Description	1
2	TELEMETRY RECEIVER CARD SET DESCRIPTION AND SPECIFICATIONS	2
2.1	Description of Features and performance	2
2.2	Telemetry Receiver Card Set Specifications	3
3	TELEMETRY RECEIVER CARD SET HARDWARE INSTALLATION	5
3.1	Telemetry Receiver Card Set I/O	5
3.1.1	Card Set Installation Procedure	6
4	TELEMETRY RECEIVER CARD SET SOFTWARE INSTALLATION	8
4.1.1	Software Overview	8
4.1.2	RCMS Program Installation and Boot Procedures	8
4.1.2.1	Downloading and Installing the RCMS Program from the SEMCO Website	8
4.1.3	System Shutdown	9
5	HARDWARE I/O AND SOFTWARE CONTROLS	10
5.1	Hardware Telemetry I/O and Operation	10
5.1.1	Baseband Video Outputs	10
5.2	RCMS Network Program Description	11
5.2.1	Local Network Options	12
5.2.1.1	Local “Connection Settings”	12
5.2.1.1.1	RCMS Remote Application Ranking Criteria	13
5.2.1.1.2	RCMS Remote Application “Connection Permissions Criteria	14
5.2.1.2	Remote Lockout	15
5.2.1.3	Current Connections	15
5.2.1.4	“Event Log” Feature	15
5.2.2	Remote Network Options	17
5.2.2.1	Current “Receiver List”	18
5.2.2.2	Load New “Receiver List”	19
5.2.2.3	Issue Connection Requests to All	19
5.2.2.4	Close All Connections	19
5.2.2.5	Event Log	19
5.2.2.6	Reconnect Timer	21
5.2.2.7	Set Default “Receiver Lists”	21
5.2.3	Remote Group Presets	23
5.2.4	Remote Windows Feature	23
5.2.5	Remote Help Feature	23

TABLE OF CONTENTS (continued)

<u>SECTION</u>	<u>TITLE</u>	<u>PAGE</u>
6	TELEMETRY RECEIVER OPERATION	24
6.1	RF Control Sub-Panel	24
6.1.1	10 MHz Reference	26
6.2	IF/AGC/AFC Control	28
6.3	DEMODO/BASEBAND Control	33
6.3.1	Demodulator Sub-Menu and Settings	35
6.3.1.1	Demodulator Settings and Features	36
6.3.1.1.1	Auto Demodulator Settings	41
6.3.1.1.2	Advanced Demodulator Settings	42
6.3.1.1.3	Bit Synchronizer De-randomizer Feature	44
6.3.1.1.4	Additional Demod Tool Bar Features	45
6.3.2	Demodulation Set-Up Examples	46
6.3.2.1	FM Demodulation	46
6.3.2.2	PM/BPSK Demodulation	47
6.3.2.3	QPSK Demodulation	48
6.3.2.4	AQPSK Demodulation	48
6.3.2.5	UQPSK Demodulation	49
6.3.2.6	AUQPSK Demodulation	49
6.3.2.7	Tier 0 Trellis FM Demodulation	50
6.3.2.8	Tier I SOQPSK-TG Demodulation	50
6.3.2.9	Tier II Multi-h CPM Demodulation	51
6.3.2.10	PM/PSK Sub-Carrier Demodulation	51
6.4	AM and AGC Control Sub-Panel	52
6.5	RCMS GUI Toolbar Functions and Features	52
6.5.1	Presets	54
6.5.1.1	Saving a Preset	54
6.5.1.2	Loading a Preset	55
6.5.1.3	One-Touch Mission Presets	56
6.5.2	Channel Slaving	57
6.5.3	Naming Options	58
6.5.4	System Configuration Window	59
6.5.5	Serial Port Programming	59
6.5.6	Status View Display	59
6.5.7	Help Feature	59

ILLUSTRATIONS

<u>FIGURE</u>	<u>TITLE</u>	<u>PAGE</u>
1-1	PCI600-KIT Telemetry Receiver Card Set	1
3-1	Telemetry Receiver Card Set	5
3-2	A1 PCT603P RF Tuner Connectors	6
3-3	A2 PCR616SDP IF Receiver & Demodulator Connectors	6
3-4	Receiver Card Set Interconnect Diagram	7

ILLUSTRATIONS (continued)

<u>FIGURE</u>	<u>TITLE</u>	<u>PAGE</u>
4-1	RCMS GUI Auto-Boot and Main Menu Display	9
5-1	RCMS Network Software Control and Display Windows	12
5-2	RCMS Local Application Network Connections Menu	13
5-3	RCMS Local Application "Remote Lockout" Feature	15
5-4	RCMS Local Application "Current Connections" Feature	16
5-5	RCMS Local Application "Event Log" Feature	16
5-6	RCMS Remote Network Options	17
5-7	Current "Receiver List"	18
5-8	Load New "Receiver List"	19
5-9	Issue Connection Requests to All	20
5-10	Close All Connections	20
5-11	RCMS Remote Event Log	21
5-12	Reconnect Timer	22
5-13	Set Default "Receiver Lists"	22
5-14	Group Presets	23
6-1	RF Control Panel	24
6-2	Relative Signal Strength Feature	25
6-3	Antenna Signal Strength Feature	26
6-4	Frequency Bands Readout Feature	27
6-5	10 MHz Reference Selection	27
6-6	IFBW Selection	28
6-7	AGC Time Constant Selection	29
6-8	AFC Manual and Auto Selection Feature	30
6-9	Disabling Receiver Front End Attenuators in AGC Freeze Mode	31
6-10	AGC Freeze Feature	31
6-11	AGC Zero Feature	32
6-12	Auto-Cal Static Attenuation Feature	33
6-13	DEMODO/BASEBAND Control	34
6-14	Demodulator Control Panels	36
6-15	Demodulator Mode Selection	36
6-16	Data Rate Entry	37
6-17	Data and Clock Polarity Settings	37
6-18	AC-DC Coupled Output Selection	38
6-19	Analog and Digital Output Selection	38
6-20	Video Outputs "Quick Look" Feature	39
6-21	Analog, Digital and Custom Video Output Selection	40
6-22	OK and Cancel Function	41
6-23	Auto Settings Feature	42
6-24	Advanced Settings Feature	43
6-25	Bit Synchronizer De-randomizer Feature	44
6-26	Demodulator Debug Feature	45
6-27	Demodulator Configuration Information	45
6-28	FM Demodulation Low Data Rate Set-Up	46
6-29	NTSC Video Demodulation Set-Up	47

ILLUSTRATIONS (continued)

<u>FIGURE</u>	<u>TITLE</u>	<u>PAGE</u>
6-30	PM/BPSK Demodulation	47
6-31	QPSK Demodulation	48
6-32	AQPSK Demodulation	48
6-33	UQPSK Demodulation	49
6-34	AUQPSK Demodulation	49
6-35	Tier 0 Trellis FM Demodulation	50
6-36	Tier I SOQPSK-TG Demodulation	50
6-37	Tier II Multi-h CPM Demodulation	51
6-38	PM/PSK Sub-Carrier Demodulation	51
6-39	AM and AGC Controls and Settings	52
6-40	Local and Remote Toolbar Selections	52
6-41	Presets Drop-Down Menu	54
6-42	Save Presets Directory	55
6-43	Load Presets Directory	55
6-44	One-Touch Presets Configuration Selection	56
6-45	One-Touch Presets Windows Display Selection	57
6-46	Channel Slaving Selection	58
6-47	Naming Options Feature	58
6-48	Status View Display	59

TABLES

<u>TABLE</u>	<u>TITLE</u>	<u>PAGE</u>
2-1	Telemetry Card Set Specifications	4
3-1	Cable Harness Set Description	5
3-2	Telemetry Receiver Card Set Input & Output Connectors	7
5-1	Basic System I/O	10
5-2	PCR616SDP IF Receiver Demodulator Features and Performance	10
5-3	Baseband Video Outputs (Factory Default Settings)	11
6-1	Demodulator Modes and Features	35
6-2	Baseband Video Outputs (Factory Default Settings)	39

1 - INTRODUCTION

1.1 Scope

This User's Guide addresses the installation and operation of SEMCO's Telemetry Receiver Card Set for telemetry and antenna tracking functions related to aircraft, missiles and weapon systems.

1.2 Purpose and Description

This User's Guide provides detailed information to allow for installation and operation of the PCI600-KIT Telemetry Receiver Card Set (Figure 1-1). This Guide addresses all Telemetry Receiver Card Sets produced by SEMCO after the date of this document. This Guide can also be used as reference material for earlier production Telemetry Card Sets, even though these earlier configurations do not have all of the latest features available with the latest Telemetry Card Set configuration.


Section 2, Telemetry Card Set Description and Specifications describes and lists the standard and optional hardware features of SEMCO's Telemetry Receiver Card Sets, provides an overview of features and performance and includes the Telemetry Card Set specifications.

Section 3, Telemetry Receiver Card Set Hardware Installation describes system hardware I/O interface and provides hardware installation instructions.


Section 4, Telemetry Receiver Card Set Software Installation describes the initial installation and boot process for the RCMS program software.

Section 5, Hardware I/O and Software Controls describes system hardware I/O interface and provides instructions for setting up both local and remote (networked) telemetry receiver operation and control.

Section 6, Telemetry Receiver Operation provides instructions for telemetry receiver operations, including set-up and status monitoring of all receiver operating features and parameters.

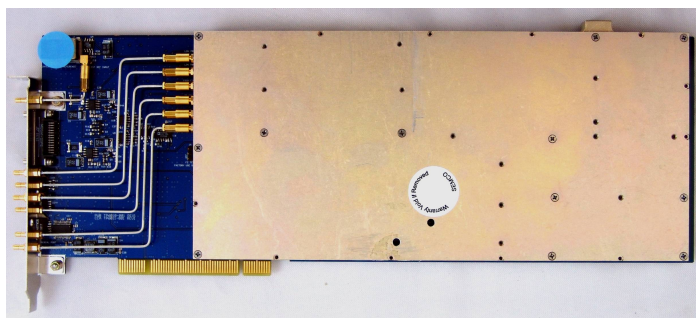

PCT603P RF Tuner

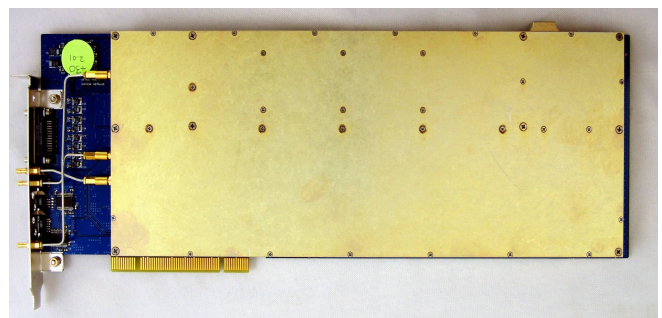

PCR616SDP IF Receiver & Demodulator CCA

Figure 1-1
PCI600-KIT Telemetry Receiver Card Set

2 – TELEMETRY RECEIVER CARD SET DESCRIPTION AND SPECIFICATIONS

2.1 Overview

The Telemetry Receiver Card Set previously depicted in Figure 1-1 functions as a PC-based, single-channel, multi-purpose telemetry receiver designed for use by space, aircraft and missile test ranges and correlating activities requiring the reception and processing of a wide variety of telemetry and video signals. The card set consists of two circuit card assemblies (CCAs) installed and integrated into a rack-mount, industrial IBM PC chassis. These CCAs consist of a PCT603P RF Tuner and a PCR616SDP IF Receiver & Multi-mode Demodulator.

The Telemetry Receiver Card Set provides for superior performance and flexibility over traditional 19" rack-mounted receivers. Coupled with the functional control inherent in its PC design, the Remote Control and Monitor Software (RCMS) program that is provided with the card set provides complete control of all receiver system functions, both locally and remotely. The system software provides for a display that depicts both the actual and relative RF signal strength (RSSI) of the received signal, as well as status and control of all system receiver functions.

Each baseline receiver card set (2 CCAs) provides single or multi-band RF Tuning, a wide range of selectable SAW and FIR IF bandwidths, multiple demodulation outputs, multi-mode demodulation formats, an embedded bit synchronizer with analog and digital bit outputs, a wide range of selectable baseband video FIR filters, linear 70 MHz outputs and multiple AM/AGC outputs for antenna tracking and other user-specified applications.

An overview of the Telemetry Card Set features and performance is summarized as follows:

RF Tuner Bands - The receiver card set provides single or multi-band coverage in 1415-1585 MHz, 1650-1850 MHz and 2185-2485 MHz frequency bands. Tuning resolution across all frequency bands is 100 kHz.

Legacy Demodulation Formats – The telemetry receiver card set provides for PCM/FM, NTSC and PAL video, PM, BPSK, QPSK, O/SQPSK and A/UQPSK demodulation capability.

IRIG 106-13 Demodulation Formats - The telemetry receiver card set offers the user unprecedented performance capabilities with respect to digital demodulation that is compliant with IRIG 106-13 Tier 0, Tier I and Tier II requirements. Tier 0 capabilities include 2nd Generation Multi-Symbol (Trellis) PCM/FM demodulators with modulation indexing. This demodulation capability provides for up to a 3.5 dB improvement over traditional single symbol demodulators, with little or no BER degradation caused by up to +/-15% deviation in the transmitted signal. Tier I demodulation capabilities includes SOQPSK-TG, with demonstrated improvement over single symbol demodulators of greater than 2 dB. This Tier I demodulator is also capable of satisfactorily demodulating FQPSK. Tier II demodulation capabilities also includes Multi-h CPM demodulation, with card set phase noise contribution less than or equal to the stringent Tier II phase noise specification.

Tracking and Data Reception - Unlike traditional telemetry receivers with distributive AGC design, the receiver card set can function as both a tracking receiver and a data receiver without compromising either function. The AM is derived independent of the AGC, thereby allowing this unique feature. AGC time constants do not need to be selected to achieve optimum antenna tracking and data reception. A fixed AGC time constant is provided for optimum antenna tracking, thus allowing selection of a very fast, AGC time constant for optimum data reception.

AFC - Manual Frequency Control and AFC features provide for a 50 Hz resolution over +/- 150 kHz at the second LO. An AFC Loop Stress feature monitors and displays the AFC offset caused by transmitter drift and/or Doppler frequency shift in the RF input.

Frequency Accuracy - Frequency accuracy is +/-2 ppm using the internal 10 MHz source, or as provided by an external 10 MHz source.

With an extremely linear dynamic range of -10 dBm to threshold, the system's AGC design provides for excellent adjacent channel rejection, IF rejection, and image rejection. Spurious signal response is below 60 dB, system Noise Figure is less than 8 dB and safe input power exceeds +10 dBm.

IF Bandwidth Filter Design - The receiver's 16 baseline IF bandwidth filters (300 kHz to 30 MHz) employ saw filter design technology for optimum shape factor and unwanted signal rejection. In addition, there are 32 user selectable IF FIR filters from 3 kHz to 30 MHz plus an Auto-Set feature that calculates and sets IF FIR filters values based on data rate.

Multi-Mode Analog and Digital Demodulation Data Rates – With all demodulator options installed, the receiver card set provides for:

- FM and PCM/FM from 10 kbps to 23 Mbps
- PM from 2 kbps to 20 Mbps
- BPSK from 10 kbps to 20 Mbps
- QPSK, SQPSK, OQPSK and A/UQPSK from 30 kbps to 40 Mbps
- PM/PSK Sub-Carrier from 2 kbps to 20 Mbps
- GMSK from 10 kbps to 40 Mbps
- DSOQPSK from 10 kbps to 40 Mbps
- NTSC/PAL with switched de-emphasis
- Coherent AM for enhanced tracking
- FM/FM Carrier from 5 kHz to 12 MHz
- FM Sub-Carrier from 100 bps to 256 kbps.

IRIG 106-13 demodulator modes include:

- Tier 0 Trellis FM from 20 kbps to 20 Mbps
- Tier I SOQPSK-TG from 5 kbps to 40 Mbps
- Tier II Multi-h CPM from 100 kbps to 37 Mbps.

Baseband Video Filters – The receiver card set provides 32 user-selectable FIR filters from 3 kHz to 20 MHz plus an Auto-Set feature that calculates and sets baseband video FIR filters values based on data rate.

2.2 Telemetry Receiver Card Set Specifications

Table 2-1 provides detailed telemetry Receiver Card Set Specifications.

Table 2-1
Telemetry Card Set Specifications

RF PERFORMANCE

Frequency Bands (MHz)	1415-1585, 1650-1850, 2185-2485 or Continuous Tuning from 1415 to 2485
Operating System	SEMCO RCMS Network Software; Windows 7; Remote Control via Ethernet
Dynamic Range	-10 dBm to Threshold
Noise Figure	< 8 dB (nominal)
Phase Noise	IRIG 106-13 Tier II Phase Mask Compliant
Maximum Safe Input Level	+10 dBm
VSWR	< 2:1
Adjacent Channel Interference	40 dB minimum/1dB BER Degradation with presence of Interfering Signal at 2x selected IFBW
Image/Spurious Signal Rejection	>60 dB
IF Rejection	70 dB minimum; 80 dB typical
Tuner LO Tuning Resolution	100 kHz (adjustable in 1 kHz increments in AFC Manual Mode)
Internal Stability	< +/-1.0 ppm
IF Filters	0.2 to 40 MHz plus Auto- IFBW auto-set as a function of data rate
Pre-d (70 MHz) Outputs	Linear -10 +/- 2 dBm; 2 Outputs
AFC	+/- 250 kHz; AFC loop stress output (VDC correlating to offset)
AGC Time Constants	5 Software Selectable (0.1, 1, 10, 100 and 1000 mS)
AGC Output	2 scalable (+/-10, 20 & 50 dB/V) outputs; selectable high/low impedance
AGC Modes	Manual, Freeze and Zero
AM Output	Normal & Inverted user adjustable output; nominal 2 Vp-p into 50/75 ohms @ 50% amplitude modulation
AM Frequency Response	0 to 30 kHz
AM Low Pass Filters	User-selectable 30 Hz to 30 kHz Bessel Filters

DEMOD PERFORMANCE

Baseband (Video) Outputs	4 User-Configurable Analog and Digital Outputs per Channel; Analog 0 to > 4 Vp-p into 75 ohms; TTL Clock and Data; User-selectable AC-DC Coupling and output impedance
Baseband Video Filters	32 selectable from 3 kHz to 20 MHz plus Auto-Set per IRIG as a function of data rate
Acquisition Tracking	+/- 1 kHz to +/- 250 kHz; Selectable Loop Speeds (1, 5, 20 and 100 Hz); max +/- 500 kHz (SOQPSK-TG)
Demodulator Operating Modes	PCM/FM, NTSC with switched de-emphasis; PM, BPSK, QPSK, SQPSK, OQPSK, A/UQPSK, GMSK; IRIG 106-13 Trellis FM, SOQPSK/FQPSK and Multi-h CPM; DSOQPSK, PM/PSK Subcarrier, FM Sub-carrier, CCSDS Spread Spectrum & Coherent AM
Minimum/Maximum Data Rates	PCM/FM - 10 kbps to 23 Mbps; PM/PSK - 2kbps to 20 Mbps; S/O/QPSK - 30 kbps to 40 Mbps; Trellis FM - 20 kbps to 23 Mbps; SOQPSK-TG/FQPSK - 5 kbps to 40 Mbps; Multi-h CPM - 100 kbps to 37 Mbps; FM/FM Carrier 5 kHz to 12 MHz; FM Sub-Carrier 100 bps to 256 kbps
Embedded Bit Sync	NRZ-L/S/M/Bi-Phase; de-randomizer; manual/auto select loop bandwidths; user-selectable clock and data polarity

POWER AND PHYSICAL

Input Voltage	+12 and +5 VDC PCI bus power provided by host computer
Power Consumption	< 50 watts
Size	2 full size PCI cards for installation in host PC card slots

ENVIRONMENTAL

Temperature	+10 to +50 ^o C operating; -20 to +70 ^o C storage
Relative Humidity	15 to 90% non-condensing


3 – TELEMETRY RECEIVER CARD SET HARDWARE INSTALLATION

3.1 Telemetry Receiver Card Set I/O

The receiver card set I/O consists of a cable harness set that provides for all required signal input and output connections, as well as PC communications and control. The cable harness set is depicted in Figure 3-1 and is pre-wired with connectors for installation into a customer-supplied computer chassis. Table 3-1 describes each cable and cable harness.

**Table 3-1
Cable Harness Set Description**

CABLE/HARNESS	DESCRIPTION
RF Tuner Output Cable Harness	The RF Tuner CCA BNC outputs are labeled AGC A, AGC B, AFC and AM, and connects to A1J1 of the PCT603 RF Tuner CCA
IF Receiver & Demodulator Output Cable Harness	The IF Receiver/Demodulator BNC output are labeled Video 0 thru 3 and connects to A2J1 of the PCR616SD IF Receiver CCA
70 MHz IF Output, Ext. 10 MHz Input and RF Input Cables	The 70 MHz output and Ext. 10 MHz input cables are SSMB-to-BNC and connect to A1P7 and A1P8. The RF input cable is SSMB-to-SMA and connects to A1P1
CCA Interconnect Cables	SSMB jumper cables that interconnect between A1 RF Tuner and A2 IF Receiver/Demodulator (extra jumper cable shown)
Communications Cable	4-pin cable that connects to the center connector (J3) located on the edge card connector bracket of the PCT603 RF Tuner and the PCR616SD Receiver/Demodulator CCAs
COM Port Cable	The COM Port Cable connects to the host computer chassis COM Port and J4 of either the RF Tuner CCA or IF Receiver CCA

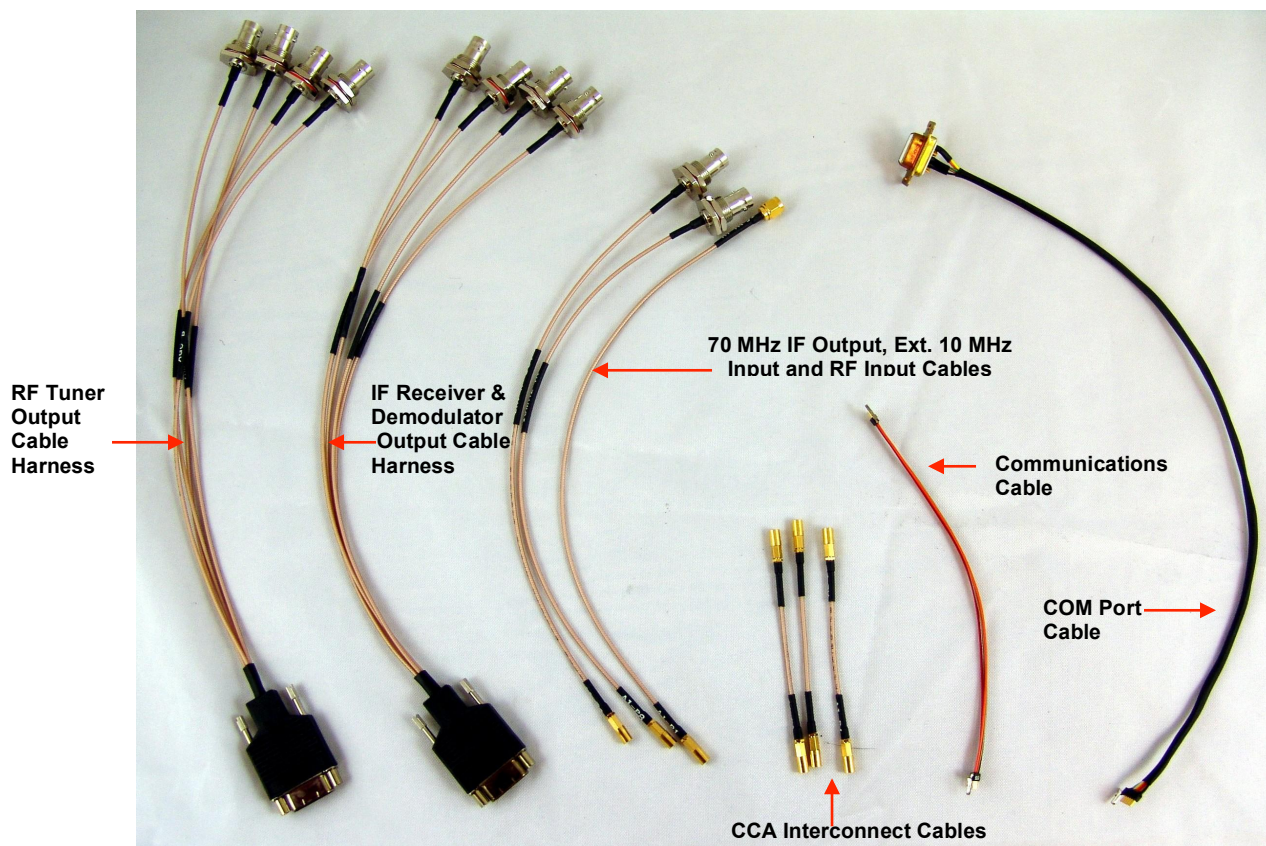

**Figure 3-1
Telemetry Receiver Card Set Cable Harness**

Figures 3-2 and 3-3 show the edge card bracket of each card and the reference designators for connecting the cable harness set. Figure 3-4 shows the interconnect diagram for the Receiver Card Set.

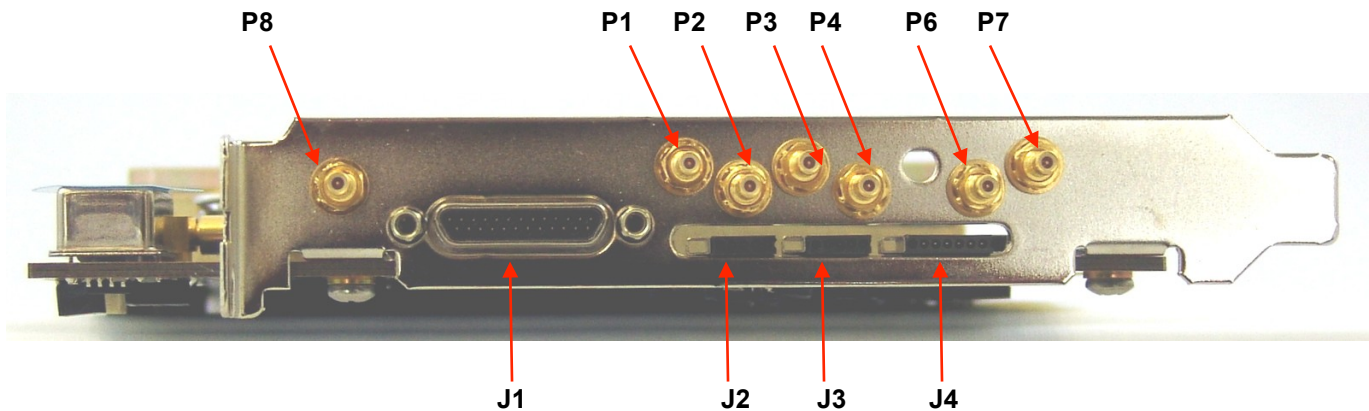


Figure 3-2
A1 PCT603P RF Tuner Connectors

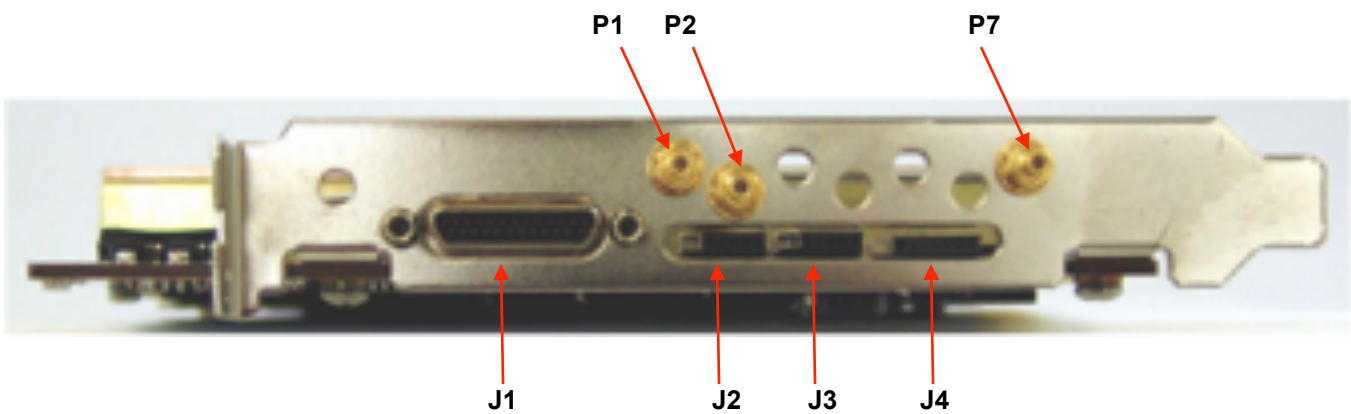


Figure 3-3
A2 PCR616SDP IF Receiver & Demodulator Connectors

3.1.1 Card Set Installation Procedure

- A. Locate 2 adjacent PCI slots in the host PC chassis and install both A1 and A2 in these slots.
- B. Referring to Figure 3-4, install all cable harnesses and cables as follows:
 - 1) Install and secure the RF Tuner Cable Harness to A1J1 and the IF Receiver and Demodulator Cable harness to A1J1 and A2J1, respectively.
 - 2) Install the Communications cable to A1J3 and A2J3.
 - 3) Install the small SSMB jumper cables, as labeled from A1P3 to A2P1 and A2P2 to A1P4.
 - 4) Install the Linear IF SSMB-to-BNC cable to A1P7, and the RF Input SSMB-to-SMA cable to A1P1.
 - 5) Install the SSMB-to-BNC cable to A1P8 if planning to use an external 10 MHz reference.
 - 6) Install the COM Port cable from A2J4 (or A1J4) to an available COM port in the host PC chassis.

A2 - PCR616SDP IF Receiver & Demodulator

A1 - PCT603 RF Tuner

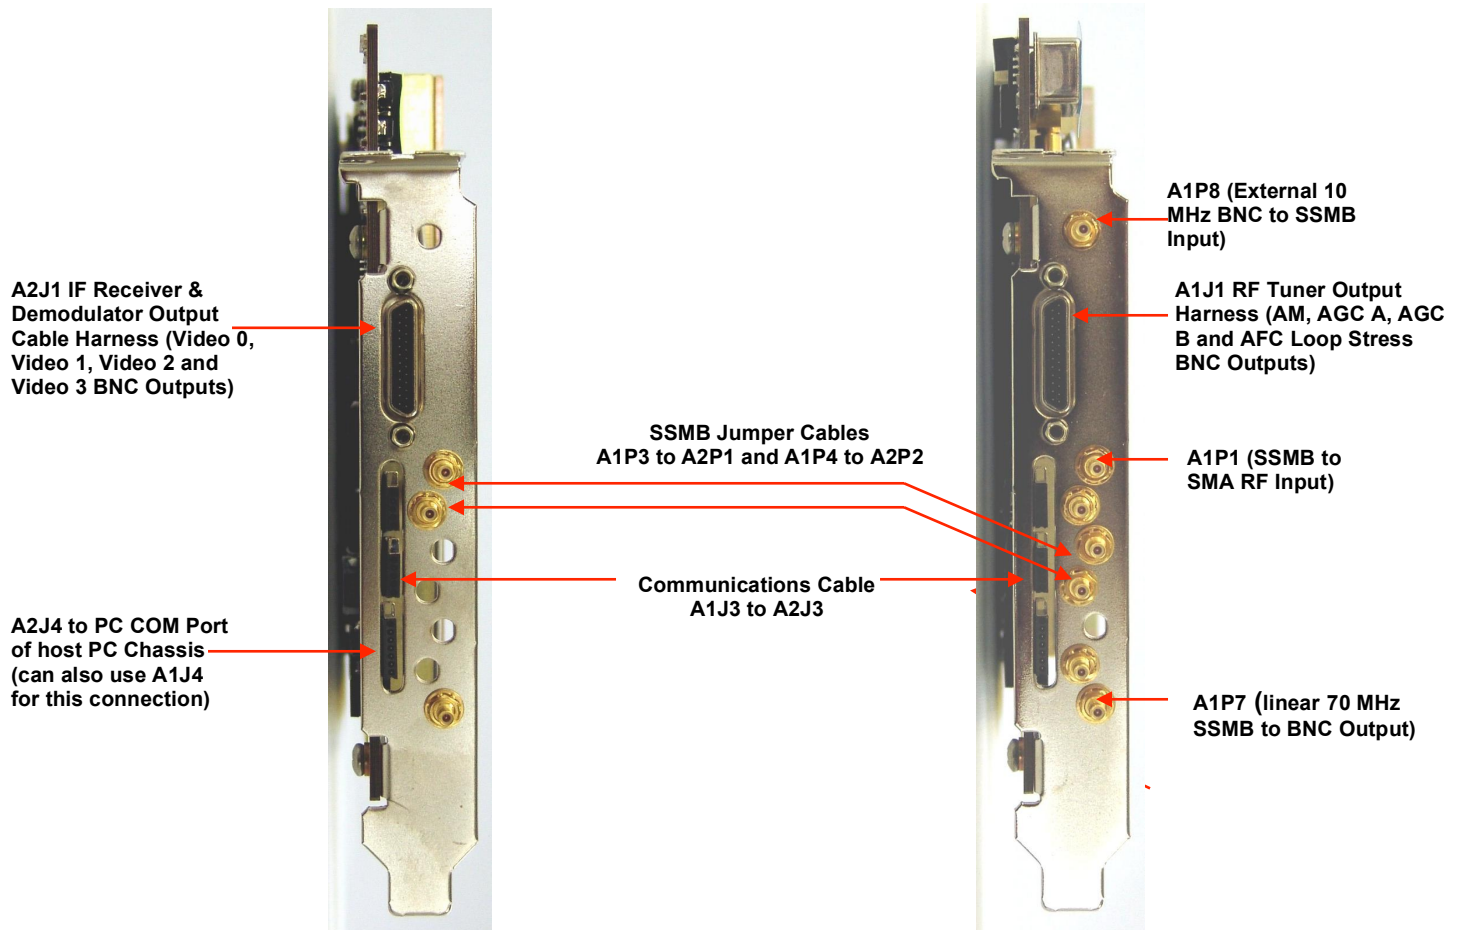


Figure 3-4
Receiver Card Set Interconnect Diagram

Table 3-2 provides a summary of the hardware I/O and reference designators once the hardware installation is complete.

Table 3-2
Telemetry Receiver Card Set Input & Output Connectors

Ref.	Label	Description
A1P1	RF IN	RF (Antenna) input signal
A2J1	Video 0	Baseband signal output into 75 ohms
A2J1	Video 1	Baseband signal output into 75 ohms
A2J1	Video 2	Baseband signal output into 75 ohms
A2J1	Video 3	Baseband signal output into 75 ohms
A1J1	AFC Loop	0-5 VDC approximating +/-150 kHz AFC loop stress
A1J1	AGC A	+/- Scalable AGC (10, 20 or 50 dB/V)
A1J1	AGC B	+/- Scalable AGC (10, 20 or 50 dB/V)
A1J1	AM OUT	2V p-p into 50 ohms at 50% modulation
A1P6	LIN IF OUT	Filtered linear 70 MHz output
A1J8	External 10 MHz In	Provides for the optional use of an external 10 MHz reference



4 – TELEMETRY RECEIVER CARD SET SOFTWARE INSTALLATION

4.1.1 Software Overview

The Telemetry Receiver Card Set uses SEMCO's Receiver Control and Monitor Software (RCMS) program. The RCMS provides a Graphical User Interface (GUI) for all user-required control and status monitoring of receiver operation. The RCMS runs on the Windows 7 Operating System, and is designed for local operation using a display and keyboard/mouse, and/or remotely controlled via Ethernet.

This document addresses both the RCMS Local software and RCMS Remote software. All receiver functions and set-up controls are by keyboard entry and/or by pull-down menu screens selected and controlled by a mouse/touchpad. System status is via display indicators (numerical readouts and bar graphs) on a PC display.

4.1.2 RCMS Program Installation and Boot Procedures

Once AC power is applied to the PC chassis and the Windows 7 OS boots up. Install the RCMS program provided with the Telemetry Receiver Card Set on a CD as follows:

Step 1 – If the PC being used has a previously installed RCMS program, and a new or updated RCMS program is to be installed, then click the GUI Desktop **"Start"**, **"Control Panel"**, **"Add or Delete Programs"** and uninstall the **"SEMCO RCMS"** or **"SEMCO CMD"** program on the PC.

Step 2 – Go to C:\Program Files\SEMCO and then delete all files within the program folder ("SEMCO RCMS Local" or "SEMCO RCMS Remote") on the PC, except for the .pdf User's Manual. Alternatively, copy the User's Manual to another hard drive location, delete the program folder and copy the PDF manual back into the program folder after the new RCMS program is installed in Step 3.

Step 3 – Install the RCMS program CD on the PC, execute the Setup.exe program file on the CD and follow the instructions appearing on the display Desktop.

Step 4 – If the receiver system does not have a CD drive (i.e., uses a solid state flash drive), then the RCMS program can be installed using a commercially-available USB-compatible external CD drive and one of the system's USB ports.

4.1.2.1 Downloading and Installing the RCMS Software from the SEMCO Website

Step 1 – Using a PC with Internet access, Go to the www.semco.com homepage and select **TECHNICAL** and then **PRODUCT SOFTWARE**. Select and download the software to the PC hard drive. Alternatively, download the software to a USB Flash Drive, if Flash Drives are authorized at the Telemetry Receiver Installation site.

Step 2 - Using an installed Read-Write CD drive or commercially-available USB-compatible external CD drive connected to one of the PC USB ports; write the downloaded software program(s) to a new CD. A USB Flash Drive can also be used if authorized at the Telemetry Receiver Installation site.

Step 3 – Follow A. Steps1 thru 4 above with the new CD.

Once the RCMS is successfully installed, Start the RCMS program by clicking on the Antenna icon in the **Start-Up Menu** or **Desktop**.

During the boot process, “**Obtaining System Settings...**” and a numerical countdown window is present as shown in Figure 4-1. The first countdown is the commands being sent to the installed cards to determine what system configuration is installed (i.e., what cards are installed). The second countdown is all the installed receiver settings. The program automatically retrieves and displays all receiver settings from the last receiver set-up.

When complete, the RCMS “boot” process displays a “**Main Menu**” as shown in Figure 4-1.

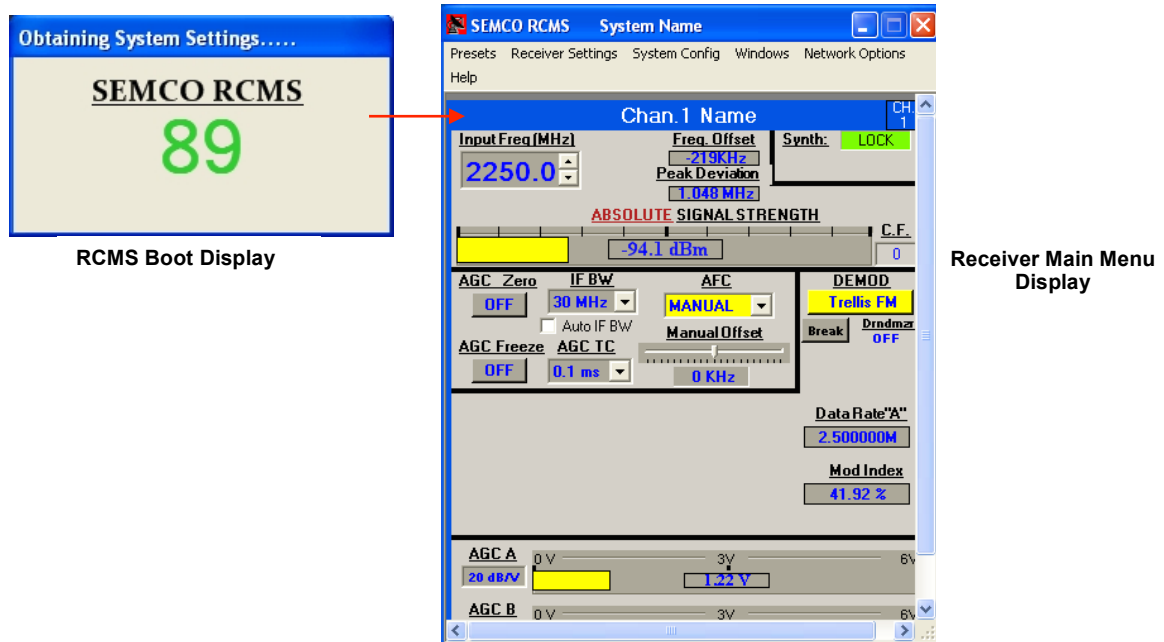


Figure 4-1
RCMS GUI Auto-Boot and Main Menu Display

4.1.3 System Shutdown

System shutdown is accomplished via the standard windows shutdown through the Windows Operating System

Step 1 - Press Start on the GUI Desktop

Step 2 - Select Shutdown

Step 3 - Select Shutdown from the resulting pop-up window to commit to shutting down the system.

5 – HARDWARE I/O AND SOFTWARE CONTROLS

5.1 Hardware Telemetry I/O and Operation

When installed in a PC chassis, SEMCO's Telemetry Receiver Card Set Systems have the I/O interface as summarized in Table 5-1.

Table 5-1
Basic System I/O

Inputs and Outputs	Description
RF Signal Inputs	1 "SMA" connector input per installed channel
Baseband Video Outputs	4 BNC outputs per channel, labeled "Video 0", "Video 1", "Video 2" and "Video 3"
AGC Outputs	2 BNC outputs per channel labeled "AGC A" and "AGC B"
AM Output	1 BNC output per channel
Linear 70 MHz IF Output	1 BNC output per channel
Loop Stress Output	1 BNC output per channel, consisting of a 0.0 to 5.0 VDC output that correlates to +/- 150 kHz RF Center Frequency offset
10 MHz Reference	An internal 10 MHz reference + a BNC connector providing for an external 10 MHz input

5.1.1 Baseband Video Outputs

Table 5-2 summarizes the latest PCR616SDP IF Receiver/Demodulator that is provided with the Receiver Card Set.

Table 5-2
PCR616SDP IF Receiver/Demodulator CCA Features and Performance

P/N	Baseline Features and Performance
PCR616SDP	<p>16 SAW IFBW's (300 kHz to 30 MHz) + IF FIR filters as a function of data rate; PCM/FM, NTSC with switched de-emphasis; PM, BPSK, QPSK, SQPSK, OQPSK, A/UQPSK, GMSK; IRIG 106-13 Trellis FM, SOQPSK/FQPSK and Multi-h CPM; DSOQPSK, PM/PSK Subcarrier, FM Sub-carrier, CCSDS Spread Spectrum & Coherent AM; automatic baseband FIR filters as a function of data rate; Embedded Bit Synchronizer with De-randomizer; 4 Baseband combination analog/digital outputs and AC-DC coupled outputs</p> <p>Note: This CCA is listed as PCR616N in the GUI System Configuration Display in order to differentiate between earlier PCR616 configurations and features</p>

Table 5-3 lists the factory default baseband video outputs. The user also has the ability to configure Table 5-3 outputs as desired via the RCMS Demod Control Panel. This "Custom" output feature is described in detail in Section 6 of this User's Guide.

Table 5-3
Baseband Video Outputs (Factory Default Settings)

Demodulation Format	Video 0	Video 1	Video 2	Video 3
ANALOG OUTPUT MODE				
FM and Trellis FM	Data	Data	Data	Data
SOQPSK-TG	Data	Data	Data	Data
Multi-h CPM	Data	Data	Data	Data
PM	Data	Data	Data	Data
BPSK	Data	Data	Data	Data
A/U\QPSK	I-Data	Q-Data	I-Data	Q-Data
PM/PSK Sub-Carrier	Data	Data	Data	Data
ANALOG OUTPUT MODE				
NTSC Video	Video	Video	Video	Video
DIGITAL OUTPUT MODE				
FM and Trellis FM	Data	Clock	Data	Clock
SOQPSK-TG	Data	Clock	Data	Clock
Multi-h CPM	Data	Clock	Data	Clock
PM	Data	Clock	Data	Clock
BPSK	Data	Clock	Data	Clock
A/U\QPSK	I-Data	I-Clock	Q-Data	Q-Clock
PM/PSK Sub-Carrier	Data	Clock	Data	Clock
MIXED OUTPUT MODE				
	ANALOG		DIGITAL	
FM and Trellis FM	Data	Data	Data	Clock
SOQPSK-TG	I-Data	Q-Data	Data	Clock
Multi-h CPM	Data	Data	Data	Clock
PM	Data	Data	Data	Clock
BPSK	Data	Data	Data	Clock
PM/PSK Sub-Carrier	Data	Data	Data	Clock

5.2 RCMS Network Program Description

The RCMS Network Program provides for Remote (networked) and Local system operation. Remote and Local applications allow for status monitoring and control of SEMCO receivers via both a remote PC and locally at the receiver PC itself. The RCMS Local application runs on the receiver PC and monitors and controls that specific local unit. The RCMS Remote application runs on any standard PC.


The RCMS Remote provides for remote status monitoring and control of one or more receivers running on the RCMS Local application, and located on the same network. The relationship between the RCMS Remote application and Local application is such that the RCMS Remote application is given a list of receiver IP addresses on its network and it then tries to connect to all of these individual IP addresses.

NOTE:


The following paragraphs describe and illustrate the RCMS remote application for SEMCO PC-based Dual Channel Receiver Combiner Systems. This remote application is also used with SEMCO's Telemetry Receiver Card Set, and all network procedures and features described herein apply equally to one or more installed Telemetry Receiver Card Sets.

The RCMS Local application is always listening for requests from any PC running the RCMS Remote application. Accordingly, a receiver (Local application) can have more than one RCMS Remote PC (Remote application) connected to it. Figure 5-1 depicts both the Local (receiver) and Remote (networked) PC display windows. One Dual Channel Receiver Combiner System is networked as depicted in Figure 5-1. A single Telemetry Receiver Channel (such as a Telemetry Receiver Card Set) is networked in the same manner, with the exception that only “Chan 1 Name” window will be displayed.

GREEN Antenna Icon Indicates system is networked

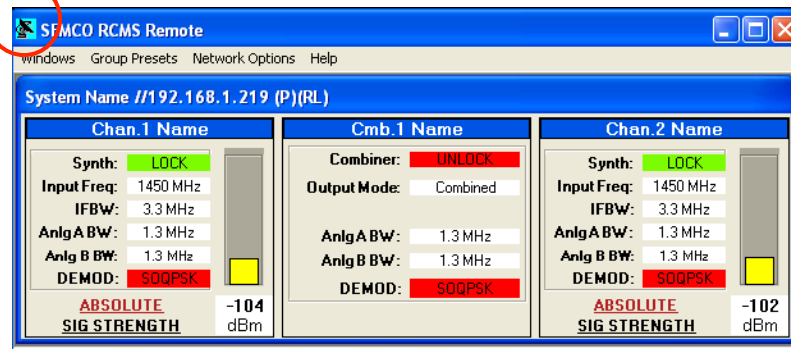

Remote PC Window

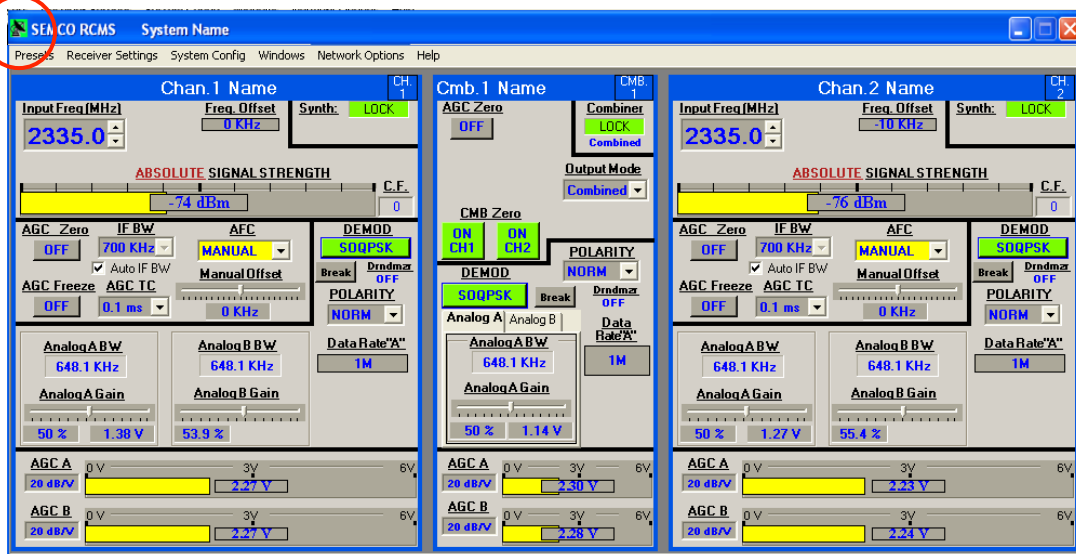

Local Receiver Window

Figure 5-1
RCMS Network Software Control and Display Windows

5.2.1 Local Network Options

Selecting “Network Options” on the Local (receiver) application GUI Toolbar allows the user to choose one of the following features:

- “Current Connections”
- “Event Log”
- “Connection Settings”
- “Remote Lockout”

Each of these features is described (in order of importance and use) in subsequent paragraphs.

5.2.1.1 Local “Connection Settings”

Figure 5-2 depicts the “Network Options” and “Connection Settings” menu on an individual system’s RCMS Local application.

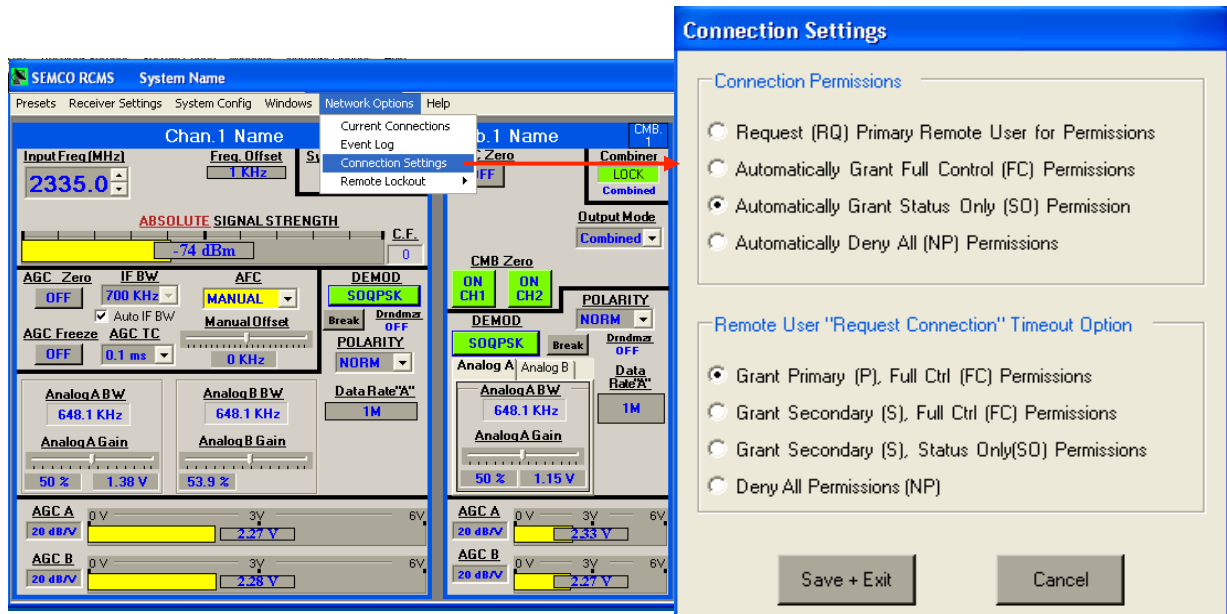


Figure 5-2
RCMS Local Application Network Connections Menu

Referring to Figure 5-2, when a PC running the RCMS Remote application makes a connection to a system running the RCMS Local application, the remote connection is given rank and permissions based on the system’s current Connection Settings.

- A. **Rank:**
- 1) Primary (P)
 - 2) Secondary (S)
- B. **Permissions:**
- 1) Full Control (FC)
 - 2) Status Only (SO)
 - 3) No Permissions (NP)
 - 4) Request Pending (RP)
 - 5) Remote Lockout (RL)

5.2.1.1.1 RCMS Remote Application Ranking Criteria

The rank a remote connection gets depends on the following criteria:

- A. **Primary (P)** – Primary (P) is given to a remote connection if, at the time of connection the receiver has no other current remote connections to any PC.
- B. **Secondary (S)** – Secondary (S) is given to a remote connection if, at the time of connection the receiver already has a Primary connection to another Remote PC.

5.2.1.1.2 RCMS Remote Application “Connection Permissions” Criteria

Referring again to Figure 5-2, remote connection permissions depend on the following criteria:

- A. **Full Control (FC)** – Full Control (FC) is always given to any Primary (P) rank remote connection. Full Control is also given to a Secondary (S) rank remote connection if the receiver’s Connection Settings are set to “Automatically Grant Full Control (FC) Permissions” or they are set to “Request (RQ) Primary Remote User for Permissions” and, in this latter case the user at the Primary (P) remote PC grants Full Control permissions. Full Control (FC) remote connections have the ability to monitor all receiver status displays as well as have full control over all the receiver’s controls and settings.
- B. **Status Only (SO)** – Status Only (SO) is given to any Secondary rank remote connection if the receiver’s Connection Settings are set to “Automatically Grant Status Only Permissions” or they are set to “Request (RQ) Primary Remote User for Permissions” and the user at the Primary remote PC grants Status Only permissions. The remote connection will only have the ability to monitor the receiver’s signal statuses, controls and settings. All controls and settings will be locked out.
- C. **No Permissions (NP)** – No Permissions (NP) is given to any Secondary (S) rank remote connection if the receiver’s Connection Settings are set to “Automatically Deny All (NP) Permissions” or they are set to “Request (RQ) Primary Remote User for Permissions” and the user at the Primary remote PC grants “No Permissions”. The remote connection will not be able to monitor or control any of the receiver’s statuses, controls or settings.
- D. **Request Pending (RP)** - Is given to any Secondary rank remote connection if the receiver’s Connection Settings are set to “Request (RQ) Primary Remote User for Permissions” and the user at the Primary remote PC has not yet responded to the request. The remote connection will not be able to monitor or control any of the receiver’s statuses, controls or settings until the user at the Primary remote PC responds to the request.
- E. **Remote User “Request Connection” Timeout Option** – Referring again to Figure 5-2, this feature sets what the receiver will do if its Connection Permissions are set to “(RQ) Request Primary Remote User for Permissions” and the Primary Remote User does not respond within 2 minutes to the new remote connection request. This feature allows another remote connection to be made when the Primary Remote User is not at his/her PC.

Note:

The Timeout Option is **only applicable** when the Connection Permission is set to “Request (RQ) Primary Remote User for Permissions”.

The following timeout connection permission options are possible:

- 1) “Grant Primary (P), Full Control (FC) Permissions”
- 2) “Grant Secondary (S), Full Control (FC) Permissions”
- 3) “Grant Secondary (S), Status Only (SO) Permissions”
- 4) “Deny All Permissions (NP)”

5.2.1.2 Remote Lockout

Figure 5-3 depicts the “Remote Lockout” feature.

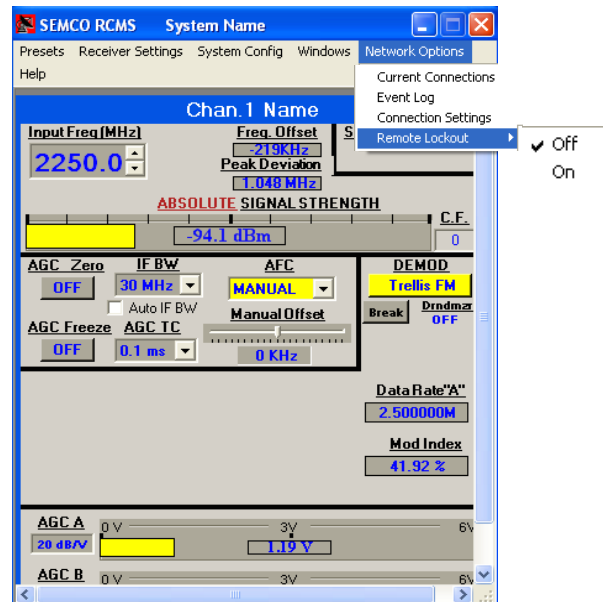


Figure 5-3
RCMS Local Application “Remote Lockout” Feature

The “Remote Lockout” feature allows the user at the actual receiver to prevent any remote connections to that receiver from being able to make changes to the receiver while the local user is at the receiver.

If the remote connections permissions before the Remote Lockout was turned on was Full Control (FC) or Status Only (SO), then when Remote Lockout is turned on the remote connection will only have the ability to monitor the receiver’s signal statuses, controls and settings.

If the remote connections permissions before the Remote Lockout was turned on was No Permissions (NP), then when Remote Lockout is turned on the remote connection will not be able to monitor or control any of the receiver’s statuses, controls or settings.

Once Remote Lockout is turned off at the receiver, then all remote connections to that receiver will return to their previously assigned permissions.

5.2.1.3 Current Connections

Figure 5-4 depicts the “Current Connections” selection. This feature allows the user at the Local (receiver) application to view and identify all Remote PC connections by their respective IP address.

5.2.1.4 “Event Log” Feature

Figure 5-5 depicts the “Event Log” feature, which allows the user at the Local (receiver) to status and keep track of all network-related events that affect remote and local control of an individual receiver.

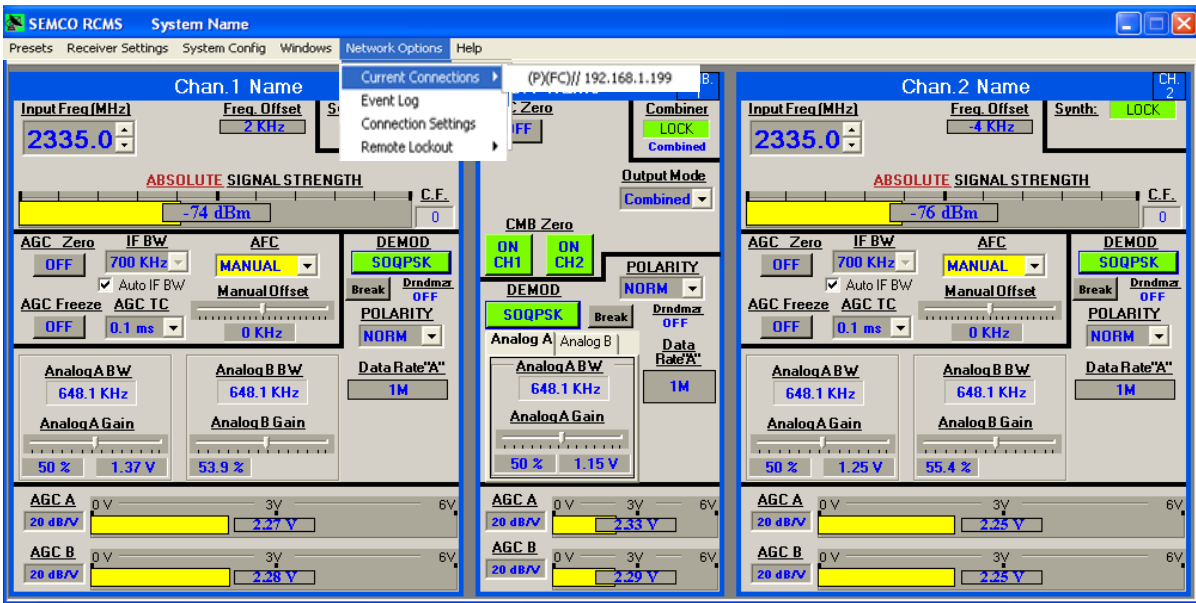


Figure 5-4
RCMS Local Application “Current Connections” Feature

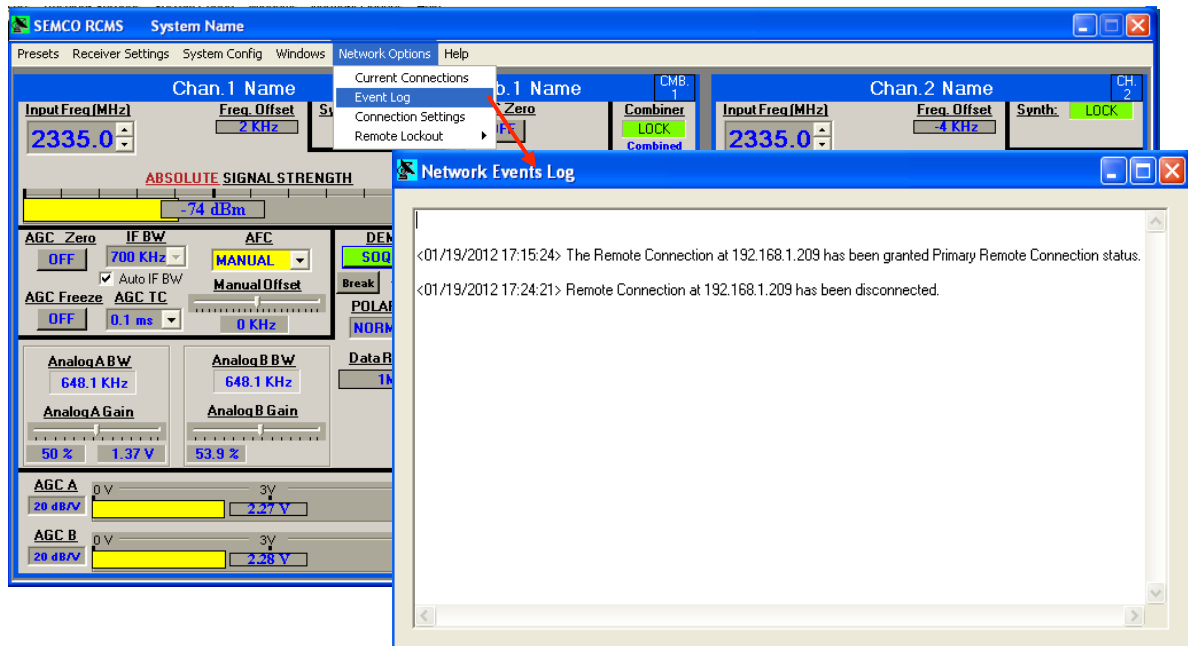


Figure 5-5
RCMS Local Application “Event Log” Feature

5.2.2 Remote Network Options

Figure 5-6 depicts the Network Options that are available from the GUI Tool Bar.

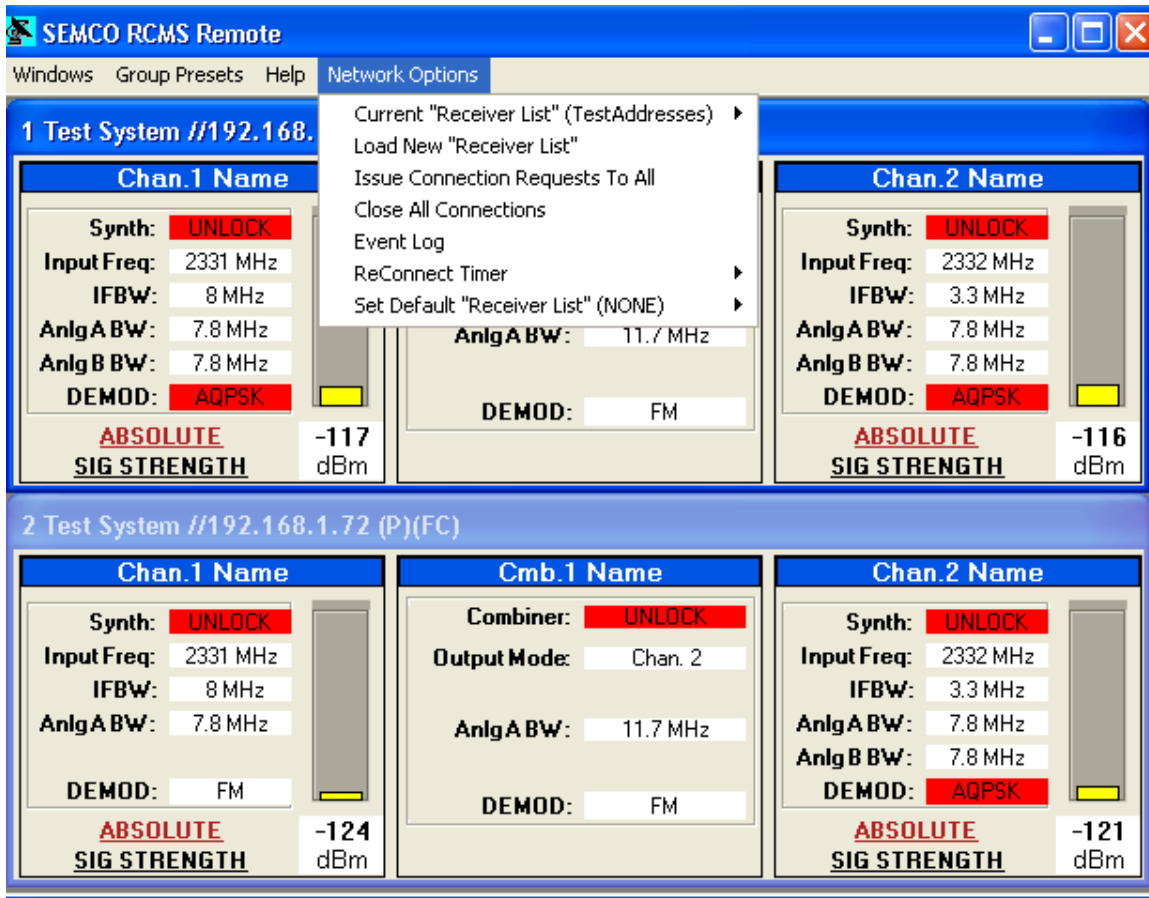


Figure 5-6
RCMS Remote Network Options

The following selection options are available:

- Current "Receiver List"
- Load New "Receiver List"
- Issue Connection Requests to All
- Close All Connections
- Event Log
- Reconnect Timer
- Set Default "Receiver Lists"

5.2.2.1 Current “Receiver List”

Figure 5-7 provides an example of a **Current “Receiver List”**. The currently loaded Receiver List* file name is shown in parenthesis (i.e., Test Addresses). Clicking on this file name provides another menu drop down with the list of IP addresses and their current connection status.

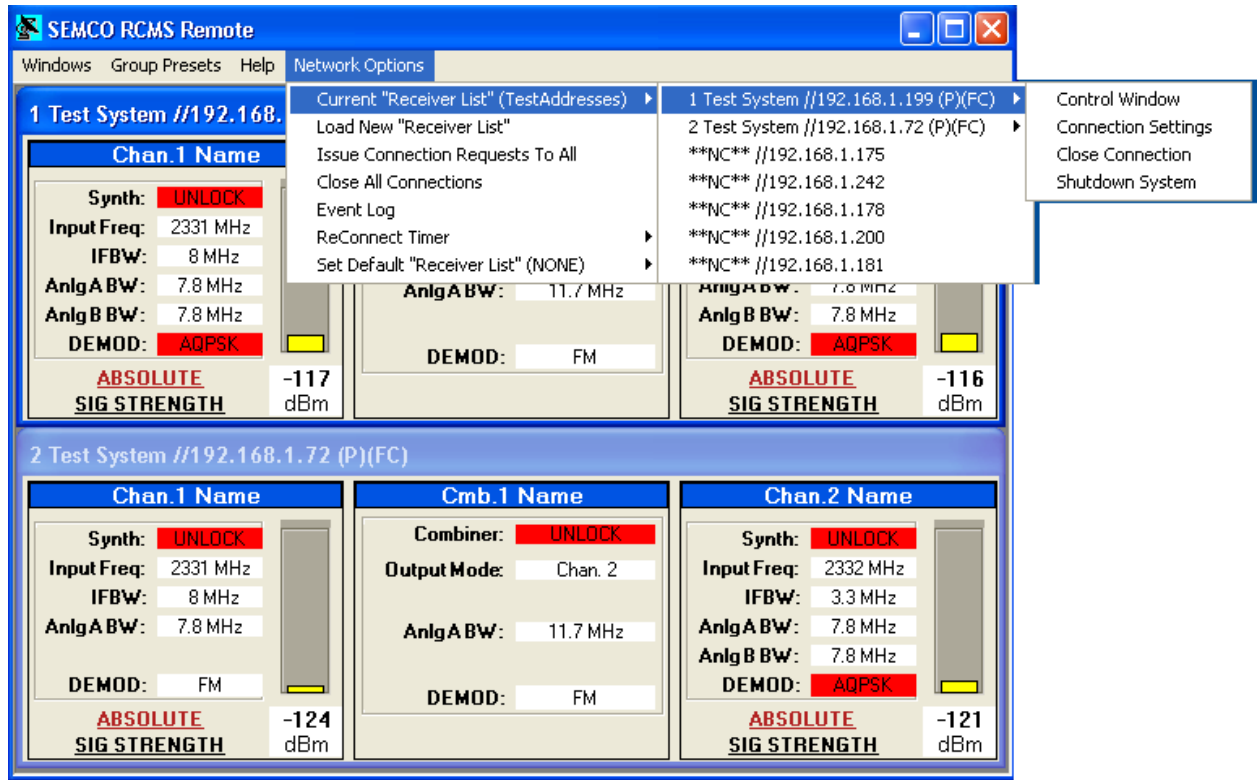


Figure 5-7
Current “Receiver List”

If the connection to an IP address is established, the system name is displayed next to the IP address along with the connections rank and permissions. Clicking on the IP address provides another menu drop down as shown with the following options:

- A. **Control Window** - Opens the control window for the receiver.
- B. **Connection Settings** - Opens the Connection Settings window for the receiver.
- C. **Close Connection** - Closes the connection to that receiver.
- D. **Shutdown System** - Shuts down the local receiver.

Any IP addresses that are not connected have an “**NC**” designation next to the IP address. Clicking on them will attempt an immediate connection to that receiver at that IP address.

Note:

The “Receiver List” is a specifically formatted text file with an extension of .ini. An example of this file is included in the RCMS Remote install directory (“ExampleAddressList.ini”). Any new “Receiver Lists” should follow this file.

5.2.2.2 Load New “Receiver List”

Figure 5-8 depicts the Load New “Receiver List” selection on the Remote PC Network Options pull-down menu. Clicking on this option opens up a dialog box that provides for choosing an *.ini file that contains a set of receiver IP addresses to load and attempt a remote connection. Referring to Figure 5-8, the receiver list selected is labeled “Test Addresses”.

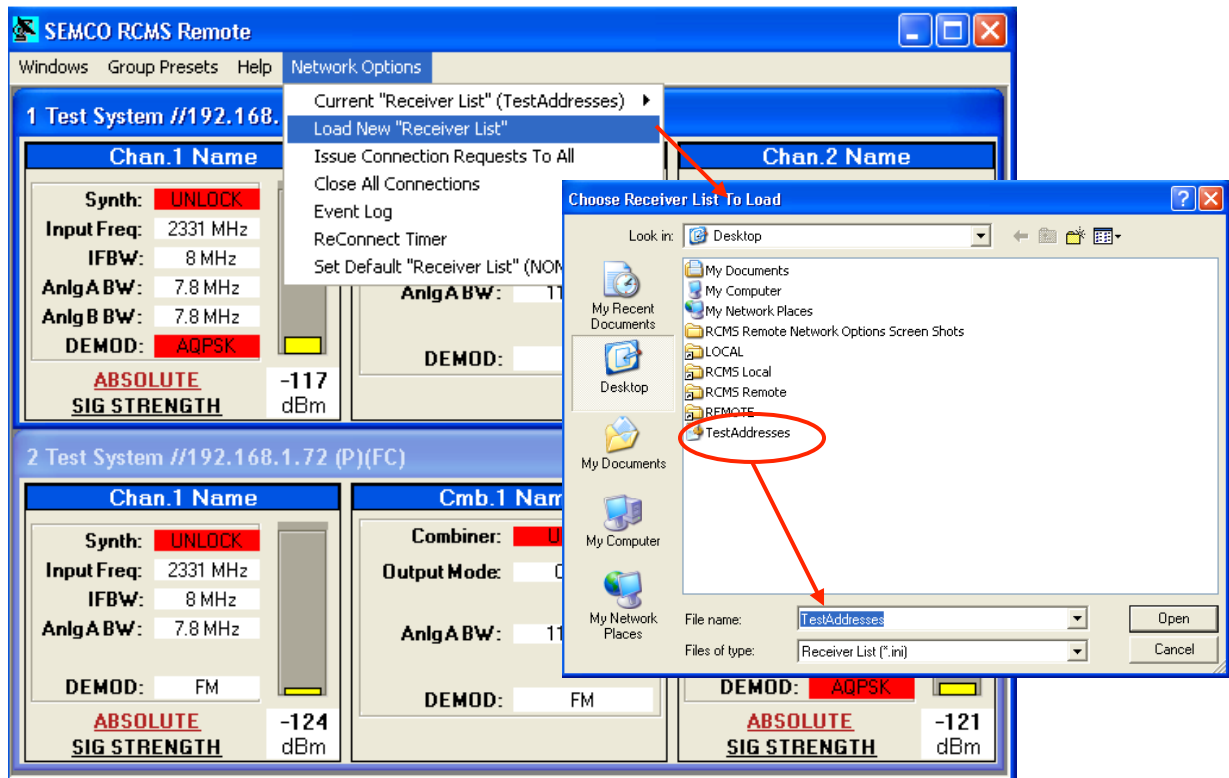


Figure 5-8
Load New “Receiver List”

5.2.2.3 Issue Connection Requests to All

Figure 5-9 depicts the “Issue Connection Requests to All” option. Selection of this feature will attempt an immediate connection to all receivers in the currently loaded receiver list that do not have connections already established.

5.2.2.4 Close All Connections

Figure 5-10 depicts the “Close All Connections” option. Selection of this feature closes all current remote connections.

5.2.2.5 Event Log

Figure 3-11 depicts the “Event Log” option. Selection of this feature opens a window that logs all network events that are taking place.

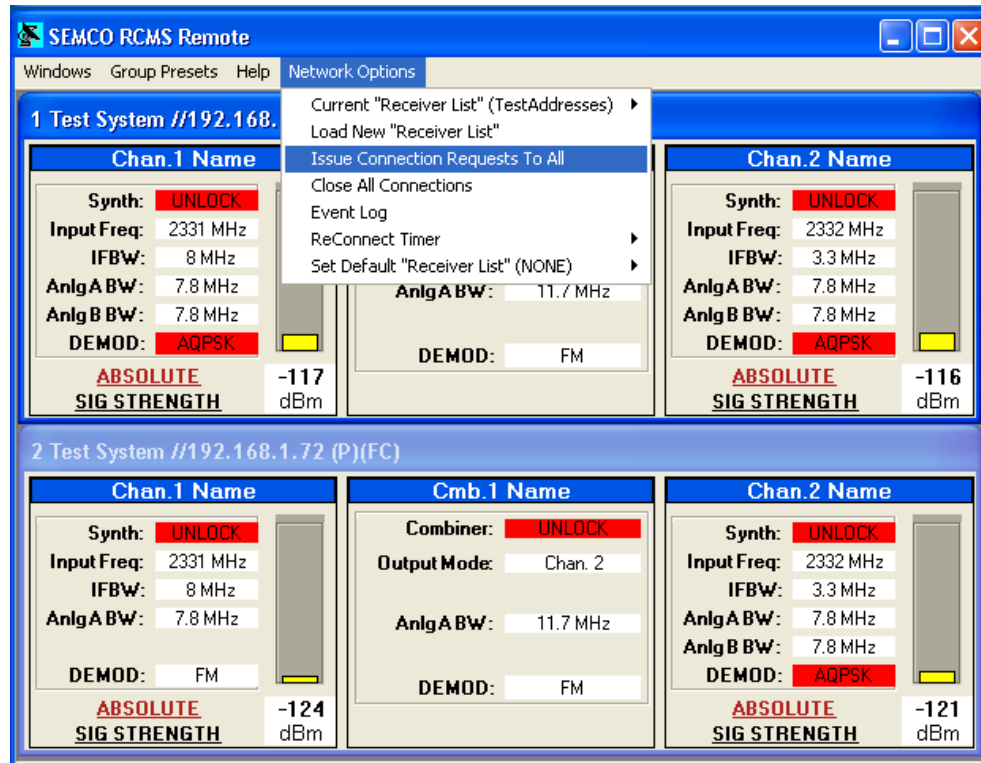


Figure 5-9
Issue Connection Requests to All

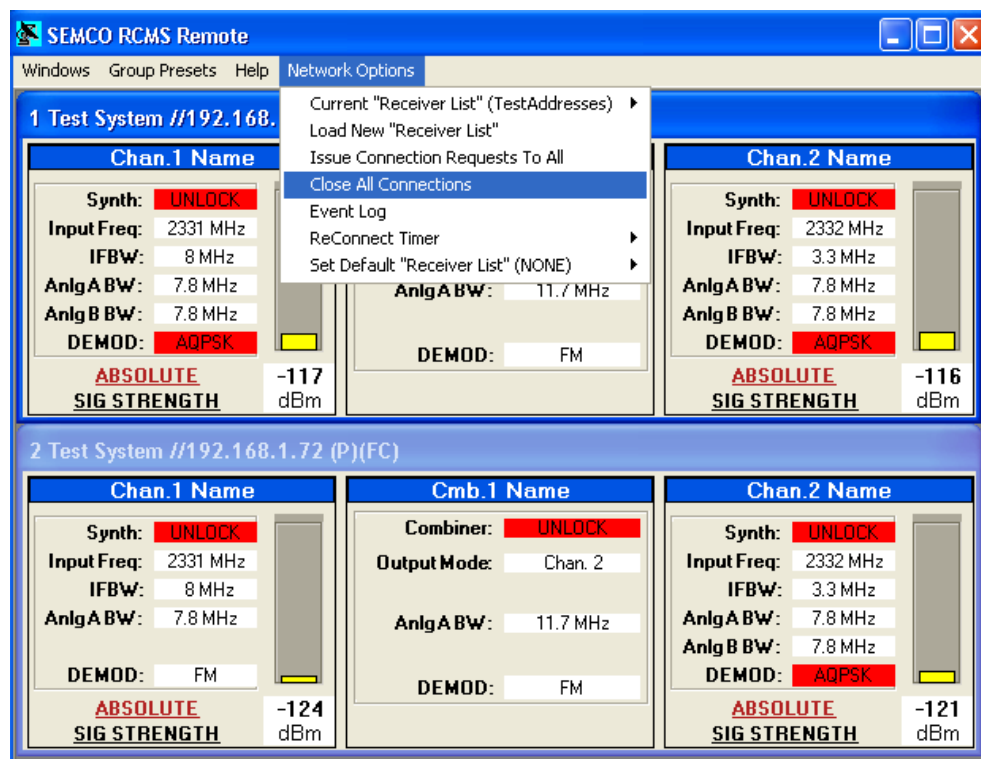


Figure 5-10
Close All Connections

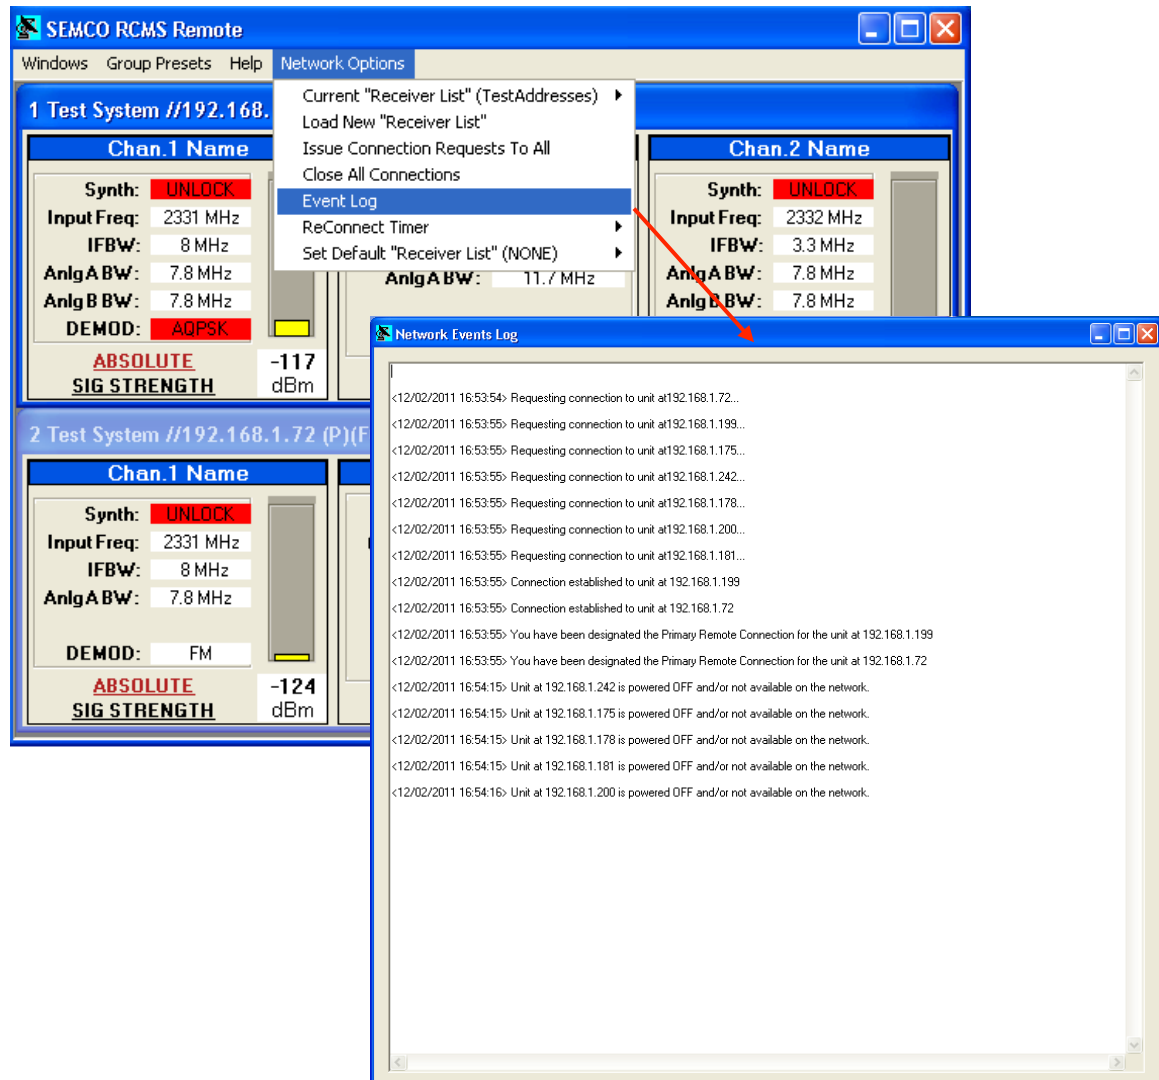


Figure 5-11
RCMS Remote Event Log

5.2.2.6 Reconnect Timer

Figure 5-12 depicts the “Reconnect Timer” option, which is selected to try and re-connect to any unconnected receivers in one minute intervals. This feature can be turned on and off using this menu option.

5.2.2.7 Set Default “Receiver Lists”

Figure 5-13 depicts the Set “Default Receiver Lists”. This option allows you to choose a default “Receiver List” to be loaded upon startup of the RCMS Remote application. It is initially set to “NONE”. Once the default Receiver List is named, this name will appear in parenthesis.

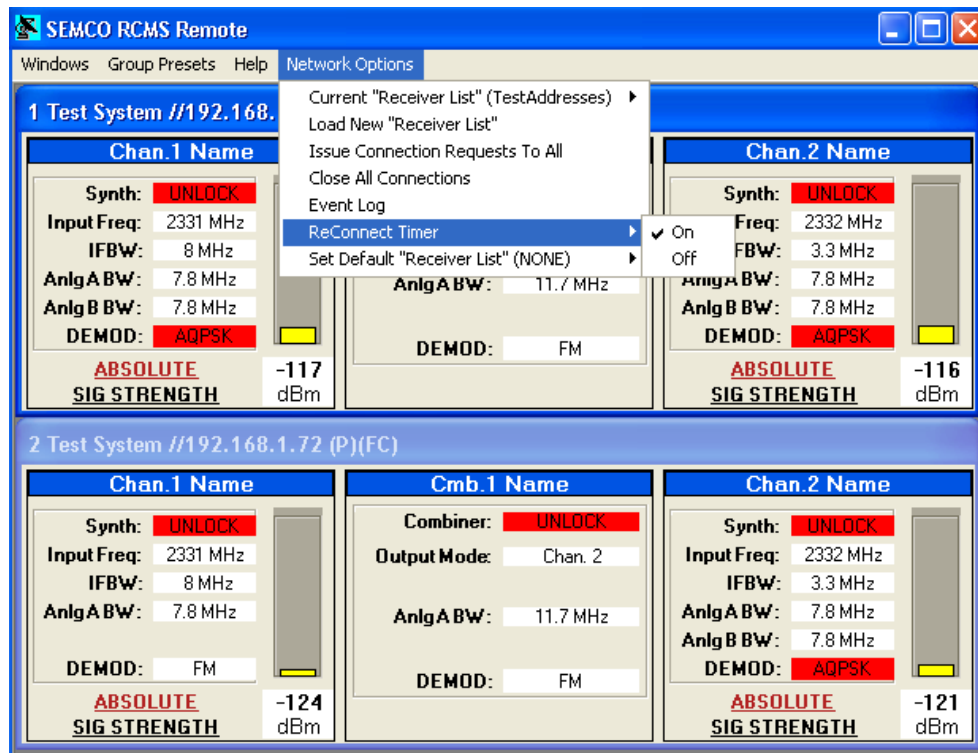


Figure 5-12
Reconnect Timer

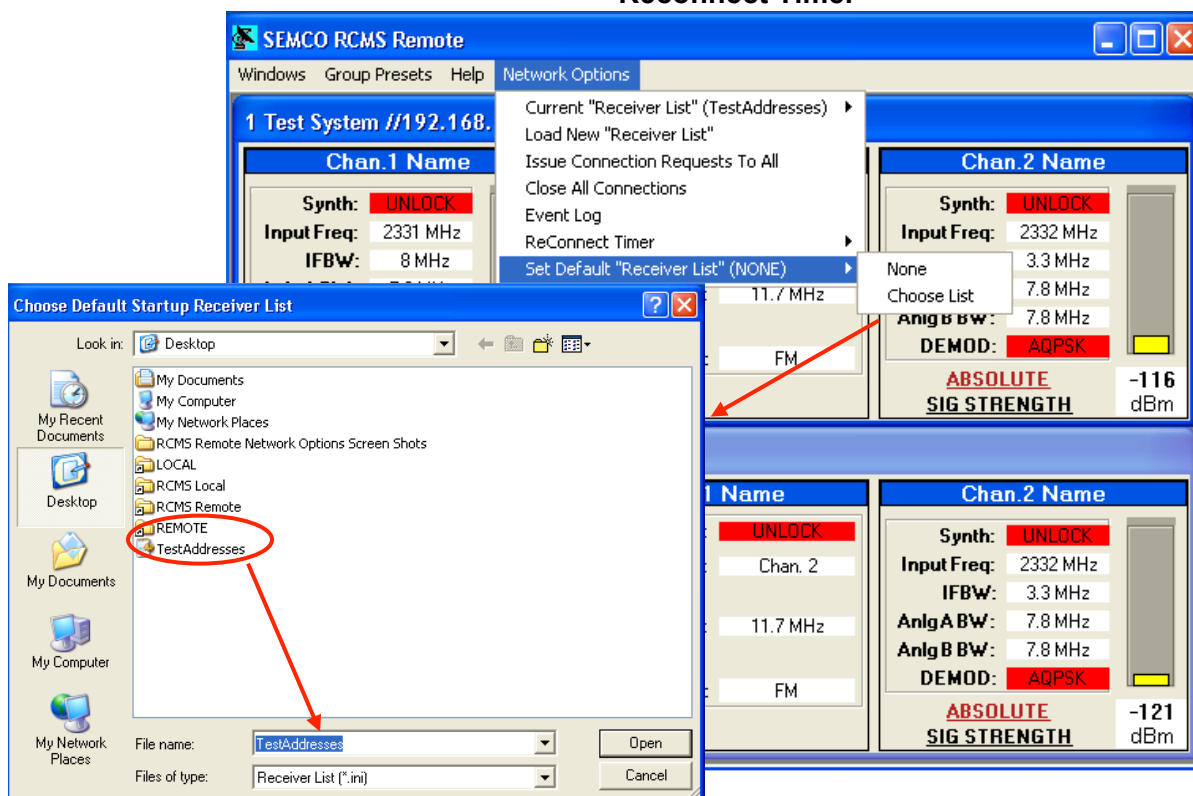


Figure 5-13
Set Default "Receiver Lists"

5.2.3 Remote Group Presets

Remote Group Presets save the settings of a chosen group of systems on the network. When loading a Group Preset, all the selected systems in that group are set to one or more “mission presets” presets that were created earlier on a local (receiver) system. As shown in Figure 5-14, the user clicks on “**Group Preset**” and then selects which system “saved presets” on the network will be part of a named “**Group Preset**” by checking the systems desired and then clicking on “**Save Group Presets File**”.

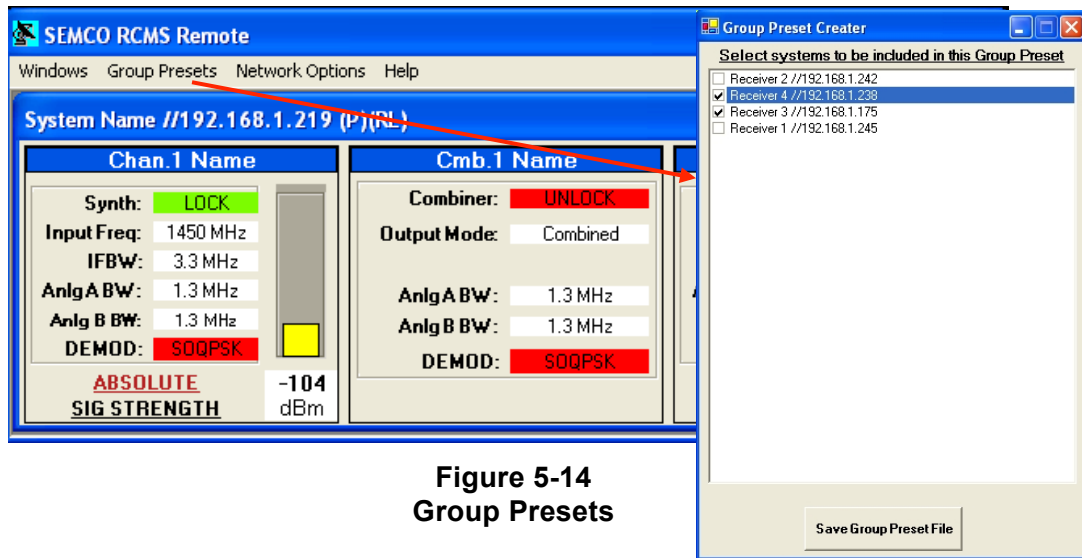


Figure 5-14
Group Presets

5.2.4 Remote Windows Feature

The Remote Windows feature provides the ability to arrange the Remote Status displays (horizontal, vertical and/or cascaded) in support of the display size desired at the Remote PC.

5.2.5 Remote Help Feature

The Remote Help feature provides information as to the installed revision level of the RCMS Remote Application software.

6 – TELEMETRY RECEIVER OPERATION

Telemetry Receiver operation consists of using the RCMS program to select various receiver parameters for optimum RF signal reception and recovery of baseband (video) information, as well as setting up an antenna tracking interface for Antenna Control Units (ACUs).


It is important to note that, once the receiver parameters are selected, the system begins receiving and processing the incoming signal and only needs the chassis power supply voltages to operate. This means that as long as the system is turned on, the system will continue to receive and process the incoming signal(s) even if PC communications is temporarily lost and the system needs to be restarted.

RCMS program GUI control panels and sub-panels are described in subsequent paragraphs.

6.1 RF Control Sub-Panel

Figure 6-1 depicts the RCMS GUI RF Control Sub-Panel. This control panel for each receiver channel is used to select Input Frequency (**Input Freq [MHz]**), and provide status (**Synth**) indicating whether or not the receiver channel is tuned to the incoming frequency of interest.

The **Synth** indicator is a **GREEN LOCK** light when the receiver channel is tuned to the frequency entered in the **Input Freq (MHz)** box, and is a **RED UNLOCKED** light when the receiver channel is not tuned. The **RED UNLOCKED** light indication after a valid frequency has been entered indicates a hardware malfunction in either the internal 10 MHz reference or the RF Tuner CCA.

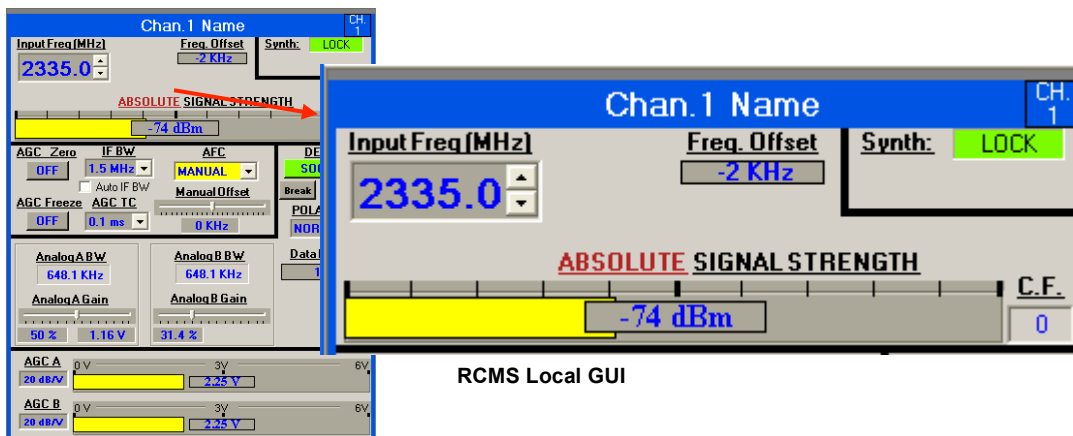

RCMS Local GUI

Figure 6-1
RF Control Panel

Freq. Offset and Peak Deviation – **Freq. Offset** provides a readout of any difference (Offset) between the transmitted frequency and the receiver's Input Frequency. The **Peak Deviation** readout indicates the transmitter peak deviation that is being detected by the receiver.

The **SYNTH** indicator is also used to determine health and status monitoring of the receiver channel, indicating a **RED NO COMM** when user control and status monitoring is not available or working. This indication normally means that there is a hardware or software malfunction in the communication link between the PC Operating System and the RC600A Graphical User Interface (GUI).

Input Freq. (MHz) – Referring again to the RCMS GUI RF control sub-panel, The RF Input Frequency can be either typed in, or selected by scrolling in 100 kHz increments using the up-down arrow (▲▼) icons located on the right of the frequency indicator box. The system will only accept valid frequencies of the particular frequency bands installed in the receiver. The entire frequency (for example: 2335.0) must be typed in. The system tunes to that frequency as long as the **SYNTH** indicator remains a **GREEN LOCK**. The user clicks “ENTER” and the “Input Freq (MHz)” box turns gray, indicating that the frequency has been accepted and tuned.

SIGNAL STRENGTH - The signal strength of the incoming signal is displayed on the RCMS GUI RF control sub-panel as a yellow horizontal bar graph (Figure 6-1). **ABSOLUTE SIGNAL STRENGTH** provides the readout in absolute (dBm) signal strength at the receiver channel’s RF Input.

Figure 6-2 shows the Relative Signal Strength feature. When **AGC ZERO** is enabled, the signal strength display switches to **RELATIVE SIGNAL STRENGTH**, reading 0 dB at the input signal level that was present when AGC ZERO was enabled, and reading either +dB or –dB relative to that input signal level.

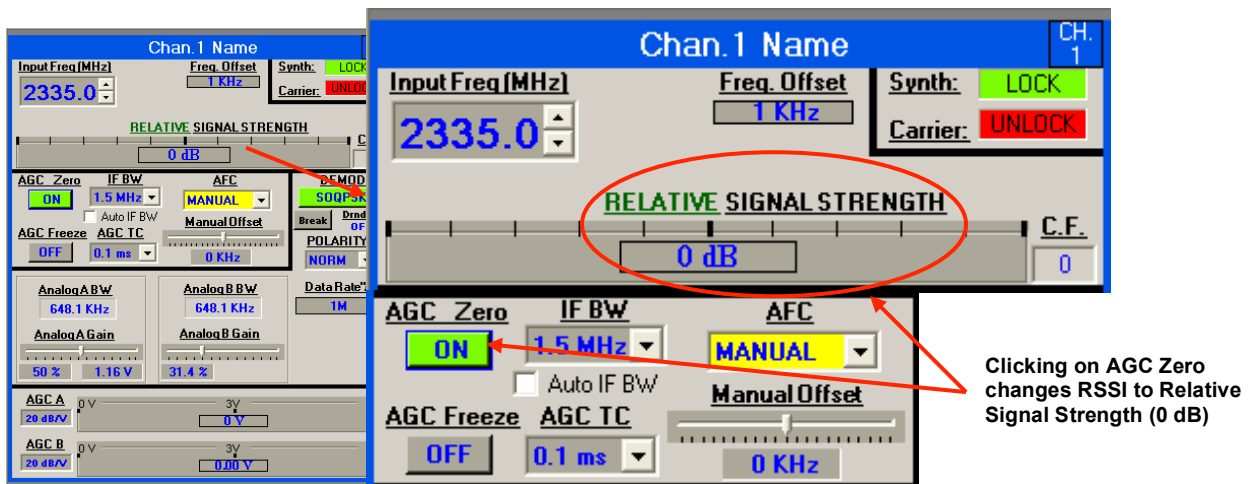


Figure 6-2
Relative Signal Strength Feature

ANTENNA SIGNAL STRENGTH provides an indication of signal strength at the antenna as a function of a user-specified correction factor (**CF**) that reflects the insertion loss and/or gains between the antenna and the receiver. This feature is enabled and displayed as shown in Figure 6-3, and as follows:

Step 1: Right Click on the “**CF**” window. This will open up an “**Antenna Correction Factor**” window as shown. The Antenna Correction Factor should be “**OFF**”.

Step 2: Enter the numerical correction factor desired. In the Figure 6-3 example, the number “25” has been entered as the Antenna-to-Receiver insertion loss in dB.

Step 3: Click “Antenna Correction Factor “**ON**”. As illustrated in Figure 6-3, the **ANTENNA SIGNAL STRENGTH** readout is now reads -35 dBm instead of the previous **ABSOLUTE SIGNAL STRENGTH** of -60 dBm (i.e., the Correction Factor of 25 has been factored into the signal strength indication). Repeat Step 1 and then click on OFF to return to the **ABSOLUTE SIGNAL STRENGTH** readout.

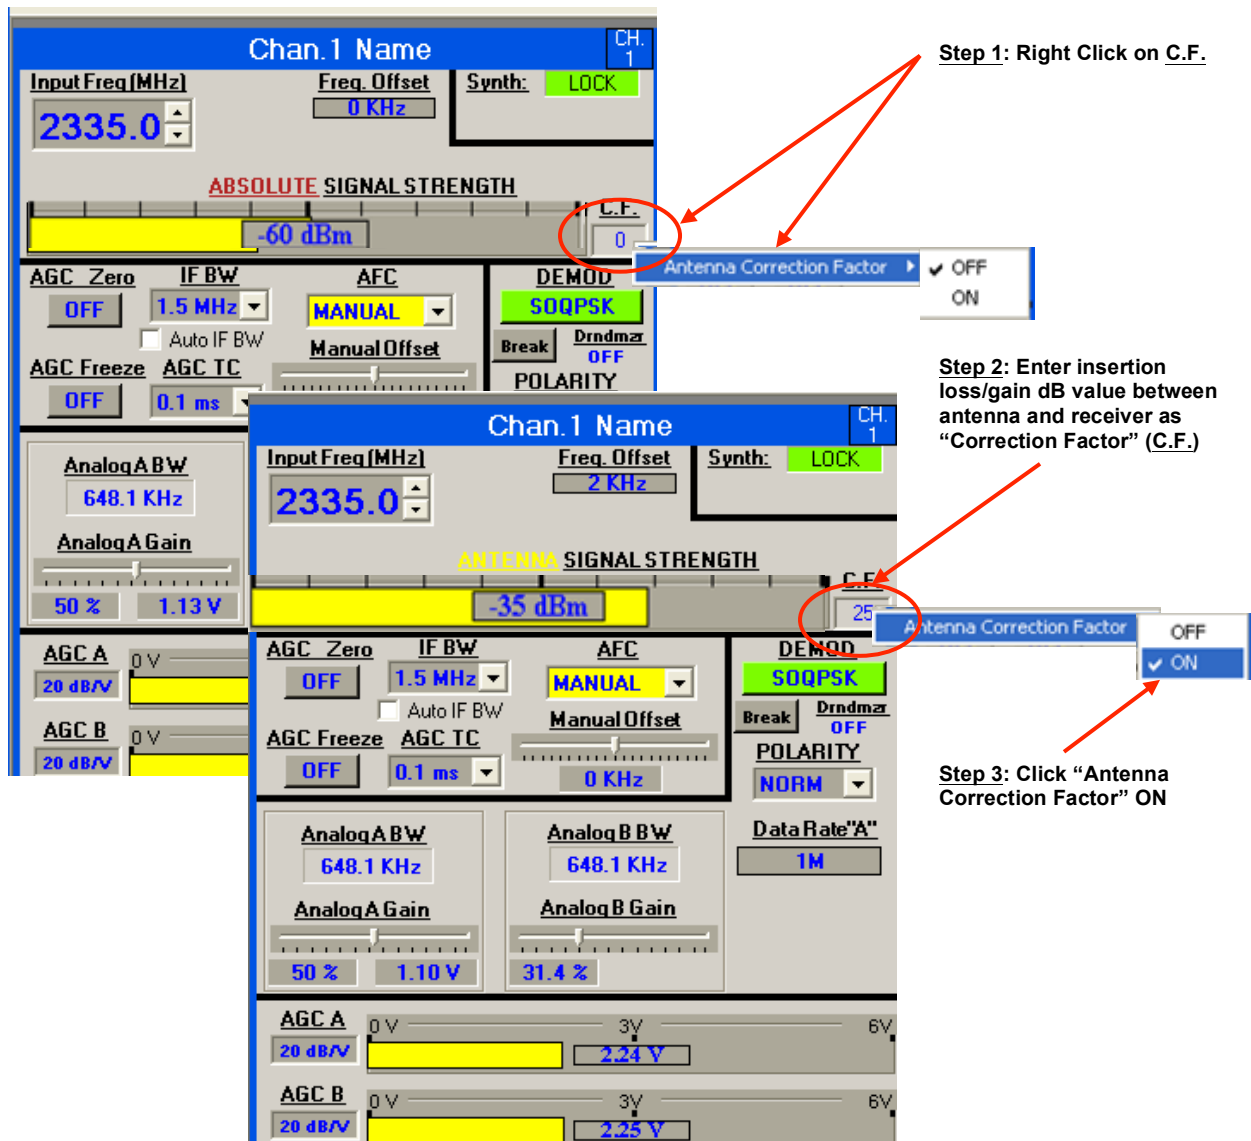


Figure 6-3
Antenna Signal Strength Feature

Installed Frequency Bands – Right clicking on the RCMS GUI **Input Freq. (MHz)** provides a list of all **Frequency Bands** installed in a particular receiver channel, as shown in Figure 6-4.

6.1.1 10 MHz Reference

Clicking on the RCMS GUI Tool Bar **“Receiver Settings”** and then **“10 MHz Reference”** allows the user to select either an **“Internal”** or **“External”** 10 MHz reference (Figure 6-5).

When **“External”** is selected, the receiver uses an external reference via the External 10 MHz input BNC connector on the rear panel. **“Internal”** selection means that the receiver is using the internal reference.

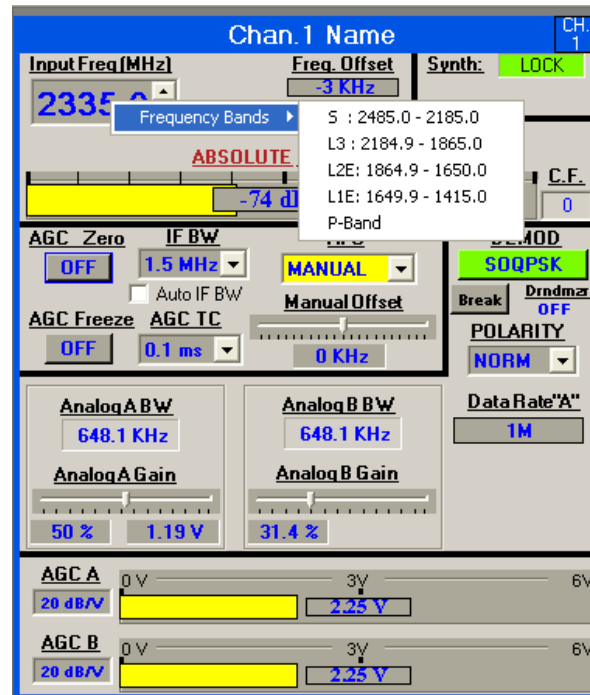


Figure 6-4
Frequency Bands Readout Feature

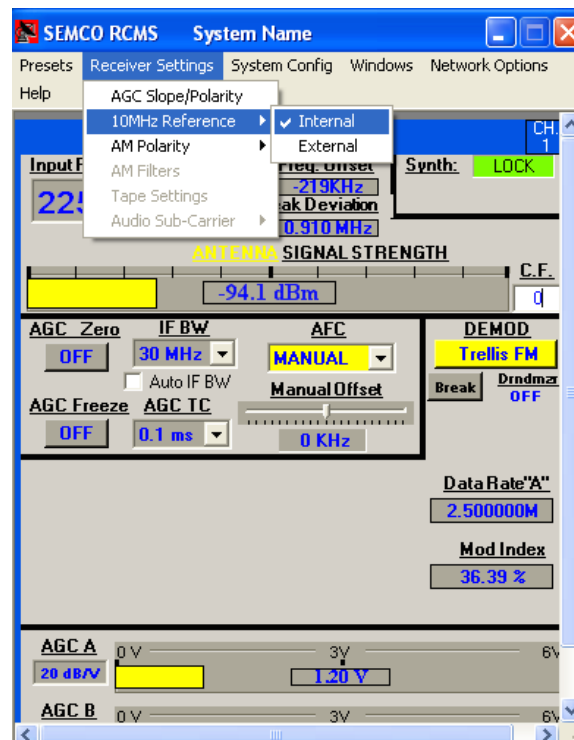


Figure 6-5
10 MHz Reference Selection

6.2 IF/AGC/AFC Control

The RCMS GUI IF/AGC/AFC control sub-panel (Figure 6-6) for each receiver channel is used to select the IF filter bandwidth (IF BW), AGC time constant (AGC TC) for the linear 70 MHz outputs, AFC mode (AUTO or MANUAL), AGC Zero and AGC Freeze.

IF BW – The IF filter bandwidth value is a pull-down menu selected by clicking on the arrow (▼) icon to the right of the IF BW box. The user then clicks on the IF bandwidth desired, which is then displayed in the box. The user can also click on the box and when **BLUE**, can use the keyboard UP-DOWN arrow keys to scroll through all IF bandwidth values. Enabling the **Auto IF BW** automatically selects the applicable SAW filter IF Bandwidth value as a function of data rate. **Auto IF** will always select the closest SAW IF filter value equal to or greater than the recommended IRIG value for the data rate and demodulation mode selected.

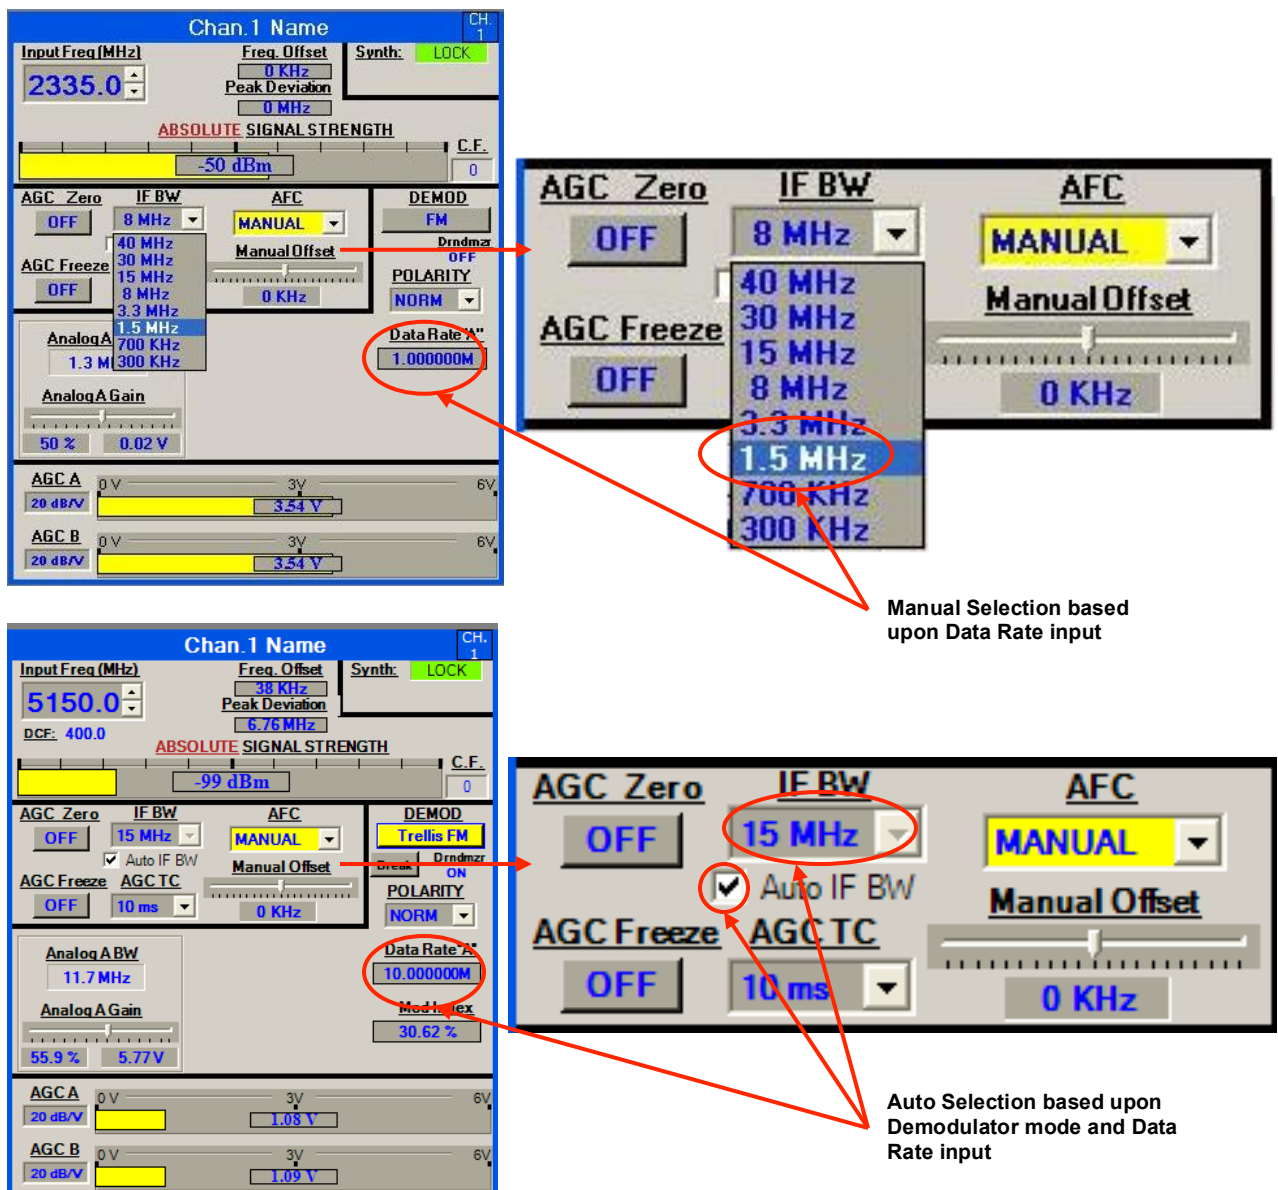


Figure 6-6
IFBW Selection

AGC TC – The AGC Time Constant value on the RCMS GUI control panel is a pull-down menu selected by clicking on the arrow (▼) icon to the right of the AGC T/C box (Figure 6-7). Selecting any one of the five available AGC time constant values will affect the “attack” and “recovery” time of the linear 70 MHz IF output. It does not affect the “attack” and “recovery” time of the demodulated AM output signal, nor the input to the demodulator. Both of these signal inputs are at a fixed AGC level that provides for optimum AM response for ACU antenna tracking functions as well as BER performance of the demodulator.

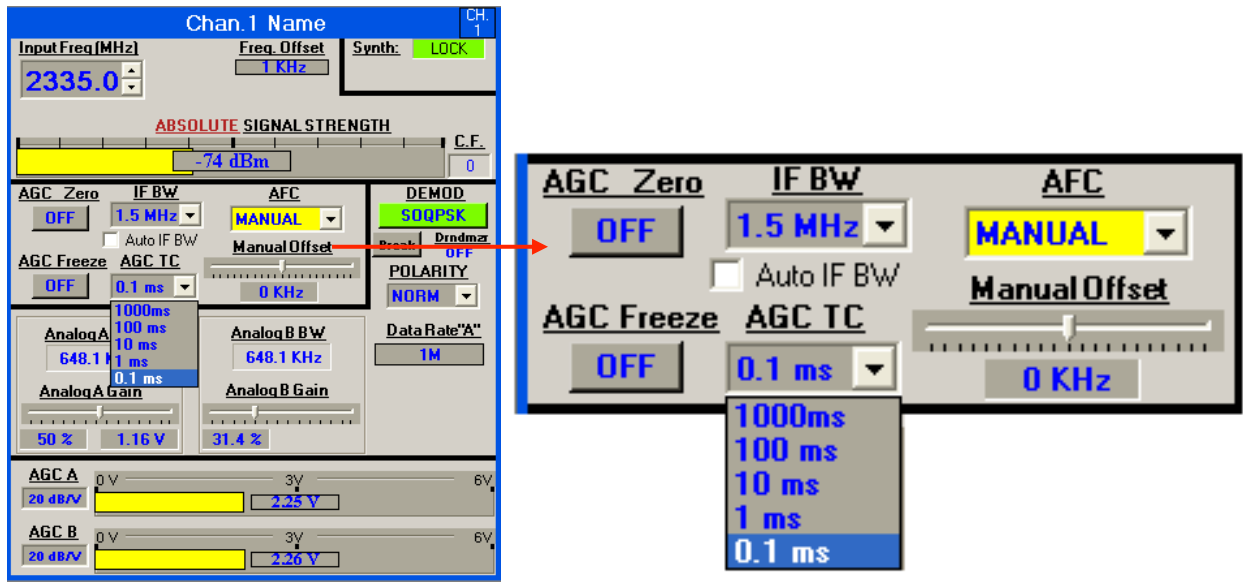


Figure 6-7
AGC Time Constant Selection

AFC – The RCMS GUI AFC control allows the user to select either **AFC AUTO** or **AFC MANUAL** (Figure 6-8). A **GREEN LOCK** light is indicated when **AFC AUTO** is selected and the AFC circuit is locked +/- 150 kHz of the incoming RF signal. A **RED UNLOCK** light is present when the signal threshold is too low for AFC, or the RF signal is greater than a +/- 150 kHz offset from the receiver channel INPUT FREQUENCY. There are 5 selectable AFC AUTO Loop Speeds as shown in Figure 6-8.

An **AFC LOOP STRESS** function in “AFC AUTO” provides 5 selectable AFC Loop Speeds from 1 Hz to 100 Hz, and displays the AFC frequency offset in 1 kHz increments. An “**OUT OF RANGE**” indication means that the AFC offset frequency has exceeded +/- 150 kHz. The system will remain locked in an “**OUT OF RANGE**” condition until the offset frequency approximates +/- 200 kHz. A 0 to 5 VDC voltage is provided on the system rear panel (“AFC LOOP”) approximating the AFC offset frequency.

AFC MANUAL tuning allows the operator to tune the receiver approximately +/-200 kHz from the center frequency selected. The **AFC MANUAL** mode at **ZERO OFFSET** is normally used (recommended) when using the receiver channels in conjunction with a Diversity Combiner. **AFC AUTO** can also be used in conjunction with a combiner, but only in slow AFC Loop Speeds of 1 Hz or 5 Hz.

Clicking on the receiver control panel AFC indicator and then selecting **MANUAL** from the pull down menu enables **AFC MANUAL** tuning. When **MANUAL** is selected, a **MANUAL OFFSET** slide bar appears which can be adjusted for positive or negative frequency offset using the keyboard mouse touchpad (coarse adjust) or keyboard arrow (← →) keys (fine adjust).

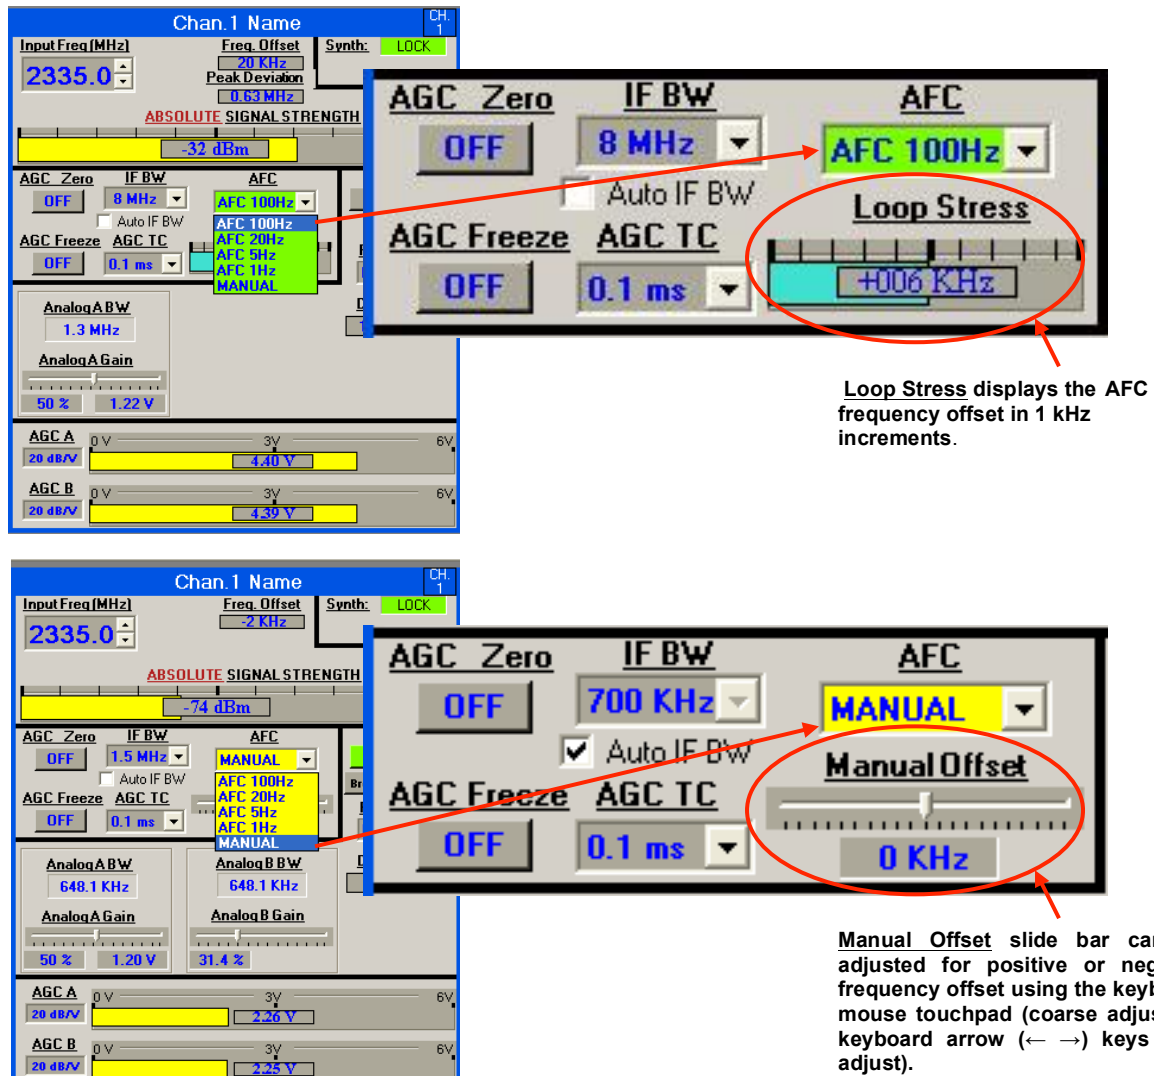


Figure 6-8
AFC Manual and Auto Selection Feature

AGC Freeze - The RCMS GUI **AGC Freeze** feature allows the operator to freeze or hold the gain of the selected receiver, and is primarily used to measure signal to noise ratios on the receiver's IF output to perform Antenna G/T measurements. Without AGC Freeze, the receiver would normally amplify incoming signals, including noise, at different gain levels as determined by the selected IF filter bandwidth. Freezing (holding) the receiver gain at a fixed level independent of signal input level allows the operator to measure signal noise floor levels by measuring the IF output at different noise input levels. The most frequently used noise floor level measurement is Antenna G/T measurements, whereby the operator measures the antenna gain by pointing the antenna away from the sun ("Cold Sky") and then measuring the IF signal power increase (i.e., antenna G/T) when the antenna is then pointed directly at the sun ("Hot Sky").

Figure 6-9 is a receiver **Attenuator Disable** feature that facilitates accurate antenna G/T measurements at various noise floor levels. This feature allows the operator to right-click on **AGC Freeze** and turn off the programmable attenuators that are part of the receiver's RF front end design.

These programmable attenuators are designed to add or subtract attenuation to the incoming signal, both as a protective measure to ensure that extremely high signal levels will not damage the receiver, and as a means to maximize the receiver's dynamic range and linearity.

However, the normal operation of these attenuators will sometimes affect the accuracy of antenna G/T measurements at approximately -70 dBm to >-50 dBm noise floor levels. Accordingly, disabling the Attenuators as shown in Figure 4-13 precludes this possibility and ensures accurate G/T measurements.

Caution:

The Attenuators must be turned ON (enabled) when resuming normal receiver operation. Failure to do so will impact overall receiver dynamic range and linearity.

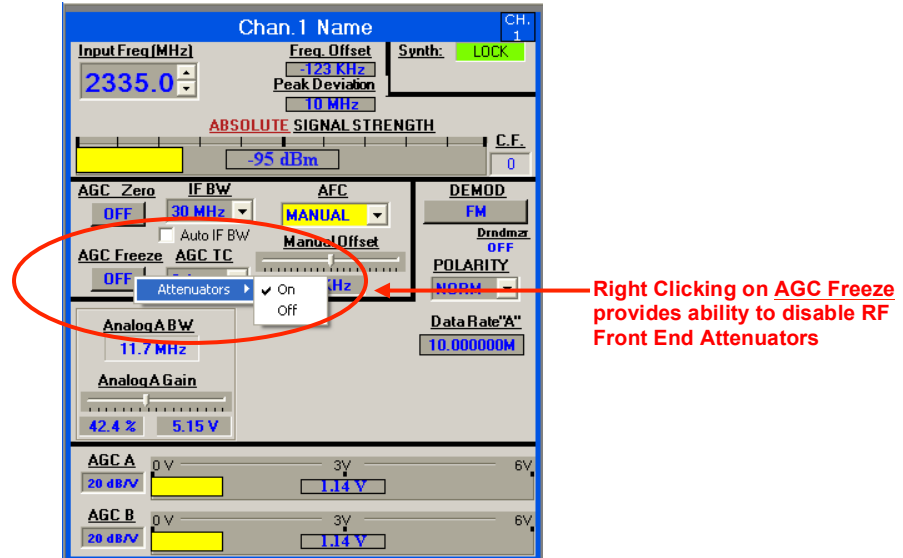


Figure 6-9
Disabling Receiver Front End Attenuators in AGC Freeze Mode

AGC Freeze is selected on the GUI as shown in Figure 6-10. The **AGC Freeze** indicator will turn **GREEN** when activated.

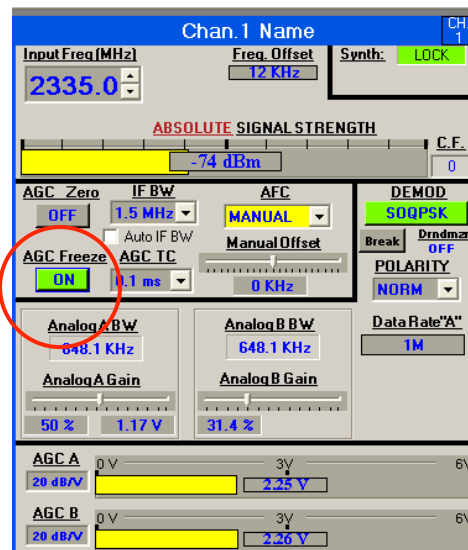


Figure 6-10
AGC Freeze Feature

AGC Zero - The **AGC Zero** feature (Figure 6-11) zeroes the AGC voltage level at a user-desired signal level (typically the noise floor). This feature is enabled by clicking on **AGC Zero**, which turns **GREEN**. The **ABSOLUTE SIGNAL STRENGTH** indicator changes to **RELATIVE SIGNAL STRENGTH** when **AGC Zero** is enabled and the readout is in “dB” relative to the signal level present when **AGC Zero** is activated.

Because signal noise level will vary as a function of receiver IF filter bandwidth, the **AGC Zero** feature is used in conjunction with IF filter bandwidth selection during initial receiver set-up or whenever IF filter bandwidth values are changed. A **RED** “Carrier Unlock” indicator is enabled when **AGC Zero** is enabled. A **GREEN** “Carrier Lock” indication occurs with the presence of an in-band RF signal that is 3 dBm or greater than the level where **AGC Zero** was enabled.

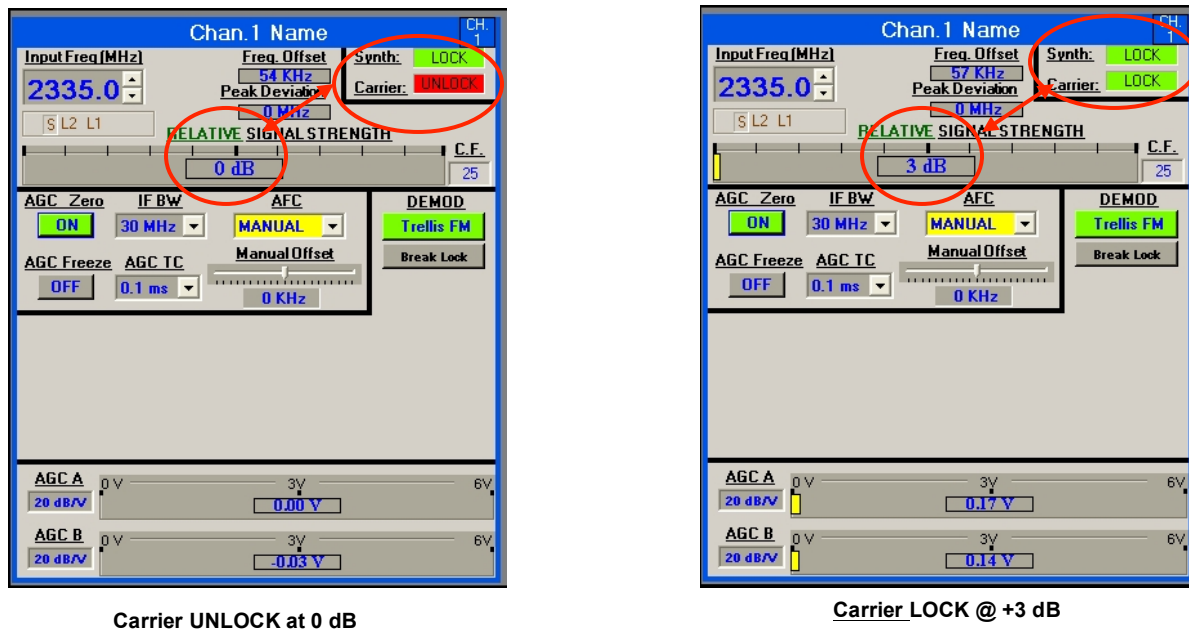


Figure 6-11
AGC Zero Feature

Figure 6-12 is the receiver's **Auto-Cal Static Attenuation** feature that facilitates higher C/N measurements for specific antenna tracking applications. These applications include tracking test vehicles exhibiting extremely slow rotations and antenna fading (deep signal fades). When this occurs, the receiver's programmable RF front end attenuators will sometimes interfere with the AM error tracking signals when they are automatically turned on or off in response to RF signal strength fluctuations.

The **Auto-Cal Static Attenuation** feature shown in Figure 6-12 provides the ability to fix the front end attenuation at a specific value for the selected IFBW. Selecting this feature by right-clicking on **AGC Zero**, waiting for the receiver to Auto-Cal to a calibrated attenuation value, and then clicking **AGC Zero ON** provides the ability to then operate at higher C/N ratios for specific antenna tracking applications requiring this capability.

Caution:

The **Auto-Cal Static Attenuation** feature requires that AGC Zero be enabled after the receiver automatically sets the calibrated fixed level of attenuation. This mode of operation should not be used for normal telemetry data reception, as the receiver's overall dynamic range and linearity is reduced when the **Auto-Cal Static Attenuation** mode is enabled.

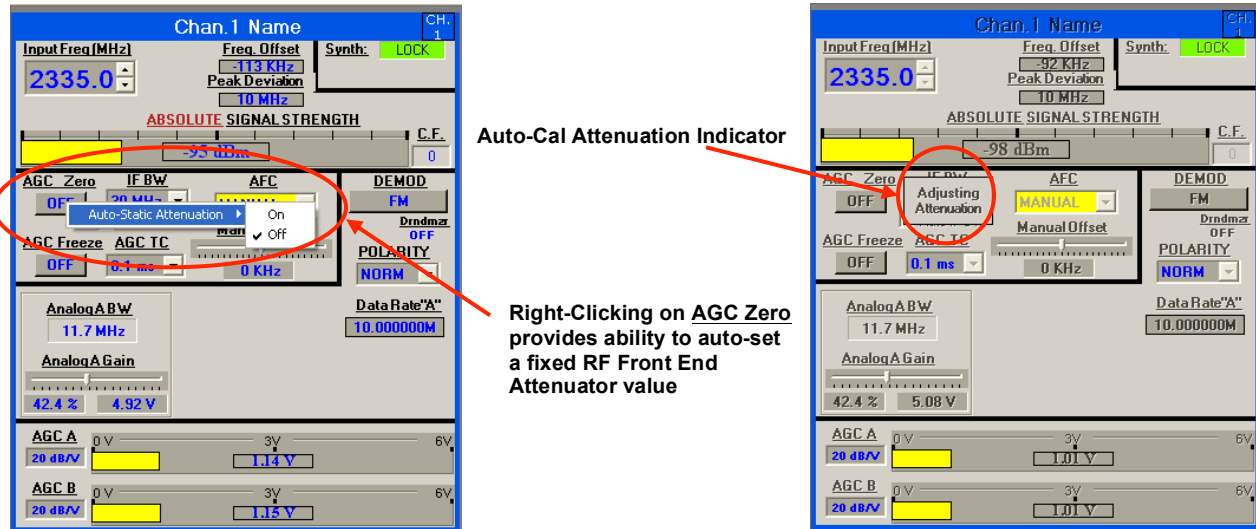



Figure 6-12
Auto-Cal Static Attenuation Feature

6.3 DEMOD/BASEBAND Control


The DEMOD/BASEBAND Control Sub-Panel (Figure 6-13) allows the user to select the receiver demodulator mode, individual mode settings, video polarity and provides a slide bar incremented in Vp-p to adjust the gain of analog base-band video outputs from 0 to 4 Vp-p minimum into 75 ohms.

Figure 6-13 depicts the control panels for both analog and digital baseband video outputs. Dual video output gain controls (**Analog A Gain** and **Analog B Gain**) are provided for analog QPSK, A/UQPSK and SOQPSK I and Q outputs. The Baseband Video Filter value for each of these outputs (**Analog A BW** and **Analog B BW**) represents the FIR filter setting that is calculated per IRIG and applied as a function of the user-selected data rate. Other GUI display features include a Derandomizer **ON/OFF** (Drndmzr **OFF** is shown), Data Rate (**DataRate"A"**), and a **Break** button that allows the user to break demodulator Lock and re-acquire.

Analog A BW and Analog B BW – **Analog A BW** is present and FIR filters are automatically calculated, applied and set as a function of data rate for analog FM, PM, and BPSK baseband video outputs. Both **Analog A BW** and **Analog B BW** are present for analog QPSK, A/UQPSK and SOQPSK baseband video outputs. As shown in Figure 6-13, digital baseband video outputs are TTL and do not have Video Bandwidth displays.

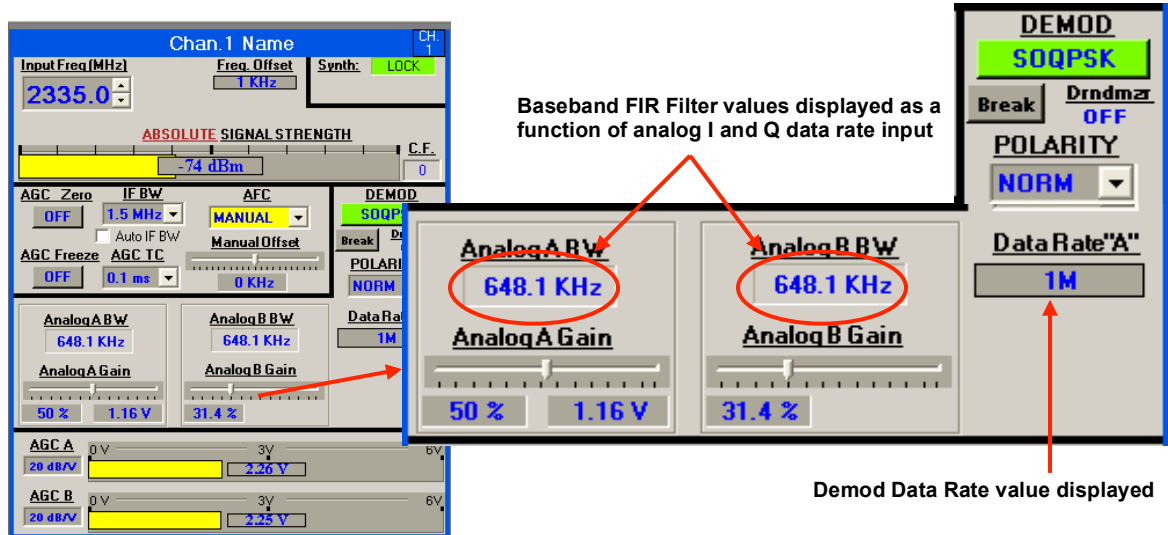

Analog Video Baseband Controls

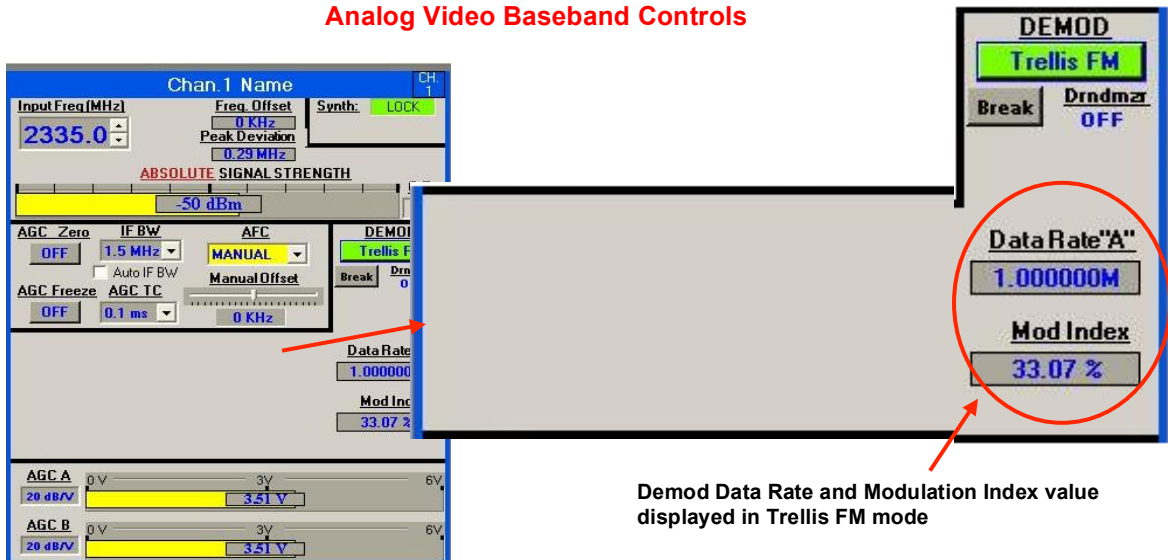

Digital Video Baseband Controls

**Figure 6-13
DEMODOBASEBAND Control**

Analog A Gain - This slide bar adjusts the gain of the analog base-band video output. The slide bar is in Vp-p gradients and % readout and the non-volatile memory feature remembers and retains these values. A Vp-p reading and a % reading is displayed for **Analog A Gain**, and a % reading is displayed for **Analog B Gain**. The user adjusts **Analog B Gain** to the same % to have the same output amplitude as **Analog A Gain**. Each slide bar is adjusted by the mouse (coarse adjust) or the keyboard arrow (← →) keys (fine adjust) to set the desired baseband video gain amplitude.

The **Analog A Gain** function is applicable for FM, analog PM, and analog BPSK baseband video outputs. **Analog A Gain** and **Analog B Gain** are present and used for baseband filtering of analog QPSK, A/U/QPSK and SOQPSK baseband video outputs. As shown in Figure 6-13, digital baseband video outputs are TTL and do not have gain controls.

POLARITY - The **POLARITY** window is a pull-down menu on the control panel GUI for the analog FM demodulation format, with Normal (**NORM**) or Inverted (**INVERT**) FM base-band video output selection.

Drndmzr OFF – This display indicates whether or not the embedded bit synchronizer de-randomizer has been enabled (**ON**) or not (**OFF**).

Break Feature – The **Break** feature allows the user to break demodulator lock and re-acquire. This feature is seldom used except for those instances when it is suspected that a “false lock” has occurred. The feature is in every demodulator format except FM.

Data Rate “A” and Data Rate “B” – DataRate“A” is indicates the data rate that the user has selected, and this display is provided for all demodulator formats except AQPSK and AUQPSK. These two demodulator formats have different data rates for their respective I and Q channels, and a **DataRate“A”** and **DataRate“B”** is displayed for these two formats.

Mod Index Feature – The **Mod Index** feature is provided for the Trellis FM demodulation mode. This feature provides an indication of the demodulator deviation index setting that is selected by the user to compensate for any drift or change in transmitter deviation during a mission.


DEMOD - The **DEMOD** window accesses a “Demod” sub-menu that the user selects by clicking on the arrow (▼) icon to the right of the **DEMOD** window. The “Demod” sub-menu is further described in paragraph 6.3.1.

6.3.1 Demodulator Sub-Menu and Settings


Clicking on the GUI **DEMOD** window brings up a “Demod” sub-menu (Figure 6-14), which shows the basic **AUTO** and **Advanced** demodulator features. These features are further described in subsequent paragraphs. Table 6-1 lists the various selectable demodulator modes and features that are available.

Table 6-1
Demodulator Modes and Features

Standard and Optional Demodulator Modes
PCM/FM, NTSC Video, Legacy PM, BPSK, QPSK, UQPSK, AQPSK, AUQPSK, SQPSK, OQPSK, GMSK, Tier 0 Trellis PCM/FM, Tier I SOQPSK-TG, Tier II Multi-h CPM, PM/PSK and FM/FM Sub-carrier and Coherent AM
Demodulator Features
FIR filters automatically set as a function of data rate input (IFBW's and Baseband Video BW's)
Embedded Bit Synchronizer with De-Randomizer
Combination Analog and Digital Outputs
User-Selectable AC or DC Coupling
Custom Video Output Configuration
Manual Video Output Selection
De-Randomizer
Auto loop bandwidth and acquisition sweep settings optimized for demodulator format and data rate
User-selectable loop bandwidths, acquisition sweep range and sweep rates
User-Selectable FIR Filter Values that are narrower than automatic FIR filter values
Trellis FM Modulation Index Selection
System Degradation Indicator (SDI) Threshold Settings
“Fast Acquire” for fastest acquisition time (Tier 0, I and II), with “Track Loop Bandwidth” for PM/PSK and SOQPSK-TG
FM Low Data Rate (<10 kbps) feature

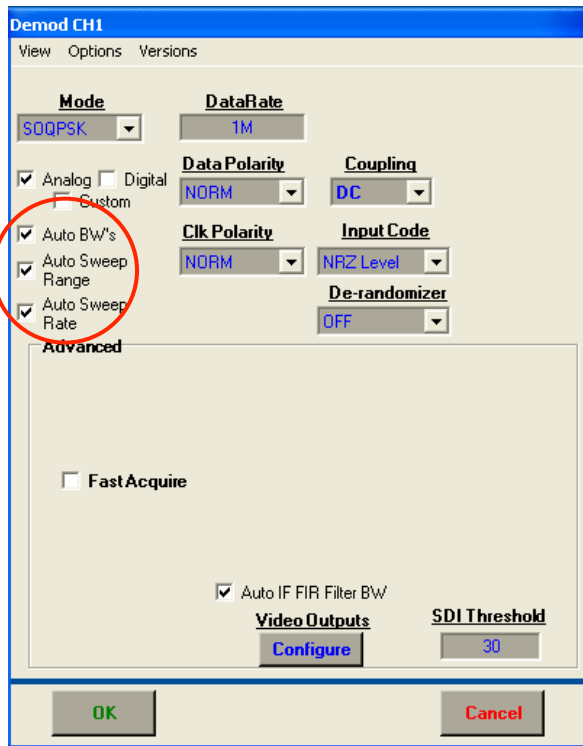

AUTO Setting

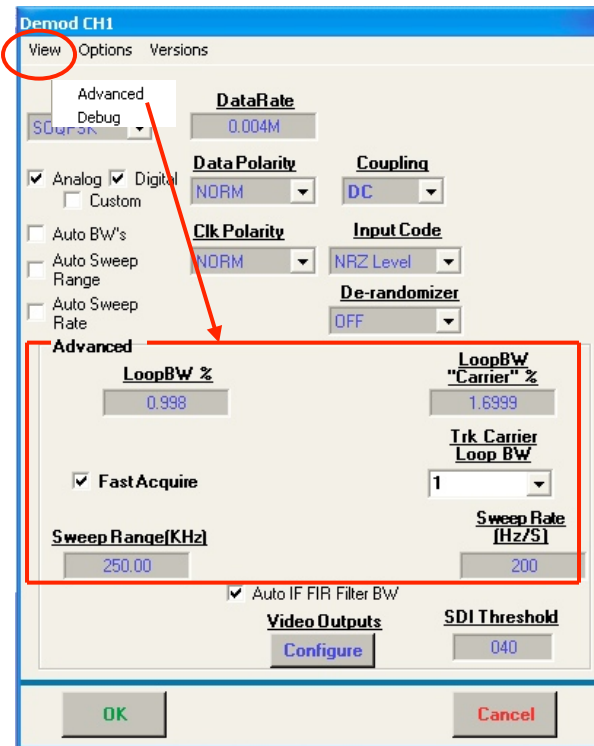

Advanced Setting

Figure 6-14
Demodulator Control Panels

6.3.1.1 Demodulator Settings and Features

Each demodulator format is accessible by clicking on **Mode** and then selecting the desired demodulator format from the drop down menu as shown in Figure 6-15. The **Mode** drop down menu will automatically list all demodulator options that have been purchased and installed.


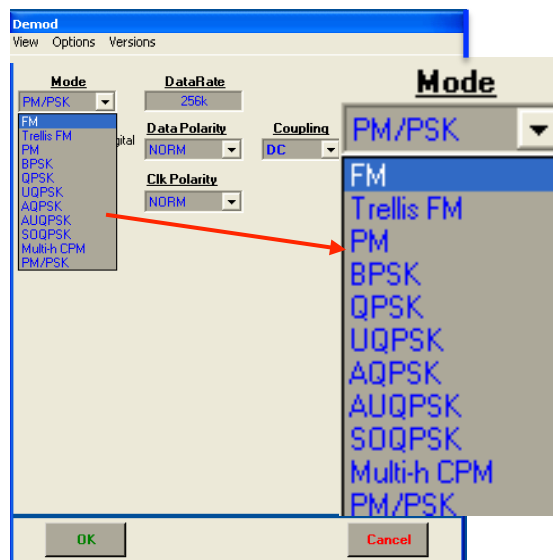


Figure 6-15
Demodulator Mode Selection


Data Rate – Is entered in Megabits (**M**) or Kilobits (**K**) as shown in Figure 6-16. The data rate is typed in where shown. **ENTER** turns the window gray, indicating that the data rate has been accepted.

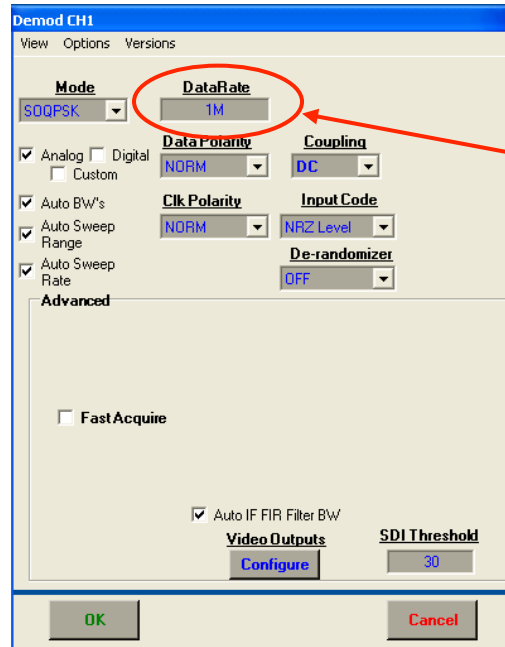

The screenshot shows the 'Demod CH1' window with the 'DataRate' field highlighted by a red circle. The field contains the text '1M'. A red arrow points from the text 'Type in the desired data rate using "M" or "K" and then ENTER. Data Rate entry is accepted when box turns gray.' to the 'DataRate' field.


Figure 6-16
Data Rate Entry

Data Polarity and **Clock Polarity** – These two settings, as shown in Figure 6-17, allows the user to click on Normal (**NORM**) or Inverted (**INVRT**) polarity.

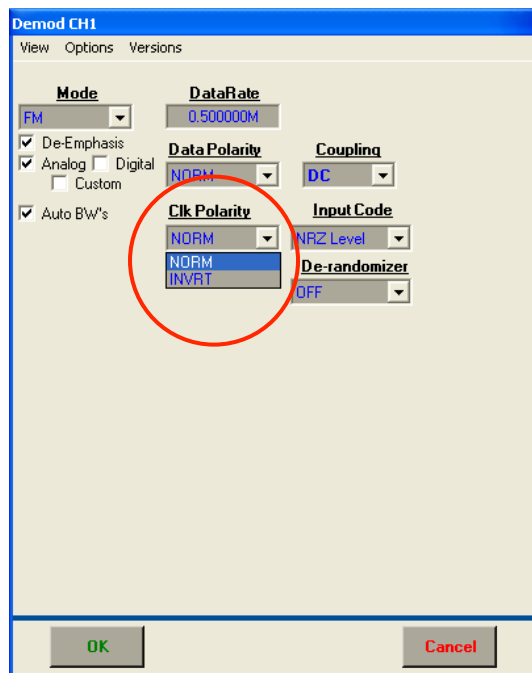

The screenshot shows the 'Demod CH1' window with the 'Clk Polarity' dropdown menu highlighted by a red circle. The menu is open, showing 'NORM' and 'INVRT' options.

Clock Polarity

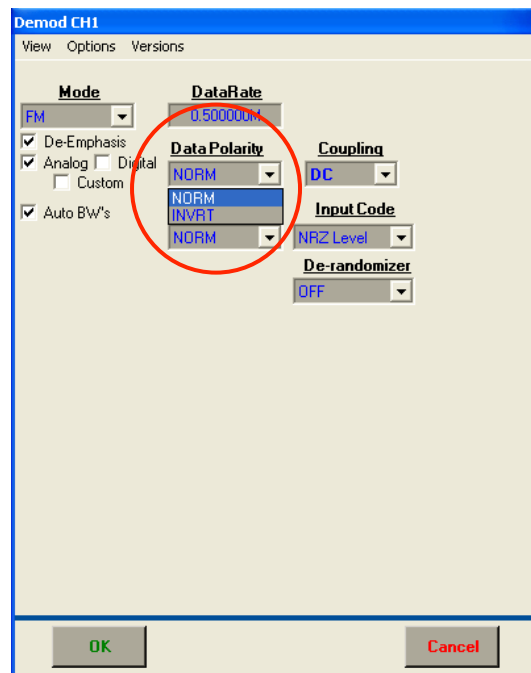

The screenshot shows the 'Demod CH1' window with the 'Data Polarity' dropdown menu highlighted by a red circle. The menu is open, showing 'NORM' and 'INVRT' options.

Data Polarity

Figure 6-17
Data and Clock Polarity Settings

Coupling – As shown in Figure 6-18, user-selectable AC or DC coupling is available via a pull-down menu on the RCMS GUI.

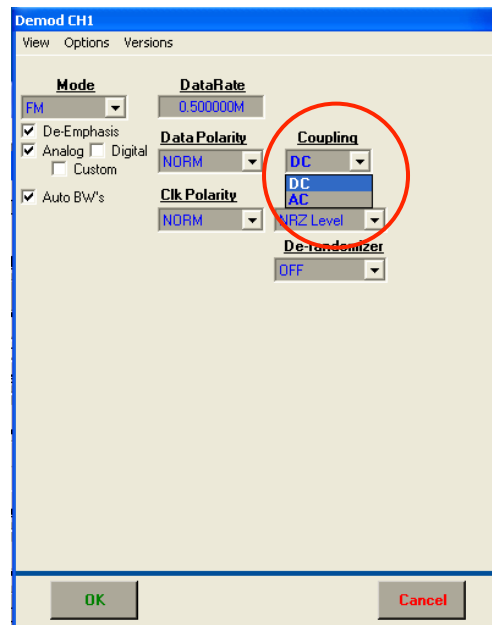


Figure 6-18
AC-DC Coupled Output Selection

Analog/Digital – Figure 6-19 shows the feature that allows the user to configure the baseband video outputs from the GUI and Touch Screen. The user can click on “Analog”, “Digital” or both “Analog” and “Digital”. The Video 0 thru Video 3 BNC outputs are per Table 6-2.

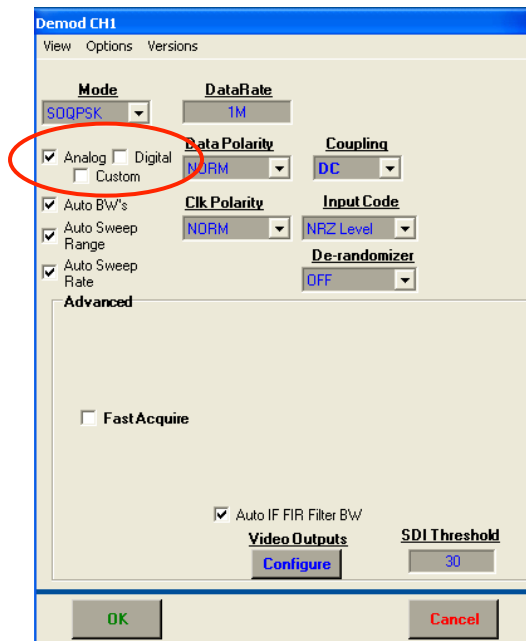


Figure 6-19
Analog and Digital Output Selection

Table 6-2
Baseband Video Outputs (Factory Default Settings for all Demodulator Options)

Demodulation Format	Video 0	Video 1	Video 2	Video 3
ANALOG OUTPUT MODE				
FM and Trellis FM	Data	Data	Data	Data
SOQPSK-TG	Data	Data	Data	Data
Multi-h CPM	Data	Data	Data	Data
PM	Data	Data	Data	Data
BPSK	Data	Data	Data	Data
AIUQPSK	I-Data	Q-Data	I-Data	Q-Data
PM/PSK Sub-Carrier	Data	Data	Data	Data
ANALOG OUTPUT MODE				
NTSC Video	Video	Video	Video	Video
DIGITAL OUTPUT MODE				
FM and Trellis FM	Data	Clock	Data	Clock
SOQPSK-TG	Data	Clock	Data	Clock
Multi-h CPM	Data	Clock	Data	Clock
PM	Data	Clock	Data	Clock
BPSK	Data	Clock	Data	Clock
AIUQPSK	I-Data	I-Clock	Q-Data	Q-Clock
PM/PSK Sub-Carrier	Data	Clock	Data	Clock
MIXED OUTPUT MODE				
	ANALOG		DIGITAL	
FM and Trellis FM	Data	Data	Data	Clock
SOQPSK-TG	I-Data	Q-Data	Data	Clock
Multi-h CPM	Data	Data	Data	Clock
PM	Data	Data	Data	Clock
BPSK	Data	Data	Data	Clock
PM/PSK Sub-Carrier	Data	Data	Data	Clock

Video Outputs “Configure” (Quick Look) Feature – The **Video Outputs “Configure”** box (Figure 6-20) provides a “Quick Look” feature that allows the user to view all Video 0 thru Video 3 analog and digital outputs of the selected demodulator format prior to saving them as **“Custom”** outputs.

The Video 0 thru Video 3 outputs revert to factory default settings when the user clicks on **OK** or **Cancel**.

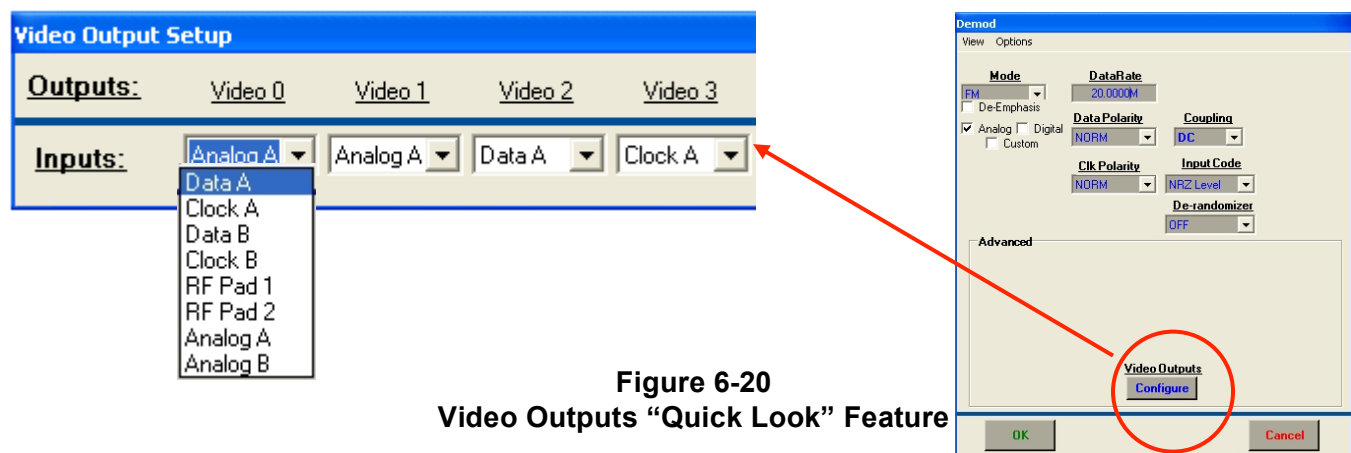


Figure 6-20
Video Outputs “Quick Look” Feature

Custom – Figure 6-21 shows the “Custom” feature that allows the user to configure (customize) the rear panel BNC Video 0 through Video 3 outputs to other than the factory default settings.

The procedure for customizing the video outputs are as follows:

Step 1: Click on “Custom”.

Step 2: Click on “Options” and then “Custom Video Output Config”

Step 3: Click on one or more Video 0 thru Video 3 Outputs and select desired output from pull-down menu as shown in Figure 6-21.

These desired outputs are permanently saved for the selected demodulator mode when the “**Custom Video Output Configuration**” Window is closed.

Step 4: Click on **OK**. The **OK** window exits back to the main Control Panel.

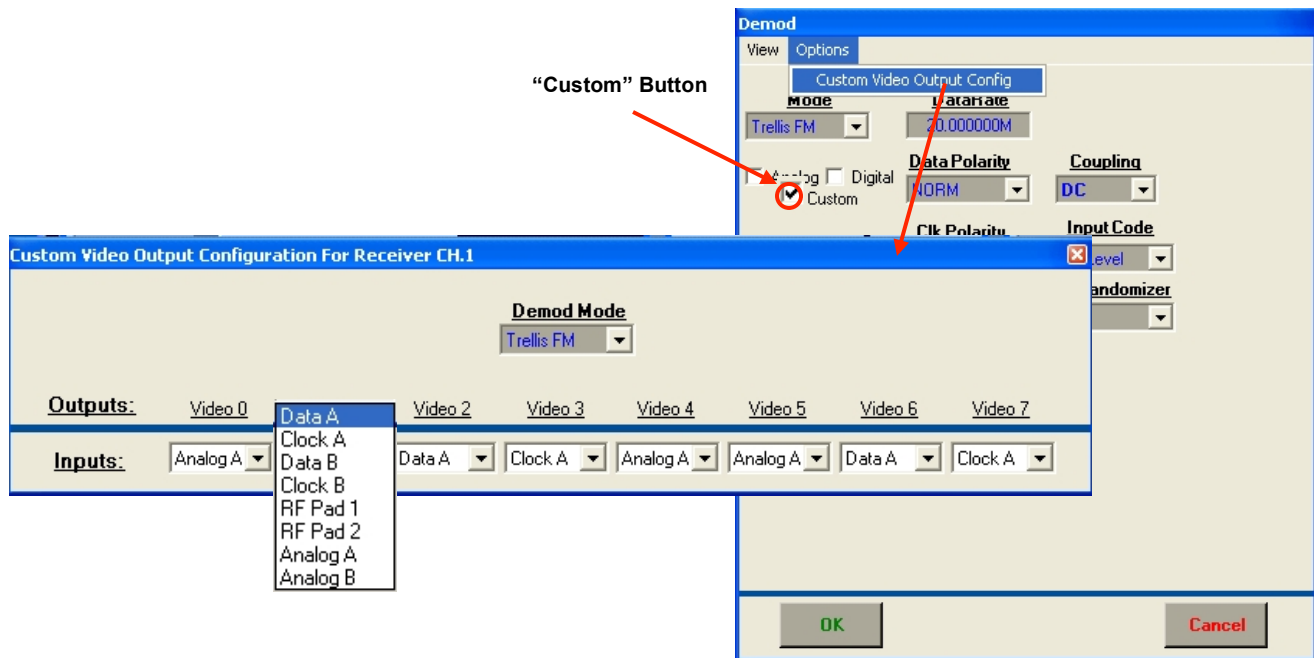


Figure 6-21
Analog, Digital and Custom Video Output Selection

OK – Figure 6-22 shows the sequence for clicking on **OK**, thereby saving all demodulator settings and exiting back to the main Control Panel. A running graph “**Configuring...Demod**” will appear and all of the selected demodulator settings will be applied.

Cancel - The **Cancel** window allows the user to exit the “Demod” sub-menu at any time. When **Cancel** is selected, the demodulator settings revert to the modes and values previously set.

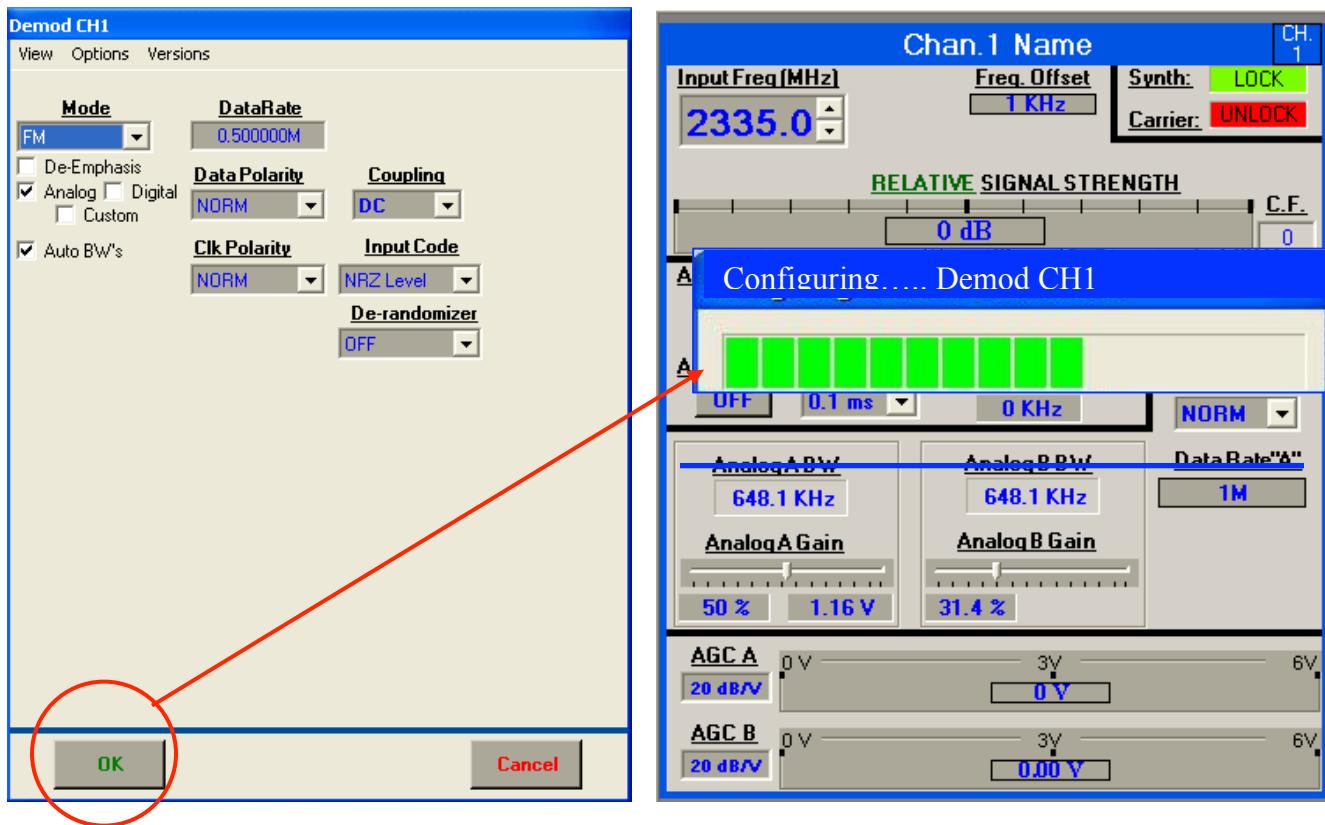


Figure 6-22
OK and Cancel Function

6.3.1.1.1 Auto Demodulator Settings

Figure 6-23 depicts a typical **Auto** settings feature. **Auto** Settings are automatically programmed into the demodulator when certain demodulation formats are selected. These automatic settings are based on data rates and demodulator characteristics required for optimum performance in most all telemetry missions, and facilitate quick mission set-up without extensive user knowledge and intervention. The **Auto** settings are for the following demodulator performance characteristics:

- A. **Loop BW%** – This automatically sets the internal bit synchronizer loop bandwidth value.
- B. **Loop BW “Carrier”%** – This automatically sets the “carrier” loop bandwidth value.
- C. **Sweep Range (kHz)** – This automatically sets the demodulator’s acquisition sweep range value in +/- kHz.
- D. **Sweep Rate (Hz/S)** – This automatically sets the sweep rate value of the acquisition sweep range in Hz/second.
- E. **Auto IF FIR Filter Bandwidth** – This automatically sets both the IF SAW filter and IF FIR filter bandwidth values per IRIG recommendations as a function of data rate and demodulator format.

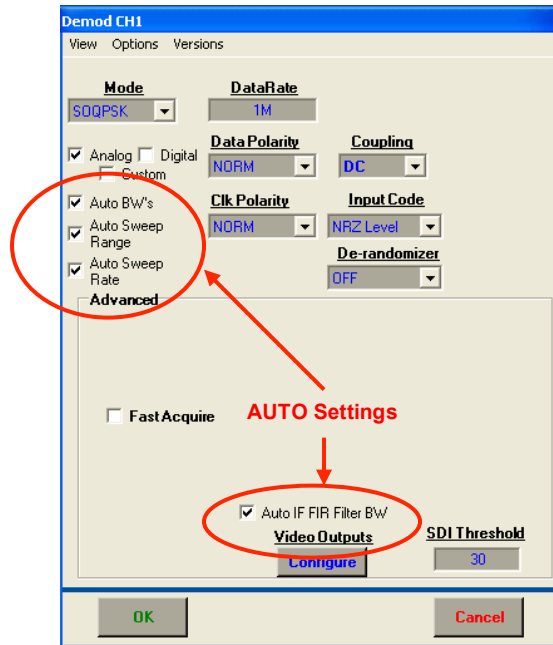


Figure 6-23
Auto Settings Feature

6.3.1.1.2 Advanced Demodulator Settings

Several Demodulator settings can be changed by the user in the **Advanced Settings** mode. Clicking on **View** in the Toolbar provides a drop-down window as shown in Figure 6-24. Clicking on **Advanced** and disabling all of the **Auto** (✓) settings opens up the **Advanced** window as shown. This **Advanced** window displays the values that were calculated and applied in the **Auto** setting mode for each selected demodulator format and provides the user the ability to change these settings. Each of these **Advanced** settings is described in subsequent paragraphs.

- A. **Loop BW %** - this value is the loop bandwidth of the embedded Bit Synchronizer. Changing this value affects the ability of the Bit Synchronizer to lock on the demodulated waveform. In general terms, a narrower bandwidth provides for a lower the lock threshold. A wider bandwidth is more tolerant of waveform anomalies, but will require a higher C/N threshold to lock.
- B. **Loop BW “Carrier” %** - this value is the loop bandwidth of the demodulator. Normally, the narrowest bandwidth that still provides demodulator lock is most desired, because this provides the lowest C/N lock threshold possible. However, it is sometimes desirable to widen this loop bandwidth value to make the demodulator more tolerant of transmitter jitter and low frequency noise that is found to be present on the telemetry downlink signal. Here again, a wider demodulator loop bandwidth will require a higher C/N threshold to lock.
- C. **Sweep Range (kHz)** – A narrow sweep range provides for faster demodulator acquisition and is normally used for higher data rates. A wider sweep range is able to acquire lower data rates, but requires a longer acquisition time to acquire and lock on to the signal.
- D. **Sweep Rate (Hz/S)** – the sweep rate of the acquisition sweep range in Hz/second affects signal acquisition time. A faster sweep rate results in a faster acquisition time. However, the sweep rate also has to be set at a speed that guarantees reliable signal acquisition without “false lock”.

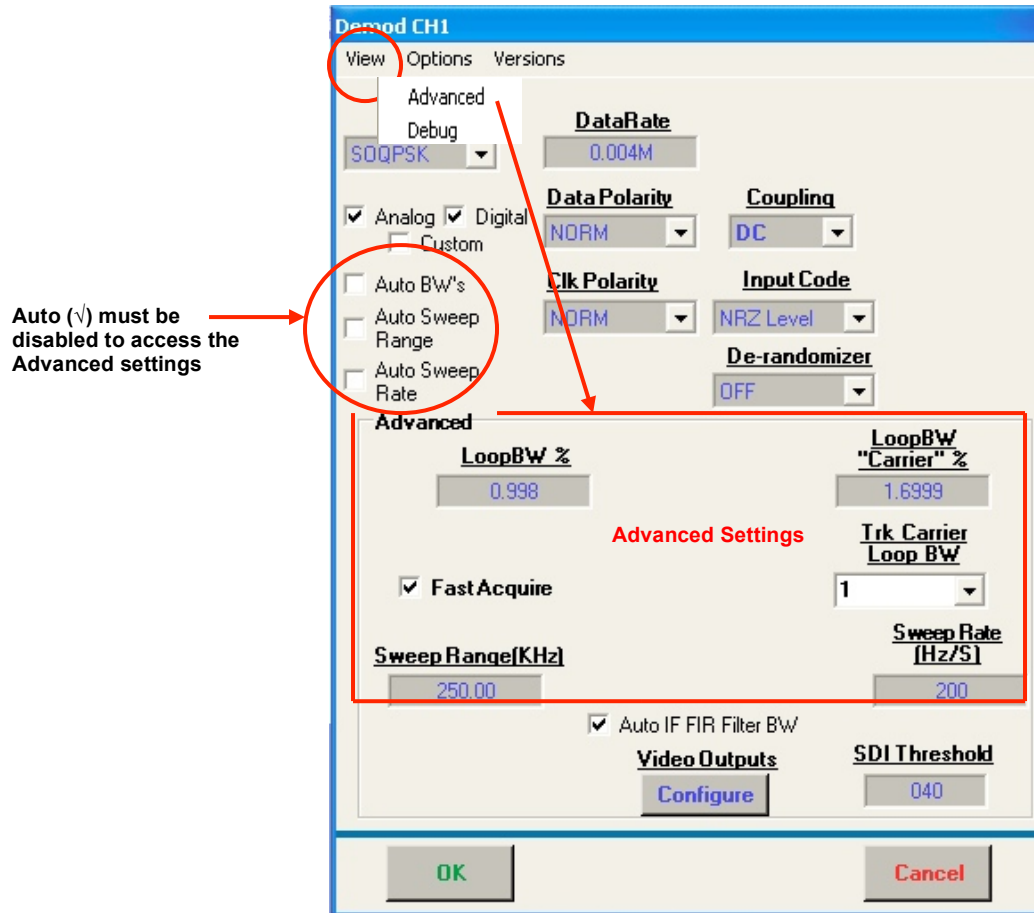


Figure 6-24
Advanced Settings Feature

- E. **IF FIR Filter Bandwidth** – a (✓) appearing in this box means that the **Auto IF** feature was enabled on the GUI or receiver Touch Screen, which automatically selects the applicable SAW filter IF Bandwidth value as a function of data rate. **Auto IF** will always select the closest SAW IF filter value equal to or greater than the recommended IRIG value for the data rate and demodulation mode selected. This is in addition to the FIR filter that is always automatically calculated and applied per IRIG, and normally not changed by the user. Disabling the **AUTO IF** feature allows the user to manually select the SAW filter values as previously described in paragraph 6.2 (**IF BW**). With **Auto IF** disabled, the **Advanced** settings allow the user to narrow the FIR filter value when Bit Error Rate and signal quality can be improved with a narrower bandwidth.
- F. **Fast Acquire** – Enabling the **FastAcquire** feature optimizes the demodulator to acquire the incoming signal as fast as possible. This feature is applicable to FM, Trellis FM, SOQPSK-TG and Multi-h CPM formats. Selecting this mode may slightly degrade the lock threshold of the selected demodulator mode, but will provide for faster FM acquisition time and improve Trellis FM lock time to less than 250 average bits, SOQPSK-TG lock time to less than 350 average bits and Multi-h CPM lock time to less than 50,000 average bits.

The **Tracking Loop Bandwidth** feature is also activated for certain demodulator formats when **Fast Acquire** is enabled. This feature allows a wider loop for acquisition, and then automatically tightens the loop once lock is declared. The **Tracking Loop Bandwidth** value defines how much the Loop Bandwidth is reduced once lock is detected. The selectable values for reducing the bandwidth is 1, 1/2, 1/4 and 1/8, with a value of “1” keeping the Loop Bandwidth the same. This feature is available for all demodulator modes that function with a Loop Bandwidth (PM, BPSK, QPSK, AQPSK, UQPSK, AUQPSK and SOQPSK-TG).

- G. **FM Sweep (Low Data Rate)** – This feature is used when acquiring FM signals below 10 Kbps. When this feature is enabled, the receiver channel’s AFC is enabled and the demodulator’s center frequency is swept when demodulating narrow FM signals to ensure that the desired signal is centered in the IF Filter. When narrow FM signals are off frequency, the desired signal may not be in the narrow IF FIR filter and therefore will not be detectable. This setting is used to sweep the frequency offset of the demodulator to give the best possible opportunity to recover the signal. Receiver channel **AFC** is also automatically enabled for FM data rates below 30 Kbps when **Auto** is (✓). If **Auto** is not checked, the user can enable or disable **AFC** at any selected data rate.

6.3.1.1.3 Bit Synchronizer De-randomizer Feature

The embedded Bit Synchronizer has a standard IRIG 15 bit de-randomizer feature as shown in Figure 6-25. Input codes include the signal formats as shown, and the de-randomizer is enabled with an ON/OFF pull-down menu on the GUI.

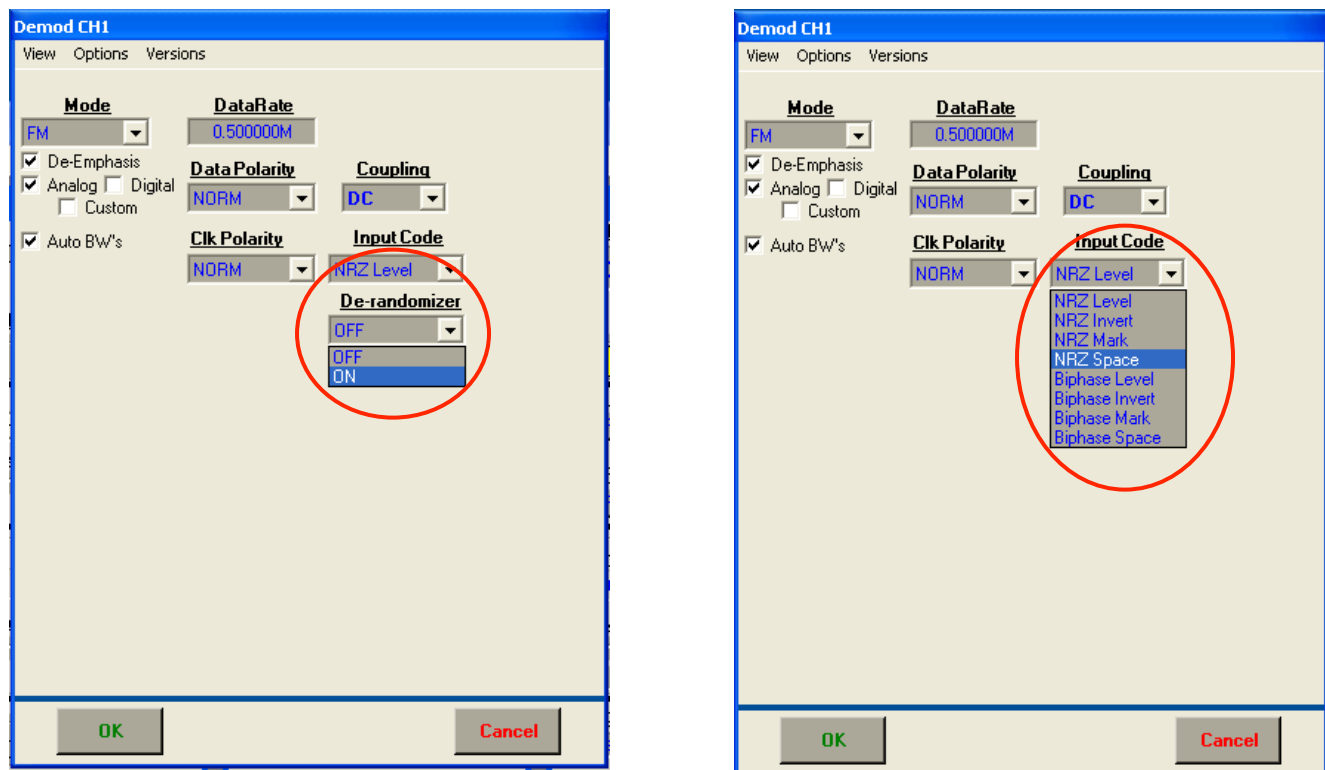


Figure 6-25
Bit Synchronizer De-randomizer Feature

6.3.1.1.4 Additional Demod Tool Bar Features

Figure 6-26 depicts the “**Debug**” pull-down menu and “**IF Card Terminal**” display. This debug window is used by factory personnel for troubleshooting reported demodulator problems.

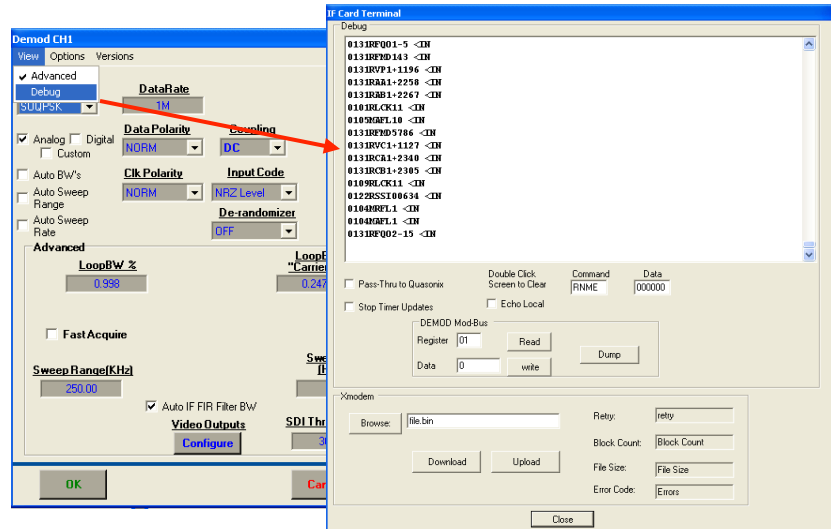


Figure 6-26
Demodulator Debug Feature

Figure 6-27 shows the “**Versions**” Tool Bar selection. This demodulator configuration information is important when discussing demodulator performance features and/or issues with the factory.

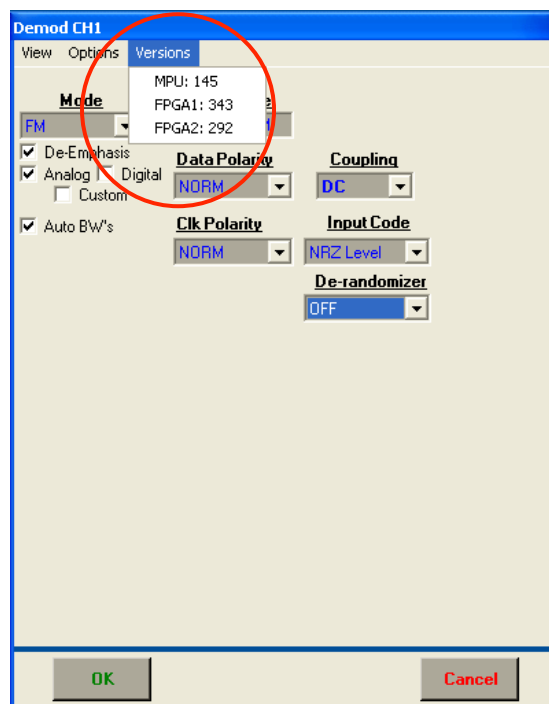


Figure 6-27
Demodulator Configuration Information

6.3.2 Demodulation Set-Up Examples

Paragraph 6.3.1 described the basic demodulation set-ups and features applicable to SEMCO receivers. Many of these features and set-ups are unique to specific demodulation formats. Set-up procedures and examples for several of these demodulator format are addressed in subsequent paragraphs.

6.3.2.1 FM Demodulation

The normal range for FM data rate selection is 10 Kbps to 23 Mbps, with an **Advanced FM Sweep (Low Data Rate)** feature (Figure 6-28) for FM demodulation at data rates below 10 Kbps. Selecting **View** and **Advanced** provides user access to this low data rate feature. As previously described, the receiver's **AFC** is automatically enabled and the demodulator's center frequency is swept to ensure that the desired signal is centered in the IF Filter for the best possible opportunity to recover the signal. The receiver channel's **AFC** is also automatically enabled for FM data rates below 30 Kbps when **Auto** is (✓).

The FM Demodulation format also features a **Fast Acquire** mode. Selecting this mode may degrade the lock threshold of the selected demodulator mode, but will provide for faster FM acquisition time

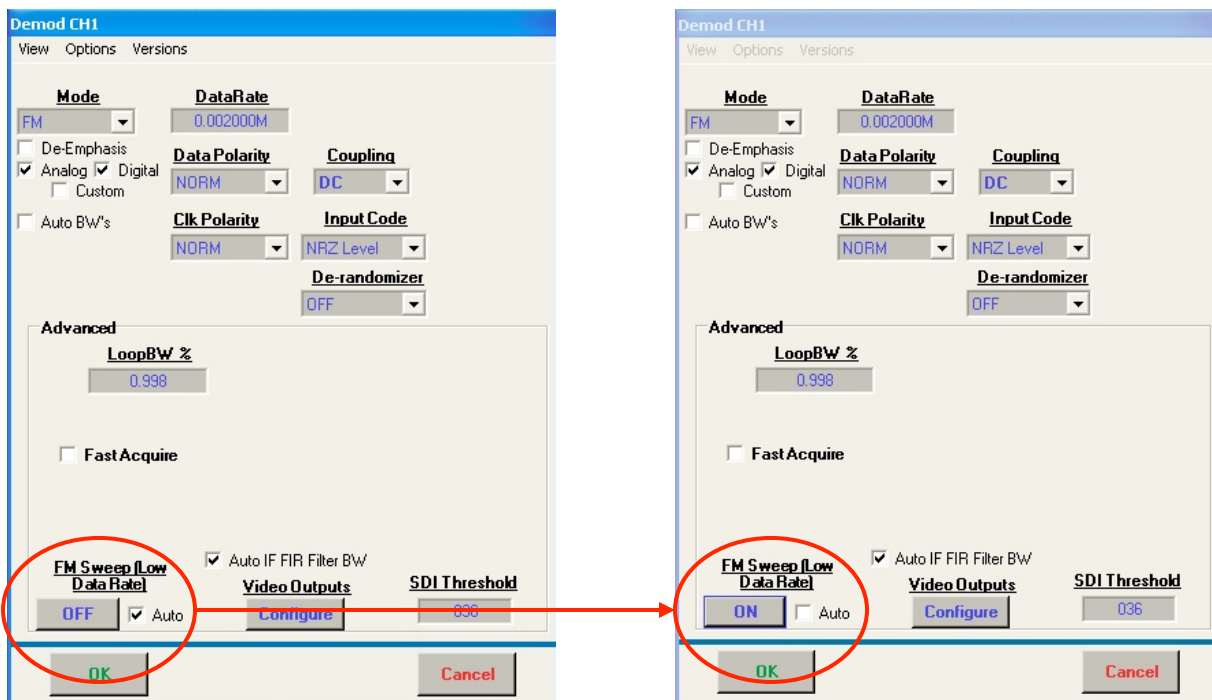


Figure 6-28
FM Demodulation Low Data Rate Set-Up

Figure 6-29 depicts FM demodulation set-up for processing NTSC Video signals. The de-emphasis feature is used for processing emphasized NTSC video signals. As shown in Figure 6-29, the user clicks on the RCMS GUI **De-Emphasis** box to enable this feature.


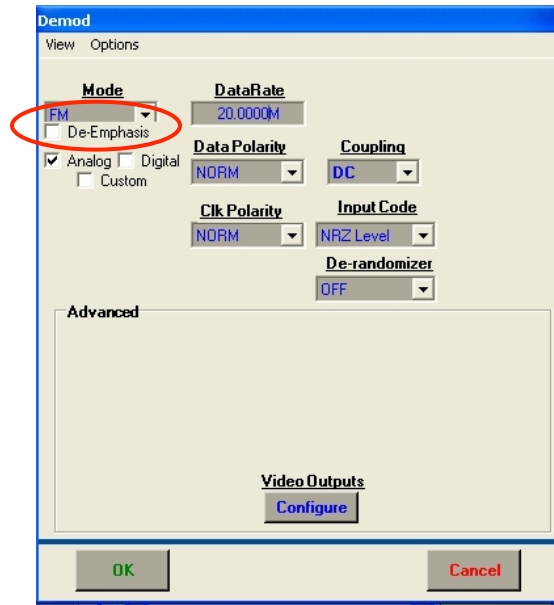



Figure 6-29
NTSC Video Demodulation Set-Up

6.3.2.2 PM/BPSK Demodulation

PM and BPSK demodulation set-ups are identical. BPSK is shown as the example in Figure 6-30. The range for PM and BPSK data rate selection is 2 kbps to 20 Mbps. All set-ups are as previously described in paragraphs 6.3.1.1.2 and 6.3.1.1.3.

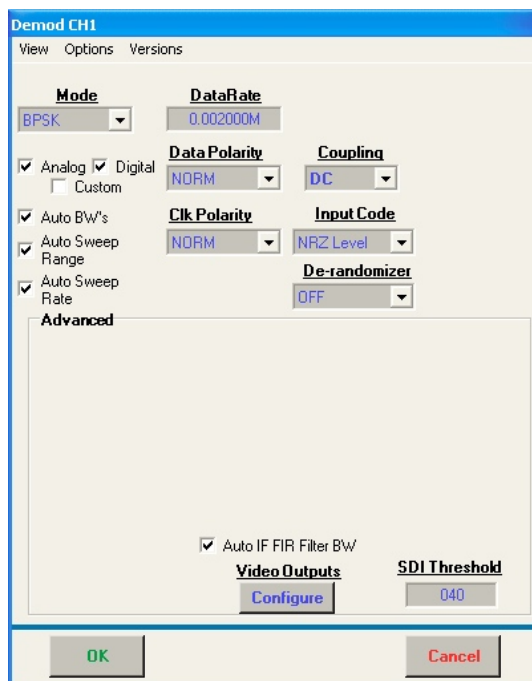

AUTO Settings

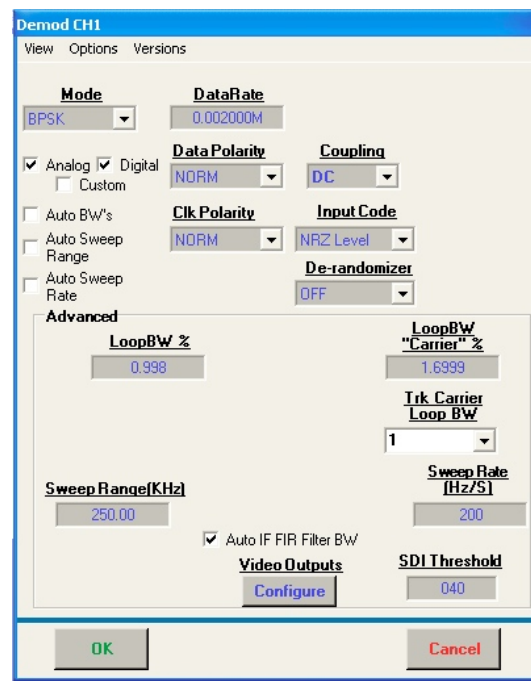

Advanced Settings

Figure 6-30
PM/BPSK Demodulation

6.3.2.3 QPSK Demodulation

QPSK demodulation set-up is illustrated in Figure 6-31. The range for QPSK data rate selection is 30 Kbps to 40 Mbps. All set-ups are as previously described in paragraphs 6.3.1.1.2 and 6.3.1.1.3. Importantly, **DataRate** input represents I + Q signals. **Accordingly, the user must remember to enter twice the QPSK data rate.**

QPSK outputs are I and Q data streams. Selecting “**Digital**” and “**Q/I Interleaved**” interleaves I and Q signals into a single digital data stream (Q/I Interleaving is only applicable in the Digital output mode).

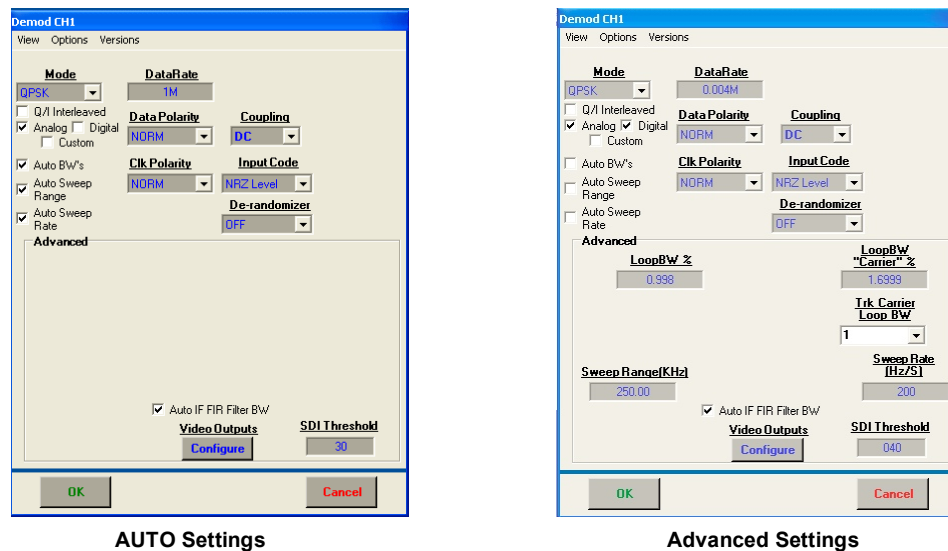


Figure 6-31
QPSK Demodulation

6.3.2.4 AQPSK Demodulation

AQPSK demodulation set-up is illustrated in Figure 6-32. The range for AQPSK data rate selection is 30 Kbps to 40 Mbps. AQPSK demodulation is unique in that I and Q data is “Asynchronous”, meaning they are at different data rates. **DataRate “A”** and **DataRate “B”** are provided as shown for entering these two different data rates. All set-ups are as previously described in paragraphs 6.3.1.1.2 and 6.3.1.1.3.


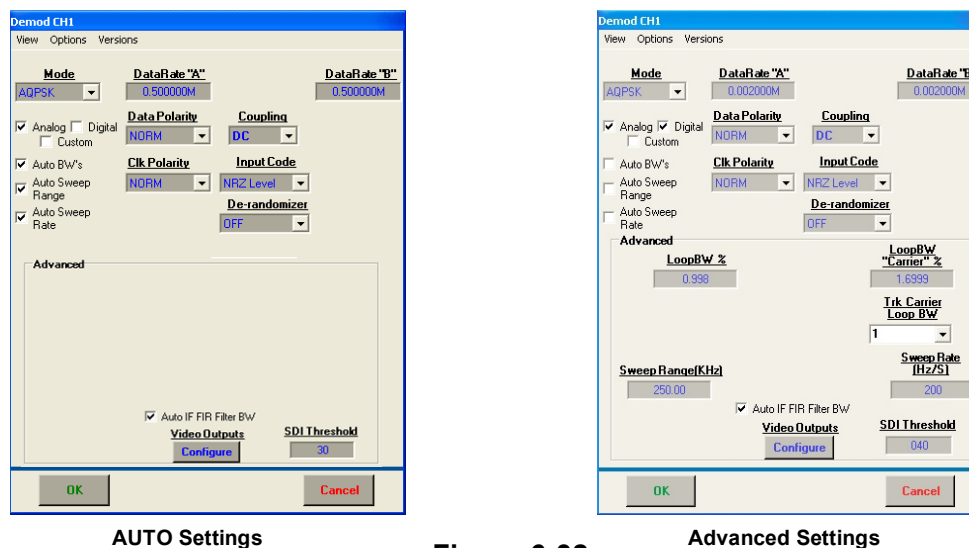


Figure 6-32
AQPSK Demodulation


6.3.2.5 UQPSK Demodulation

UQPSK demodulation set-up is illustrated in Figure 6-33. The range for UQPSK data rate selection is 30 Kbps to 40 Mbps. UQPSK demodulation is unique in that I and Q signal levels are at different power levels (i.e., “Unbalanced”). The demodulator automatically detects and processes these signals without any user intervention, and UQPSK is set-up identically to QPSK set-ups previously described in paragraph 6.3.2.3 and paragraphs 6.3.1.1.2 and 6.3.1.1.3.

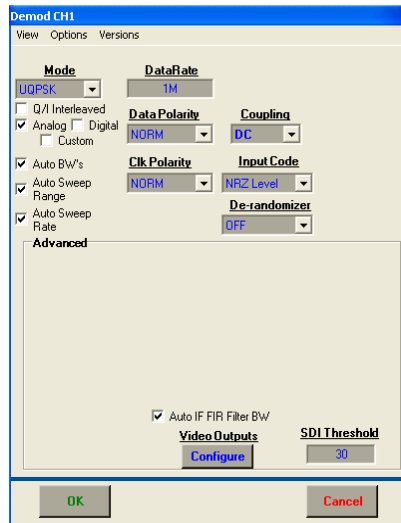

The screenshot shows the 'Demod CH1' dialog box with the 'Mode' set to 'UQPSK'. The 'DataRate' is '1M'. Under 'Data Polarity', 'NRZ Level' is 'NORM' and 'Coupling' is 'DC'. Under 'Clk Polarity', 'NRZ Level' is 'NORM'. Under 'Input Code', 'NRZ Level' is 'NORM'. Under 'De-randomizer', 'De-randomizer' is 'OFF'. The 'Advanced' section is collapsed. At the bottom, 'Auto IF FIR Filter BW' is checked, 'Video Outputs' is 'Configure', and 'SDI Threshold' is '30'.

AUTO Settings

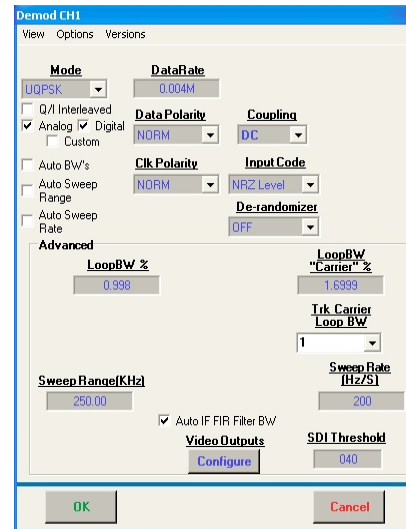


The screenshot shows the 'Demod CH1' dialog box with the 'Mode' set to 'UQPSK'. The 'DataRate' is '0.004M'. Under 'Data Polarity', 'NRZ Level' is 'NORM' and 'Coupling' is 'DC'. Under 'Clk Polarity', 'NRZ Level' is 'NORM'. Under 'Input Code', 'NRZ Level' is 'NORM'. Under 'De-randomizer', 'De-randomizer' is 'OFF'. The 'Advanced' section is expanded, showing 'LoopBW %' as '0.998', 'LoopBW "Carrier" %' as '1.6999', 'Trk Carrier Loop BW' as '1', 'Sweep Range(KHz)' as '250.00', 'Sweep Rate (Hz/S)' as '200', 'Auto IF FIR Filter BW' is checked, 'Video Outputs' is 'Configure', and 'SDI Threshold' is '040'.

Advanced Settings

Figure 6-33
UQPSK Demodulation


6.3.2.6 AUQPSK Demodulation

AUQPSK demodulation set-up is illustrated in Figure 6-34. The range for AUQPSK data rate selection is 30 Kbps to 40 Mbps. AUQPSK is both “Asynchronous” and “Unbalanced”, and must be set up identically to the AQPSK set-ups previously described in paragraph 6.3.2.4 and paragraphs 6.3.1.1.2 and 6.3.1.1.3.

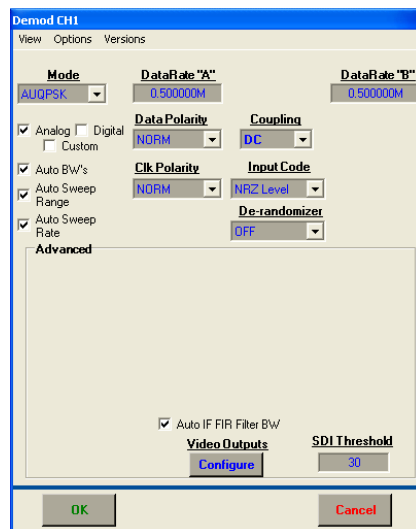

The screenshot shows the 'Demod CH1' dialog box with the 'Mode' set to 'AUQPSK'. The 'DataRate "A"' is '0.500000M' and 'DataRate "B"' is '0.500000M'. Under 'Data Polarity', 'NRZ Level' is 'NORM' and 'Coupling' is 'DC'. Under 'Clk Polarity', 'NRZ Level' is 'NORM'. Under 'Input Code', 'NRZ Level' is 'NORM'. Under 'De-randomizer', 'De-randomizer' is 'OFF'. The 'Advanced' section is collapsed. At the bottom, 'Auto IF FIR Filter BW' is checked, 'Video Outputs' is 'Configure', and 'SDI Threshold' is '30'.

AUTO Settings

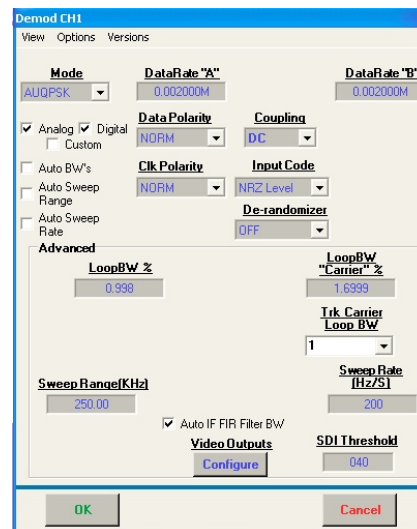

The screenshot shows the 'Demod CH1' dialog box with the 'Mode' set to 'AUQPSK'. The 'DataRate "A"' is '0.002000M' and 'DataRate "B"' is '0.002000M'. Under 'Data Polarity', 'NRZ Level' is 'NORM' and 'Coupling' is 'DC'. Under 'Clk Polarity', 'NRZ Level' is 'NORM'. Under 'Input Code', 'NRZ Level' is 'NORM'. Under 'De-randomizer', 'De-randomizer' is 'OFF'. The 'Advanced' section is expanded, showing 'LoopBW %' as '0.998', 'LoopBW "Carrier" %' as '1.6999', 'Trk Carrier Loop BW' as '1', 'Sweep Range(KHz)' as '250.00', 'Sweep Rate (Hz/S)' as '200', 'Auto IF FIR Filter BW' is checked, 'Video Outputs' is 'Configure', and 'SDI Threshold' is '040'.

Advanced Settings

Figure 6-34
AUQPSK Demodulation

6.3.2.7 Tier 0 Trellis FM Demodulation

Tier 0 Trellis FM demodulation set-up is illustrated in Figure 6-35. The range for Trellis FM data rate selection is 20 Kbps to 23 Mbps. A unique feature of the Trellis FM demodulator is **Mod Index**, **Auto Index** and **Freeze Mod Index**. The **Auto Index** mode allows the Trellis demodulator algorithm to adjust automatically to match the detected deviation of the incoming signal. Selecting **Freeze Mod Index** sets the Trellis algorithm for the currently detected deviation (or the **Mod Index** deviation entered by the user) and will no longer allow the deviation to change with the incoming signal. Tier 0 Trellis FM also provides for a 2 to 3 dB Eb/No improvement in the **Digital Output** mode.

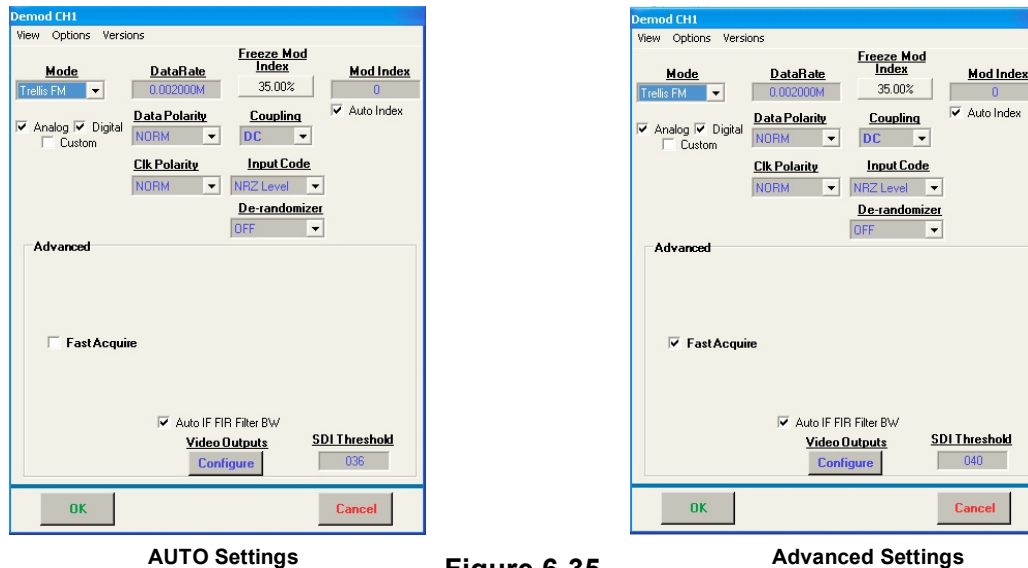


Figure 6-35
Tier 0 Trellis FM Demodulation

6.3.2.8 Tier I SOQPSK-TG Demodulation

Tier I SOQPSK-TG demodulation set-up is illustrated in Figure 6-36. The range for SOQPSK-TG data rate selection is 20 Kbps to 46 Mbps. All set-ups are as described in paragraphs 6.3.1.1.2 and 6.3.1.1.3.

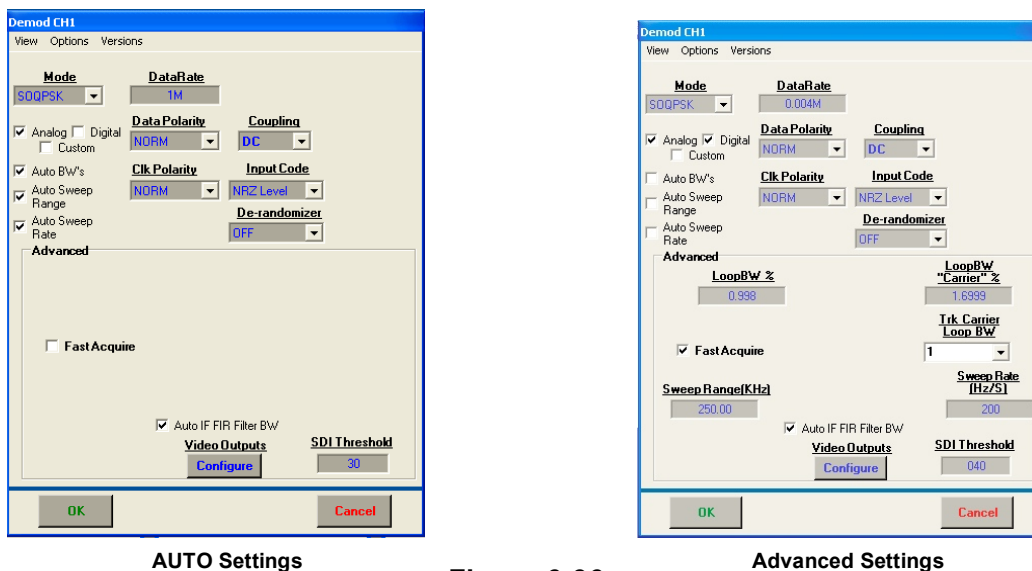


Figure 6-36
Tier I SOQPSK-TG Demodulation

6.3.2.9 Tier II Multi-h CPM Demodulation

Tier II Multi-h CPM demodulation set-up is illustrated in Figure 6-37. The range for Multi-h CPM data rate selection is 20 Kbps to 32 Mbps. All set-ups are as described in paragraphs 6.3.1.1.2 and 6.3.1.1.3.

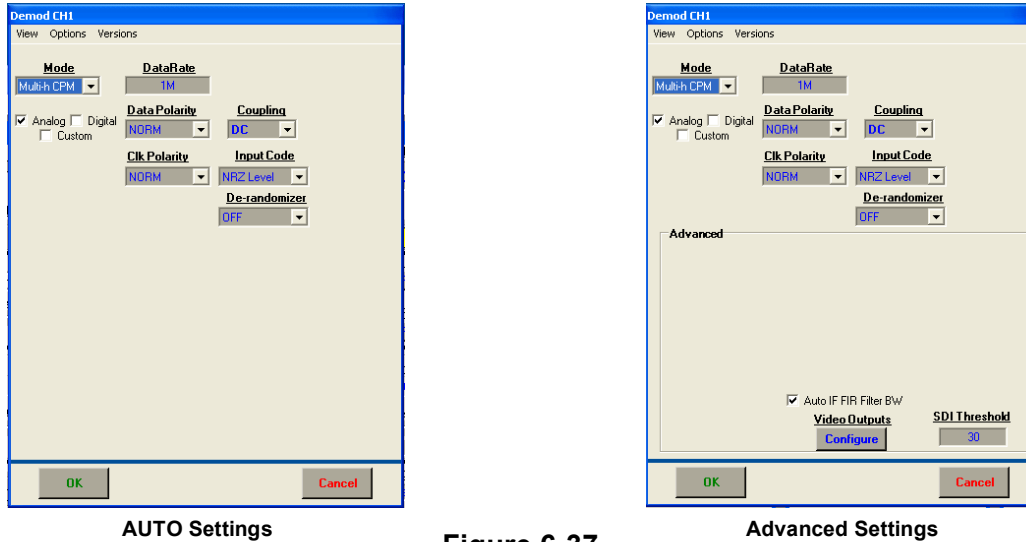


Figure 6-37
Tier II Multi-h CPM Demodulation

6.3.2.10 PM/PSK Sub-Carrier Demodulation

PM/PSK Sub-Carrier demodulation set-up is illustrated in Figure 6-38. The **Data Rate** range for the PM carrier signal is 10 kbps to 5 Mbps. The data rate range for the BPSK sub-carrier signal (**Sub Carrier**) is 1 kbps to 2 Mbps. The **Loop Bandwidth** values in the **Advanced** mode pertain to the PM Carrier signal. All set-ups are as previously described in paragraphs 6.3.1.1.2 and 6.3.1.1.3.



Figure 6-38
PM/PSK Sub-Carrier Demodulation

6.4 AM and AGC Control Sub-Panel

AM settings (**Normal** and **Inverted** for each installed receiver channel) are provided via the Tool Bar and pull-down menu as shown in Figure 6-39. The user selects **Receiver Settings**, **AM Polarity**, the channel(s) of interest and then clicks on **Normal** or **Inverted** as shown.

The **AGC Settings** control sub-panel allows the user to select the **POLARITY** and **SLOPE** of the AGC A and B outputs. Each AGC output is scalable (+/-10, 20 and 50 dB/Volt). The user selects **Receiver Settings**, **AGC Slope/Polarity** and the **AGC Settings** control panel is displayed as shown.

AGC A and **AGC B** **SLOPE** and **POLARITY** is then selected by clicking on each applicable window as shown. Actual AGC voltage output levels are displayed on the receiver control panel as shown.

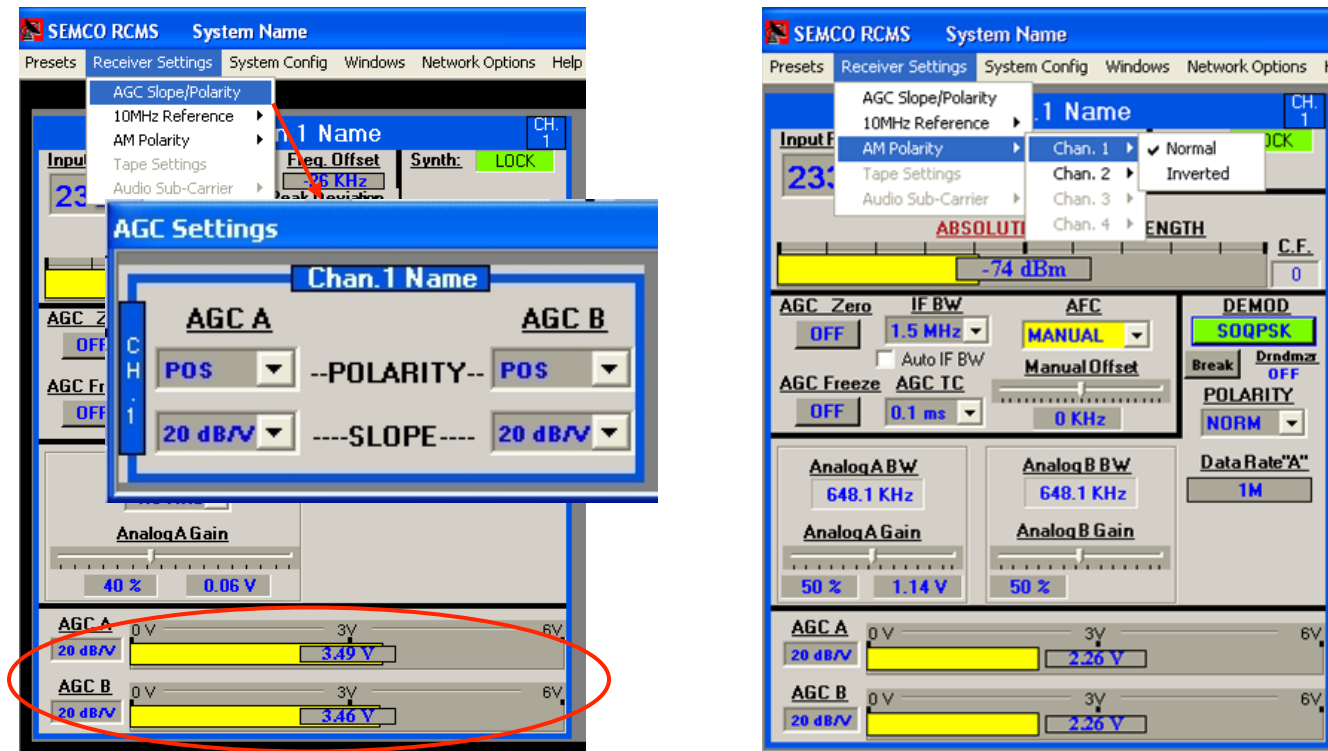


Figure 6-39
AM and AGC Controls and Settings

6.5 RCMS GUI Toolbar Functions and Features

The RCMS GUI Toolbars allow the user to select a variety of functions and features as pull-down menus or displays. Several of these Toolbar functions and features have already been addressed in previous sections and paragraphs. These Toolbar headings are depicted in Figure 6-40 and summarized on subsequent pages.

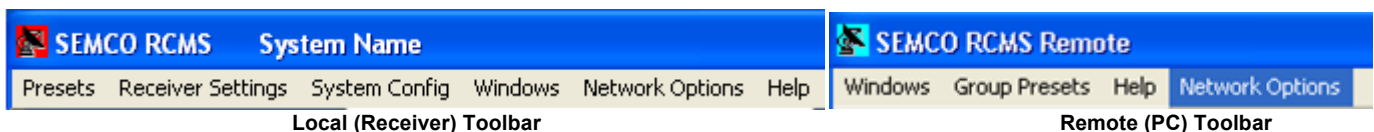


Figure 6-40
Local and Remote Toolbar Selections



Presets – these selections are Load and Save. **Load** provides for the selection of “saved” mission presets from the mission preset “Save Directory”. **Save** allows the user to name and save specific receiver settings to the mission preset “save Directory”.

Receiver Settings – these selections are AGC Slope/Polarity, 10 MHz Reference and AM Polarity (Tape Settings and Audio Sub-Carrier settings are applicable to SEMCO rack-mount receiver systems). **AGC Slope/Polarity** provides the ability to select all AGC voltage slope and polarity outputs. **10 MHz Reference** provides the ability to select either an internal 10 MHz reference or an external 10 MHz reference. **AM Polarity** provides the ability to select either a Normal or Inverted AM output.

System Config – these selections are Channel Slaving, Naming Options, One-Touch Presets Configuration, Calibration, and Change Card Address. **Channel Slaving** provides the ability to slave multiple installed receiver channel settings to each other to facilitate system set-up. **Naming Options** allows the user to name each individual installed receiver channel and facilitates multiple receiver operation in both local and networked environments. **One-Touch Presets Configuration** provides the ability to load selected mission presets from the “save directory” to the One-touch Mission Preset display for One-Touch access. **Calibration** provides access to the password-protected on-screen system calibration routines. **Change Card Address** provides the ability to change CCA firmware addresses via this serial port programming feature.

Windows – these selections are Status View, System Configuration and One Touch Presets. (AGC Data Logger, Spectral Sweep, Eye Pattern/Constellation Display and Combiner Options are applicable to SEMCO rack-mount receiver systems).

- A. **Status View** provides a window of key receiver parameters under local control (out of network).
- B. **System Configuration** identifies each installed CCA by P/N, S/N and firmware revision level.
- C. **One Touch Presets** accesses the window that contains all mission presets selected from the “save presets” file.

Network Options – Local Network options include “Current Connections”, “Event Log”, “Connection Settings” and “Remote Lockout”. These features are illustrated and described in detail in paragraph 5.2.1 of this manual.

Help – The Local Help feature provides information as to the installed revision level of the RCMS Local Application software.

Remote (PC) Tool Bar (Figure 6-40) selections are illustrated and described in detail in paragraph 5.2.2 of this manual and include:

Windows - The Remote Windows feature provides the ability to arrange the Remote Status displays (horizontal, vertical and/or cascaded) in support of the display size desired at the Remote PC.

Group Presets – provides the ability to retrieve saved mission presets from individual (Local) receivers and apply these mission presets to a group of (Local) receivers on the network.

Help – The Remote Help feature provides information as to the installed revision level of the RCMS Remote Application software.

Network Options – these selections include Current “Receiver List”, Load New “Receiver List”, Issue Connection Requests to All, Close All Connections, Event Log, Reconnect Timer and Set Default “Receiver Lists”. These features are described in detail in paragraph 5.2.2 of this User’s Manual.

6.5.1 Presets

Figure 6-41 depicts the pull-down menu that is available when “Presets” is selected. The Receiver Channel presets are applicable to the Telemetry Receiver Card Set. All other preset selections are applicable to SEMCO rack-mount receiver systems. The panel on the left depicts the “Save Presets” selection. The panel on the right illustrates the “Load Presets” selection.

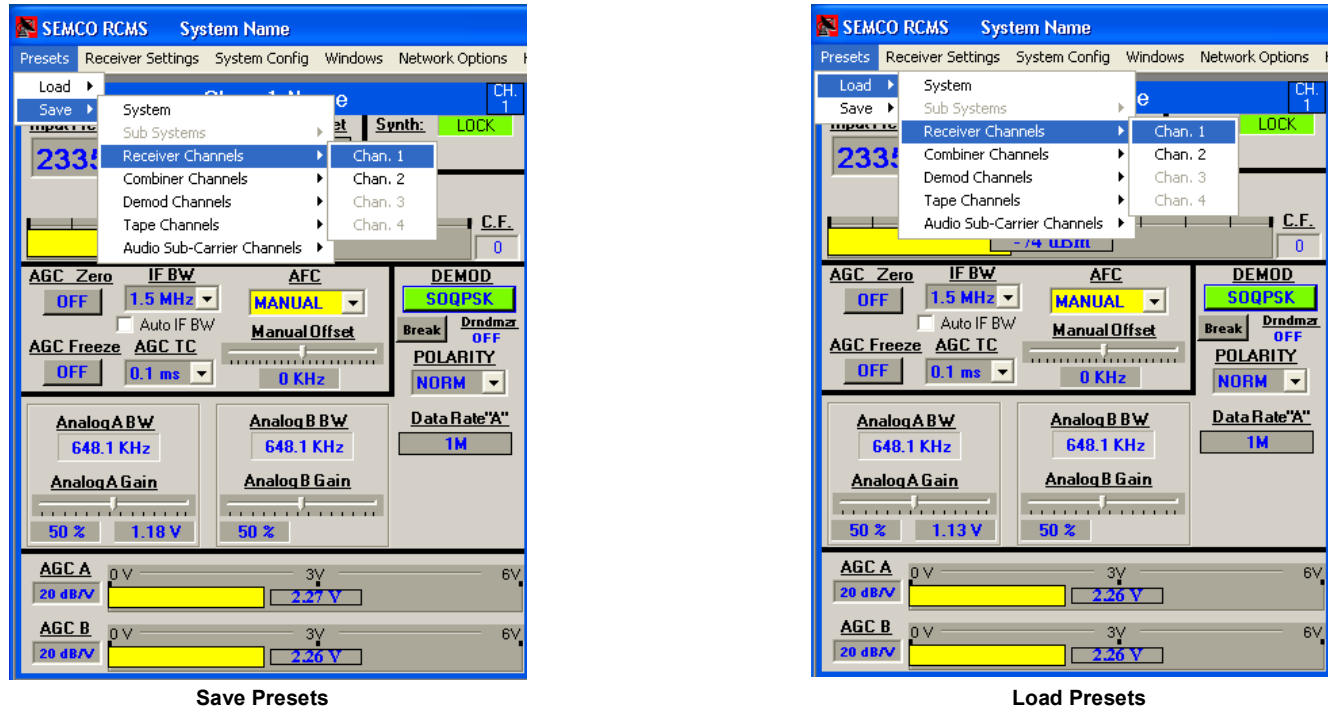


Figure 6-41
Presets Drop-Down Menu

6.5.1.1 Saving a Preset

Referring to Figure 6-41, clicking on “Presets”, “Save” and “Receiver Channels” saves and names receiver setups as follows:

Clicking on the above selections takes the user to “Desktop” in the system hard drive. Figure 6-42 depicts the display that appears. The user then:

Step 1 - “Names” the preset desired (Figure 6-42 example is “Mission Sample #1”). and the user is asked if he/she wants to “create this file”.

Step 2 - Selecting “Yes” then enters this “named file into the “Desktop” directory as a .chs file, displays the named file on the “desktop” as an icon and all applicable receiver settings are now under this named (i.e., “Saved”) file.

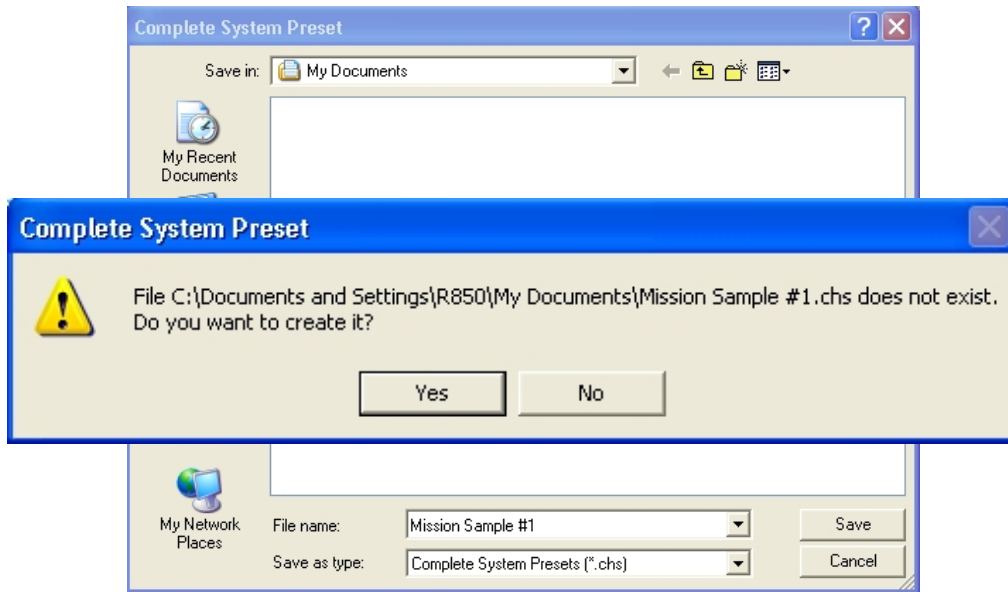


Figure 6-42
Save Presets Directory

6.5.1.2 Loading a Preset

Referring again to Figure 6-41, clicking on “**Presets**” and “**Load**” provides the ability to load receiver presets. Clicking on the desired preset takes the user to the “Desktop” directory (Figure 6-43). The user then selects and “Opens” the preset desired (Figure 6-43 example is “Mission Sample #1.chs”) and all settings saved in the selected file are enabled on the system.

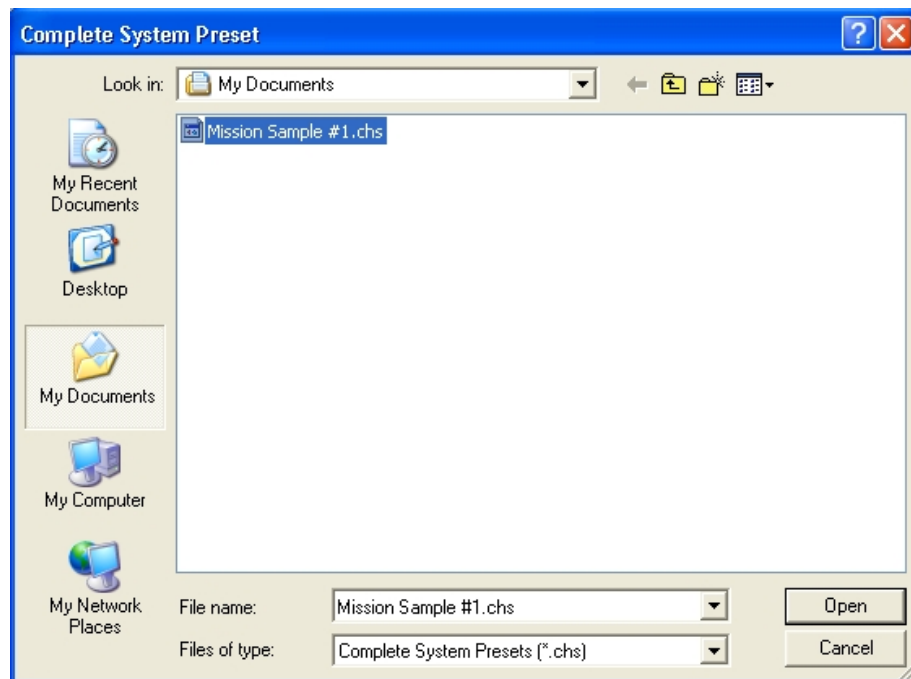



Figure 6-43
Load Presets Directory

6.5.1.3 One-Touch Mission Presets

The “One Touch Mission Presets” feature provides for displaying and enabling “Saved” Presets on the RCMS display with one click of the mouse. The user clicks on “**System Config**” as shown in Figure 6-44, and then uses the “**One Touch Preset Configuration**” to bring desired Mission Presets to the GUI Control Panel as follows:

Step 1 – Click on  to access the “Load Presets” Directory (Figure 6-44).

Step 2 – Select and open the desired Mission Presets to be accessible on the GUI Control Panel (see Figure 6-43). In the Figure 6-44 example, “**Mission Sample #1**” has been loaded into “**Preset #1**”. Clicking on “**Reset**” removes the loaded preset from the One-Touch Preset Configuration Directory.

Step 3 - Once all of the desired presets are loaded into the “**One-Touch Presets Configuration**” Directory (Figure 6-44), select “**Windows**” and then “**One Touch Presets**” as shown in Figure 6-45.

Figure 6-45 depicts the One-Touch Presets Windows Display. This window is displayed on the front panel GUI. The user can then enable any preset by clicking on the preset desired. “**Mission Sample #1**” is depicted in the Figure 6-45 example.

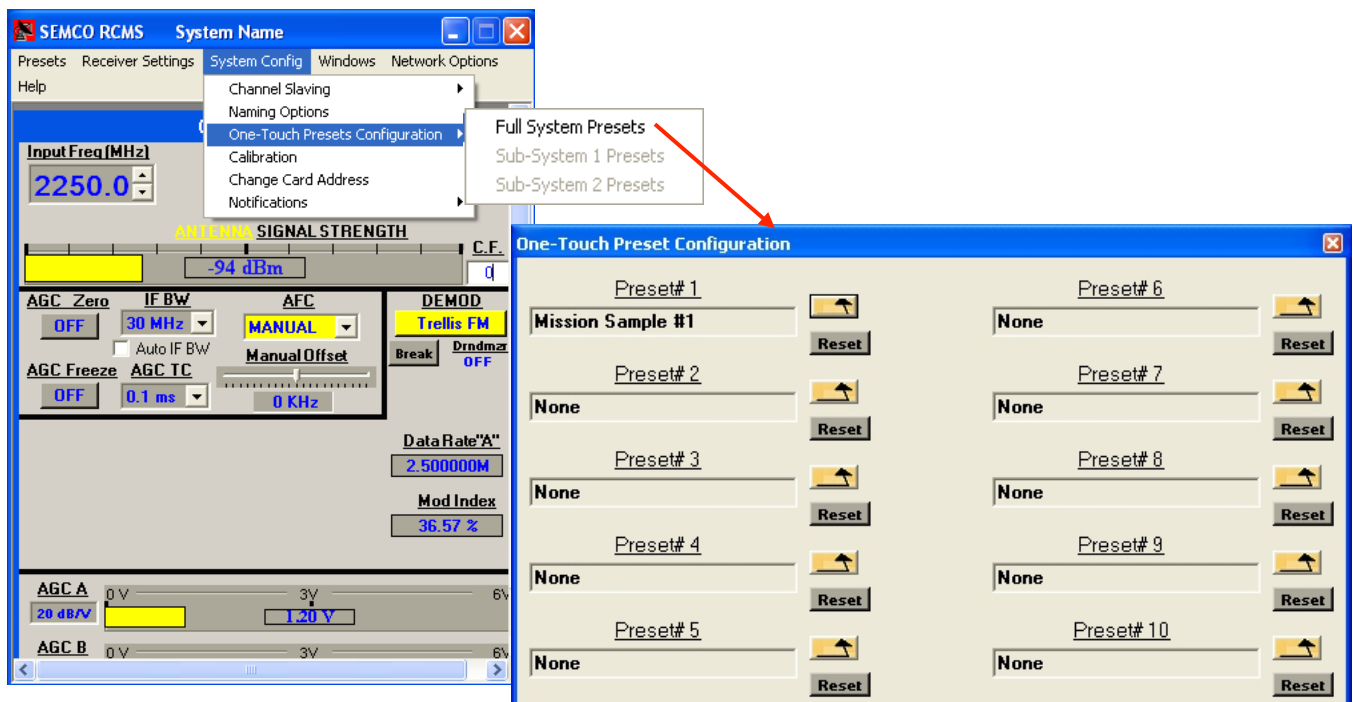


Figure 6-44
One-Touch Presets Configuration Selection

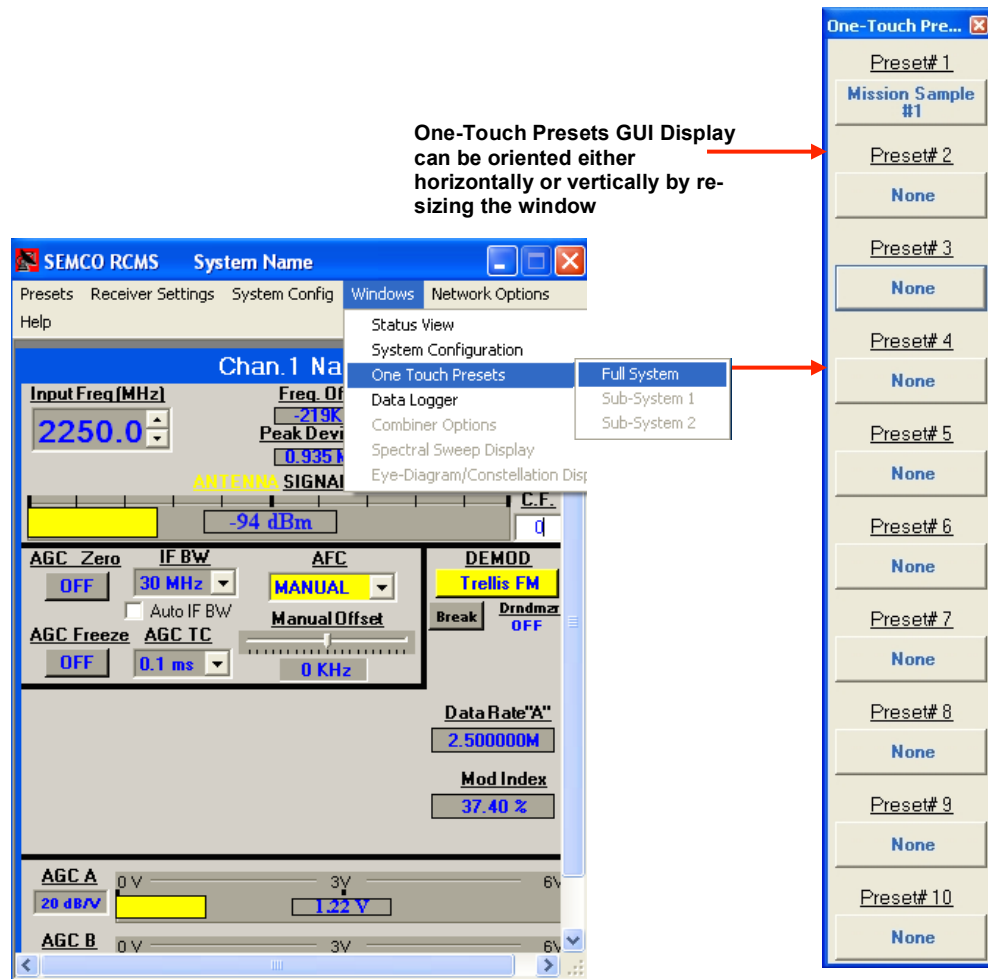


Figure 6-45
One-Touch Presets Windows Display Selection

6.5.2 Channel Slaving

Figure 6-46 depicts the tool bar selection for the “Channel Slaving” feature. Channel Slaving allows the user to “Slave” channel settings to an individual control panel. For example, if the user selects “Slave Channel 2 to Channel 1”, then all Channel 1 settings will also be automatically applied to a Channel 2 receiver if installed. As illustrated by Figure 6-46, the user has the ability to slave multiple channels to one selected channel settings.

First clicking on “**System Config**” and then on “**Channel Slaving**” enables channel Slaving. The user then selects “**Receiver Channels**” and clicks on the desired “channel slaving” combination (i.e., CH2 slaved to CH1, etc.). “Combiner” selections are applicable to SEMCO’s rack-mount receiver systems.

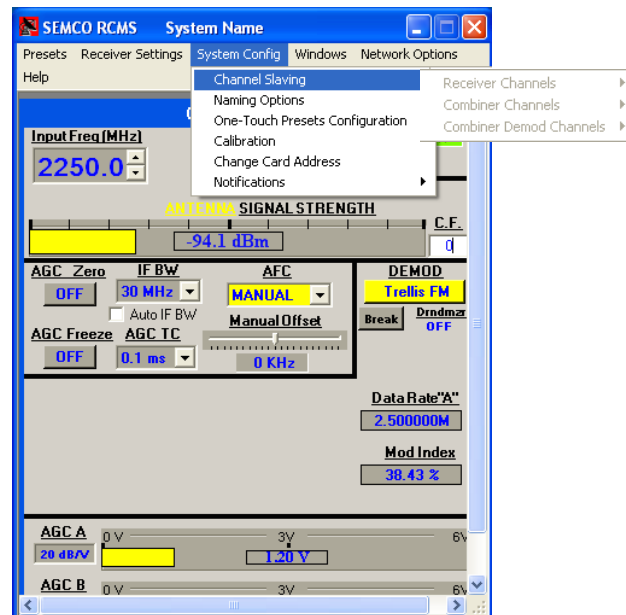


Figure 6-46
Channel Slaving Selection

6.5.3 Naming Options

The “Naming Options” feature provides the ability to “name” the receiver control panel. Once entered, this “name” appears in the blue header of the software control panel, and remains there until changed by the user. Referring to Figure 6-47, the “Naming Options” is selected by first clicking on “**System Config**” and then on “**Naming Options**”. The user then enters the desired “name” in each of the text boxes that are provided. (In the case of the Telemetry Receiver Card Set, the first box listed as “**System Name**” is the only applicable naming option). “**Save + Exit**” saves the name and displays it on the RCMS GUI.

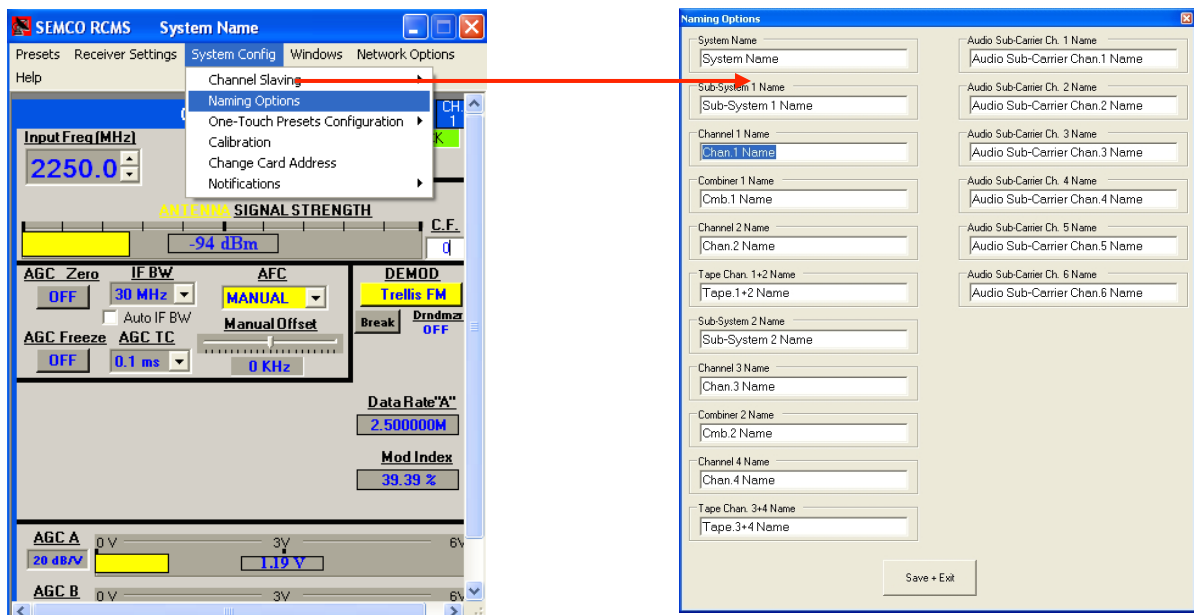


Figure 6-47
Naming Options Feature

6.5.4 System Configuration Window

The “**System Configuration**” feature provides the user with the ability to quickly determine what CCAs are installed in the system, what firmware revision level is installed in each CCA, and whether or not software communications has been established with each CCA.

Selecting “**Windows**” and then “**System Configuration**” on the software control panel Tool Bar provides a display that indicates what CCAs are installed in the system, what firmware revision level is installed in each CCA, and the Serial Number of each CCA. Polling each CCA upon start-up and extracting the displayed information accordingly creates the “System Configuration” window. This provides an indication of system software communication health as well as being a source for a status accounting of each system’s hardware and software configuration.

6.5.5 Serial Port Programming

The serial port programming feature provides the ability to address the CCAs from the GUI display. For example, an RF Tuner CCA addressed as a CH1 RF Tuner CCA can be installed and re-addressed as a CH2 RF Tuner CCA. This addressing capability via the RCMS GUI facilitates system maintenance and support in the field, while minimizing the need for additional pre-addressed CCA spares.

The user selects this feature by clicking on “**System Configuration**” in the Toolbar and then “**Change Card Address**”. The “**Reassign Card Address**” window then appears, and the user makes the required card address change as follows:

Step 1 - The user clicks on the “**Select Card to Change**” window and a pull-down menu appears with the list of CCA choices.

Step 2 - The user clicks on the “**Select New Address**” window and a pull-down menu appears with the list of choices.

Step 3 - The user completes CCA re-addressing by selecting the new address desired and then clicks on “**Accept**” (A **Warning**: will appear if a card at the selected address is already installed in the system.)

6.5.6 Status View Display

Figure 6-48 depicts the status view that is available on the RCMS GUI. Clicking on “**Windows**” and then “**Status View**” on the pull-down menu accesses the RCMS GUI Status Panel.

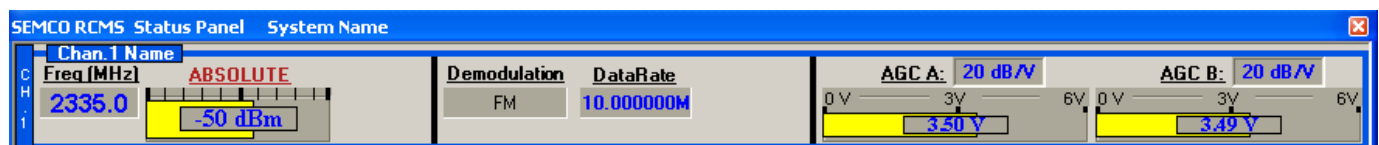


Figure 6-48
Status View Display

6.5.7 Help Feature

The Help feature on the Toolbar identifies the latest RCMS software revision level, and also provides an indexed access to this User’s Guide.